



INTEROFFICE MEMORANDUM

ROBI KRUYK

ONTVANGEN - 7 NOV. 1972

DATE: October 10, 1972

THE HAGUE


FROM: J. Duffy

DEPT: Small Systems

SUBJ: User functions and Commands in 8K Basic R/T

Before one tries to implement any functions or commands the following articles should be acquired.

1. Programming Languages 1972
2. Basic/RT User's Manual DEC-LB-U70B-D or the newer LAB8/e Manual, LAB8/e Software Systems User's Manual DEC-8E-ALUMA-A-D.
3. A Listing of Basic/RT DEC-8E-ABASA-A-LA.

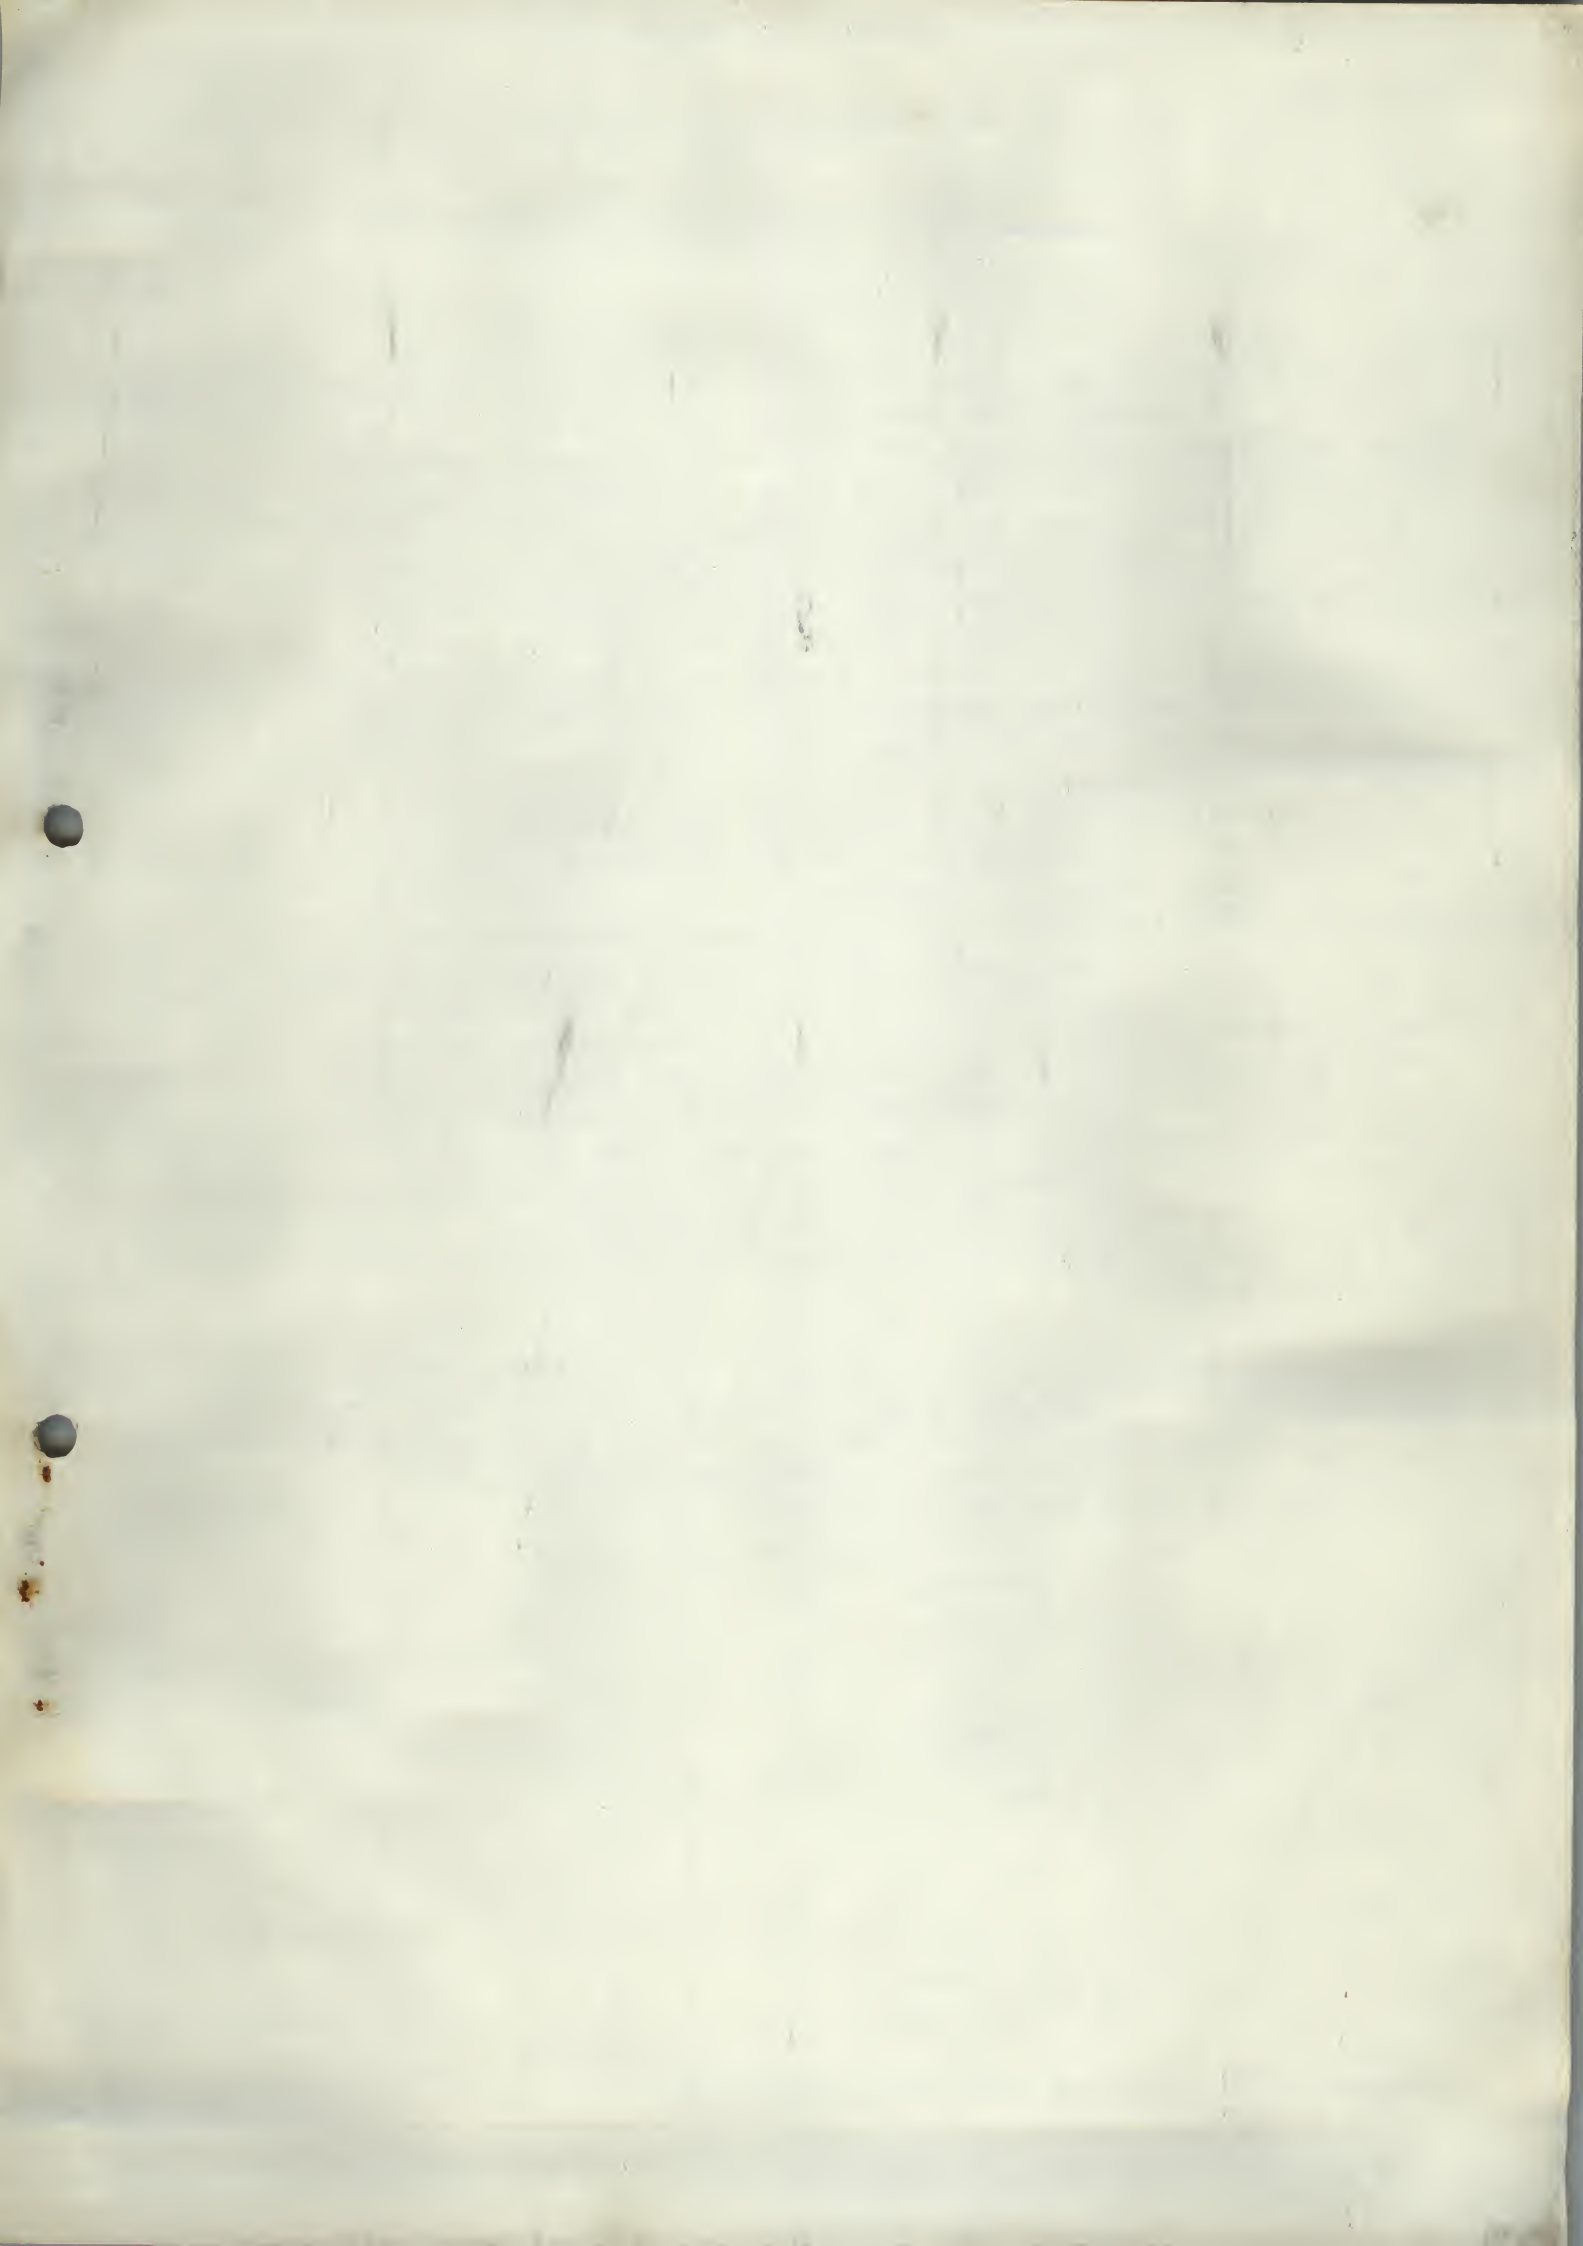

1. Writing user functions in field 0: There is no room in field 0 to write a user function. If it is desired to do so, a current function not being used can be deleted and replaced by the user function. For example, let the user function UUF square the value of the operand. The code for this example is on pp 12-46, Example 1 of Programming Languages 1972. If the function to be replaced is LOG which is at 6114 of field 0, the origin of the function in the example would be *6114 instead of *7700. The function name would remain at location 1156. If a CDF is issued, the data field must be reset to 1.
2. Writing user functions in field 1: The room available to write user functions is from 65 to 174 of field 1. If additional space is needed in field 1, the value at PLIMIT (location 2561) can be changed. For example, if 64 locations are needed PLIMIT can be set to 7100, then locations 7000 to 7077 can be used by the user. The next important thing is that the floating point package can not be used from field 1. Hence the example given in 1 above could not be done from field 1. However, the FAC can be changed or an FPP subroutine can be called from field 1. An example of calling the FIX routine is shown at 677 of field 1 by routine WUPFIX. If a CDF 0 is given, a CDF 10 must be given before returning to field 0.

To write a user function in field 1, put a 7747 at location 1156 of field 0. At Location 764 of field 1 put UUF. Then put the UUF subroutine in available core. For example, if the subroutine is to start at location 65 of field 1 the user function overlay code should be

```
FIELD 0
*1156
7747
```

```
FIELD 1
*764
UUF
*65
```

```
UUF, 0
      code
      JMP I UUF
```

Note when the UUF subroutine is entered the argument of the function is in the FAC.

EXAMPLE 1.

 $UUF(A) = A^2$

UUF function in field 0

FENTER=4435

FST=2000

FWD=200

FMP=6000

FEXIT=0000

FIELD 0

*1156

UUF

*6114

UUF, 0

FENTER

FST+FWD+X-.

FMP+FWD+X-.

FEXIT

JMP I UUF

/ENTER FPP

/Save N

/N*N

X,

0

0

0

\$

EXAMPLE 2. $UUF(A) = A^2$

UUF function in field 1

FIELD 0
*1156
7747'FIELD 1
*764
UUF
*65

UUF, 0

JMS UUF1	/interchange field 0 + 1 code
CDF CIF 0	
JMS I UFLDO	/call UUF in field 0
JMS UUF1	/reexchange code
CDF 10	
JMP I UUF	/exit from UUF

UUF1, 0


TAD UM12	/load number of words to exchange
DCA UUF2	
TAD UFLD1	/set field 1 and 0 addresses
DCA UUF3	
TAD UFLD0	
DCA UUF4	

UUF6, CDF 10

TAD I UUF3	/exchange values
DCA UUF5	
CDF 0,	
TAD I UUF4	
CDF 10	
DCA I UUF3	
CDF 0	
TAD UUF5	
DCA I UUF4	

ISZ UUF3	/get next word
ISZ UUF4	
ISZ UUF2	
JMP UUF6	


JMP I UUF1

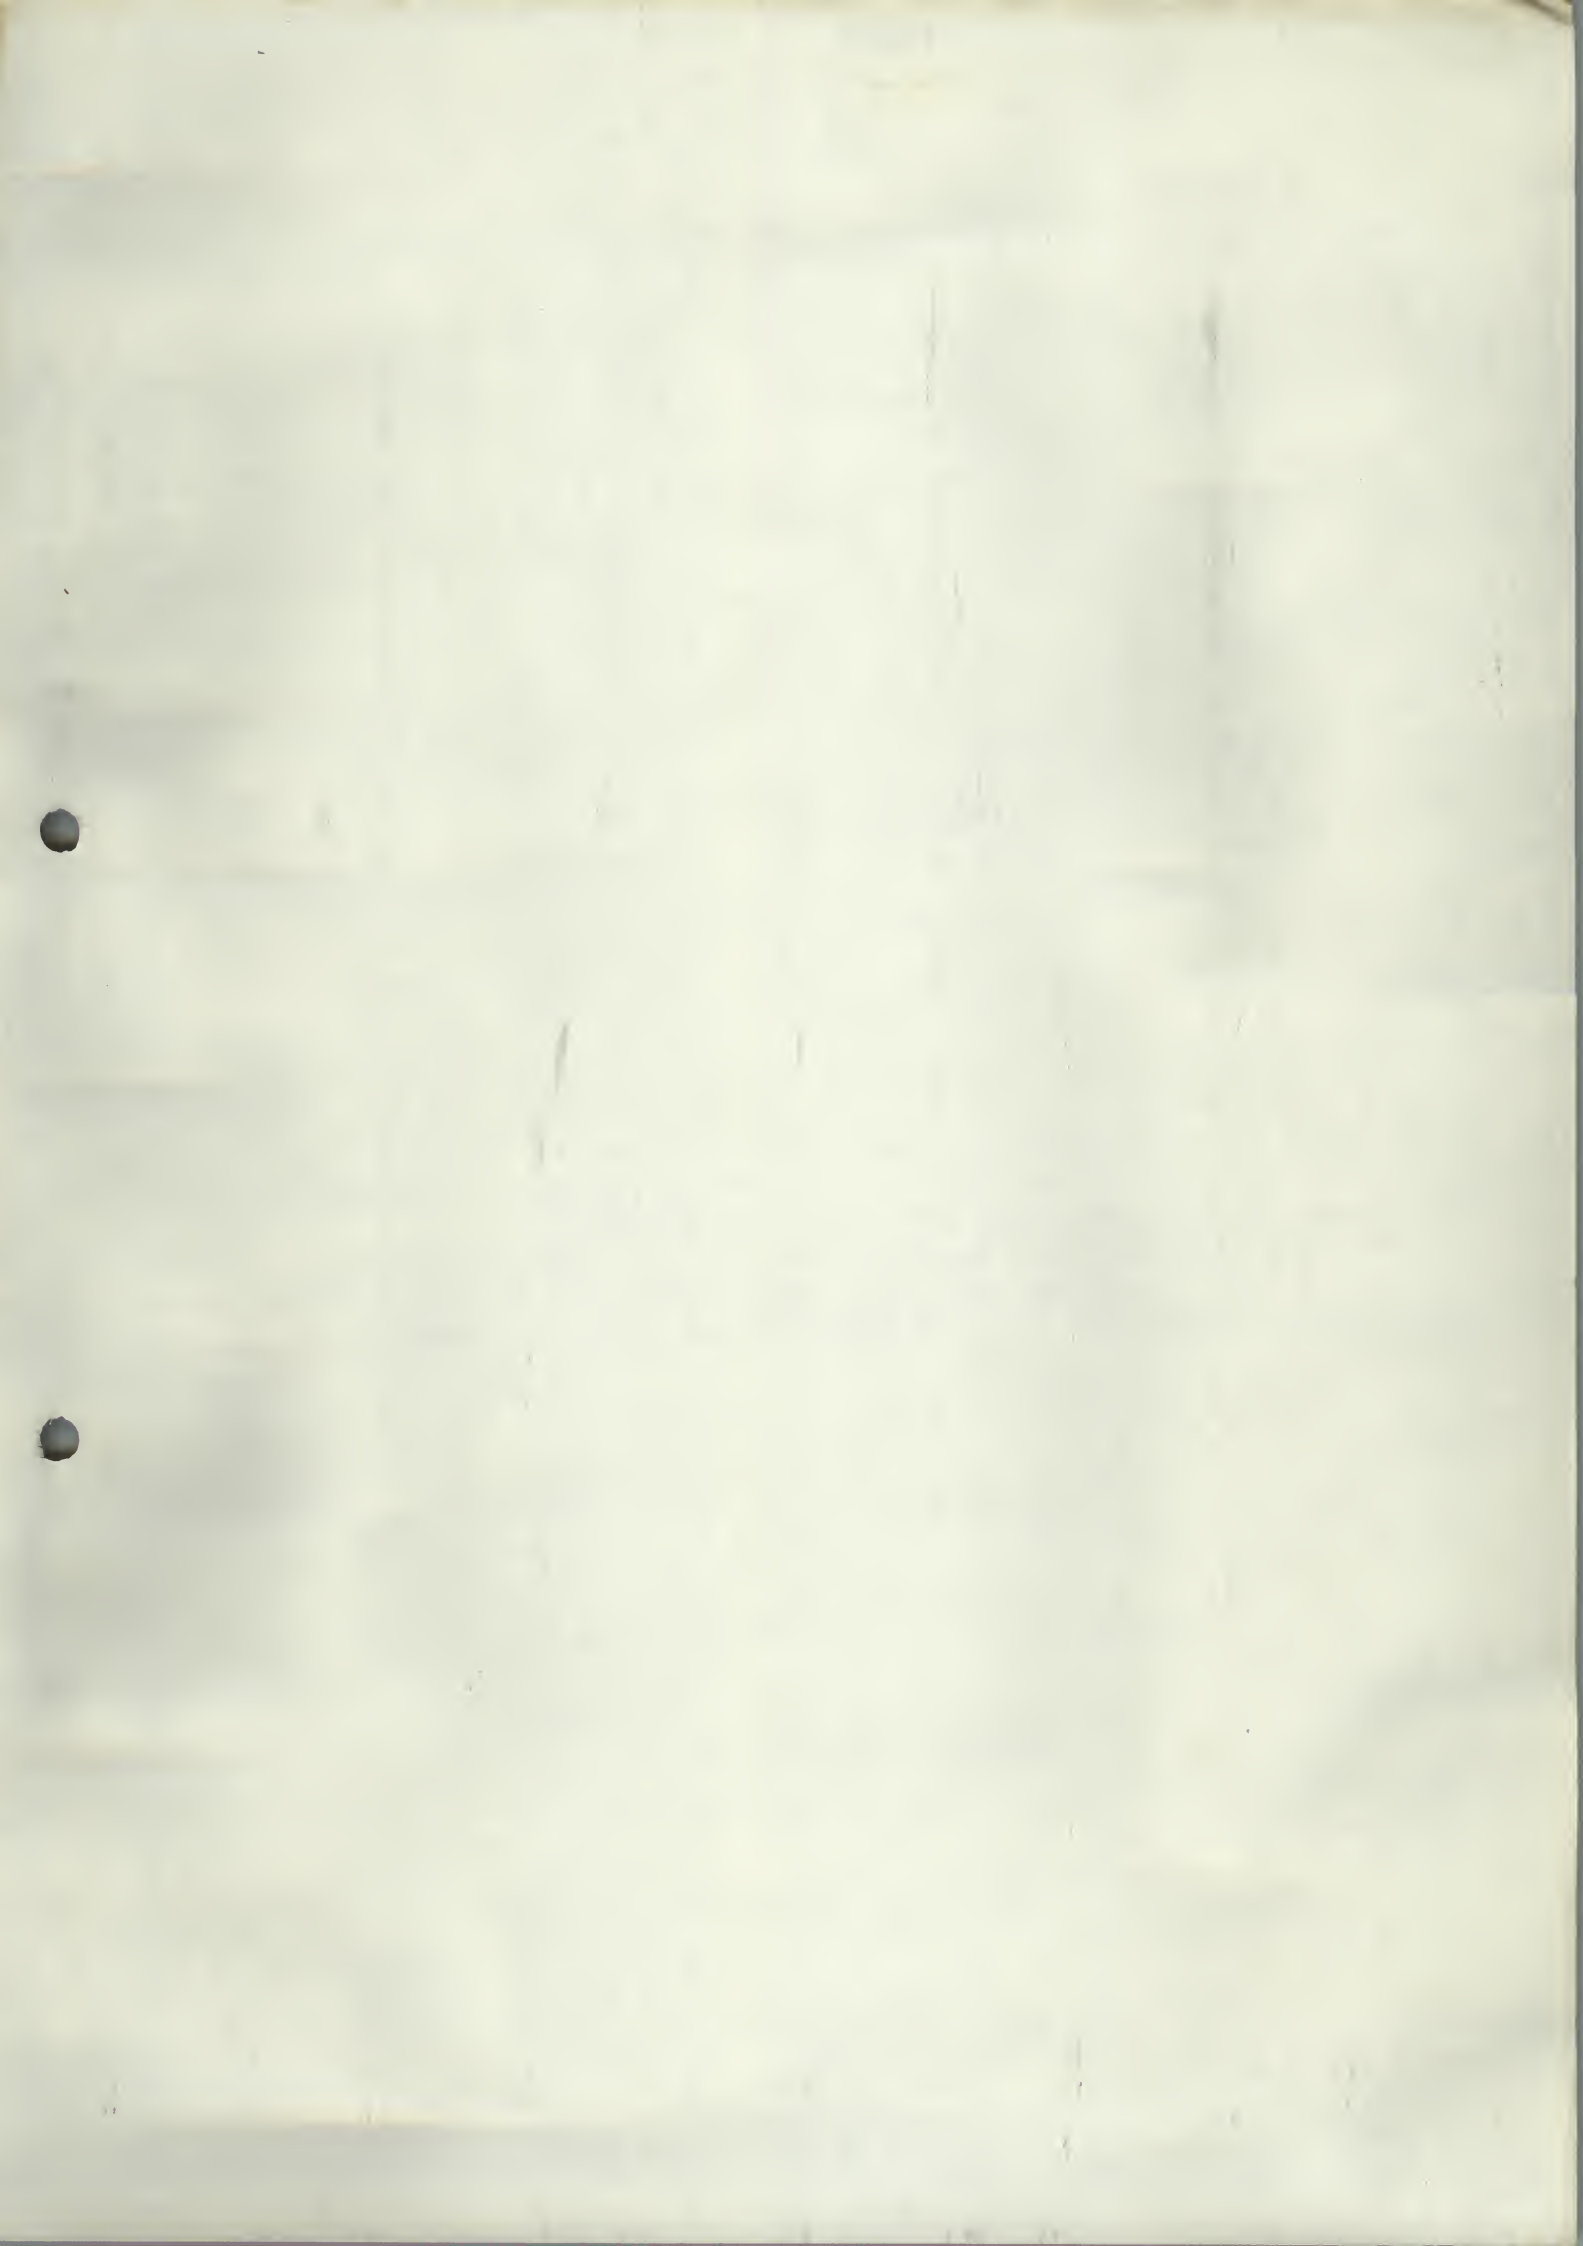


```
UUF2,  Ø
UUF3,  Ø
UUF4,  Ø
UUF5,  Ø
UM12, -12
UFLDØ, 6114
UFLD1, UUFX

UUFX,  Ø
      4435      /FENTER
      2205      /FST+FWD+X-.
      6204      /FMP+FWD+X-.
      0000      /FEXIT
CDF CIF 1Ø
5714      /JMP I UUF
Ø         /X
Ø
Ø
```

In this example the user function was moved to field Ø, so that it could use the floating point package. The only restriction is that the UUF can't be called at the same time the LOG function is called. The example isn't a very good programming technique, but is meant only to demonstrate the calling sequence of a UUF in field 1.)

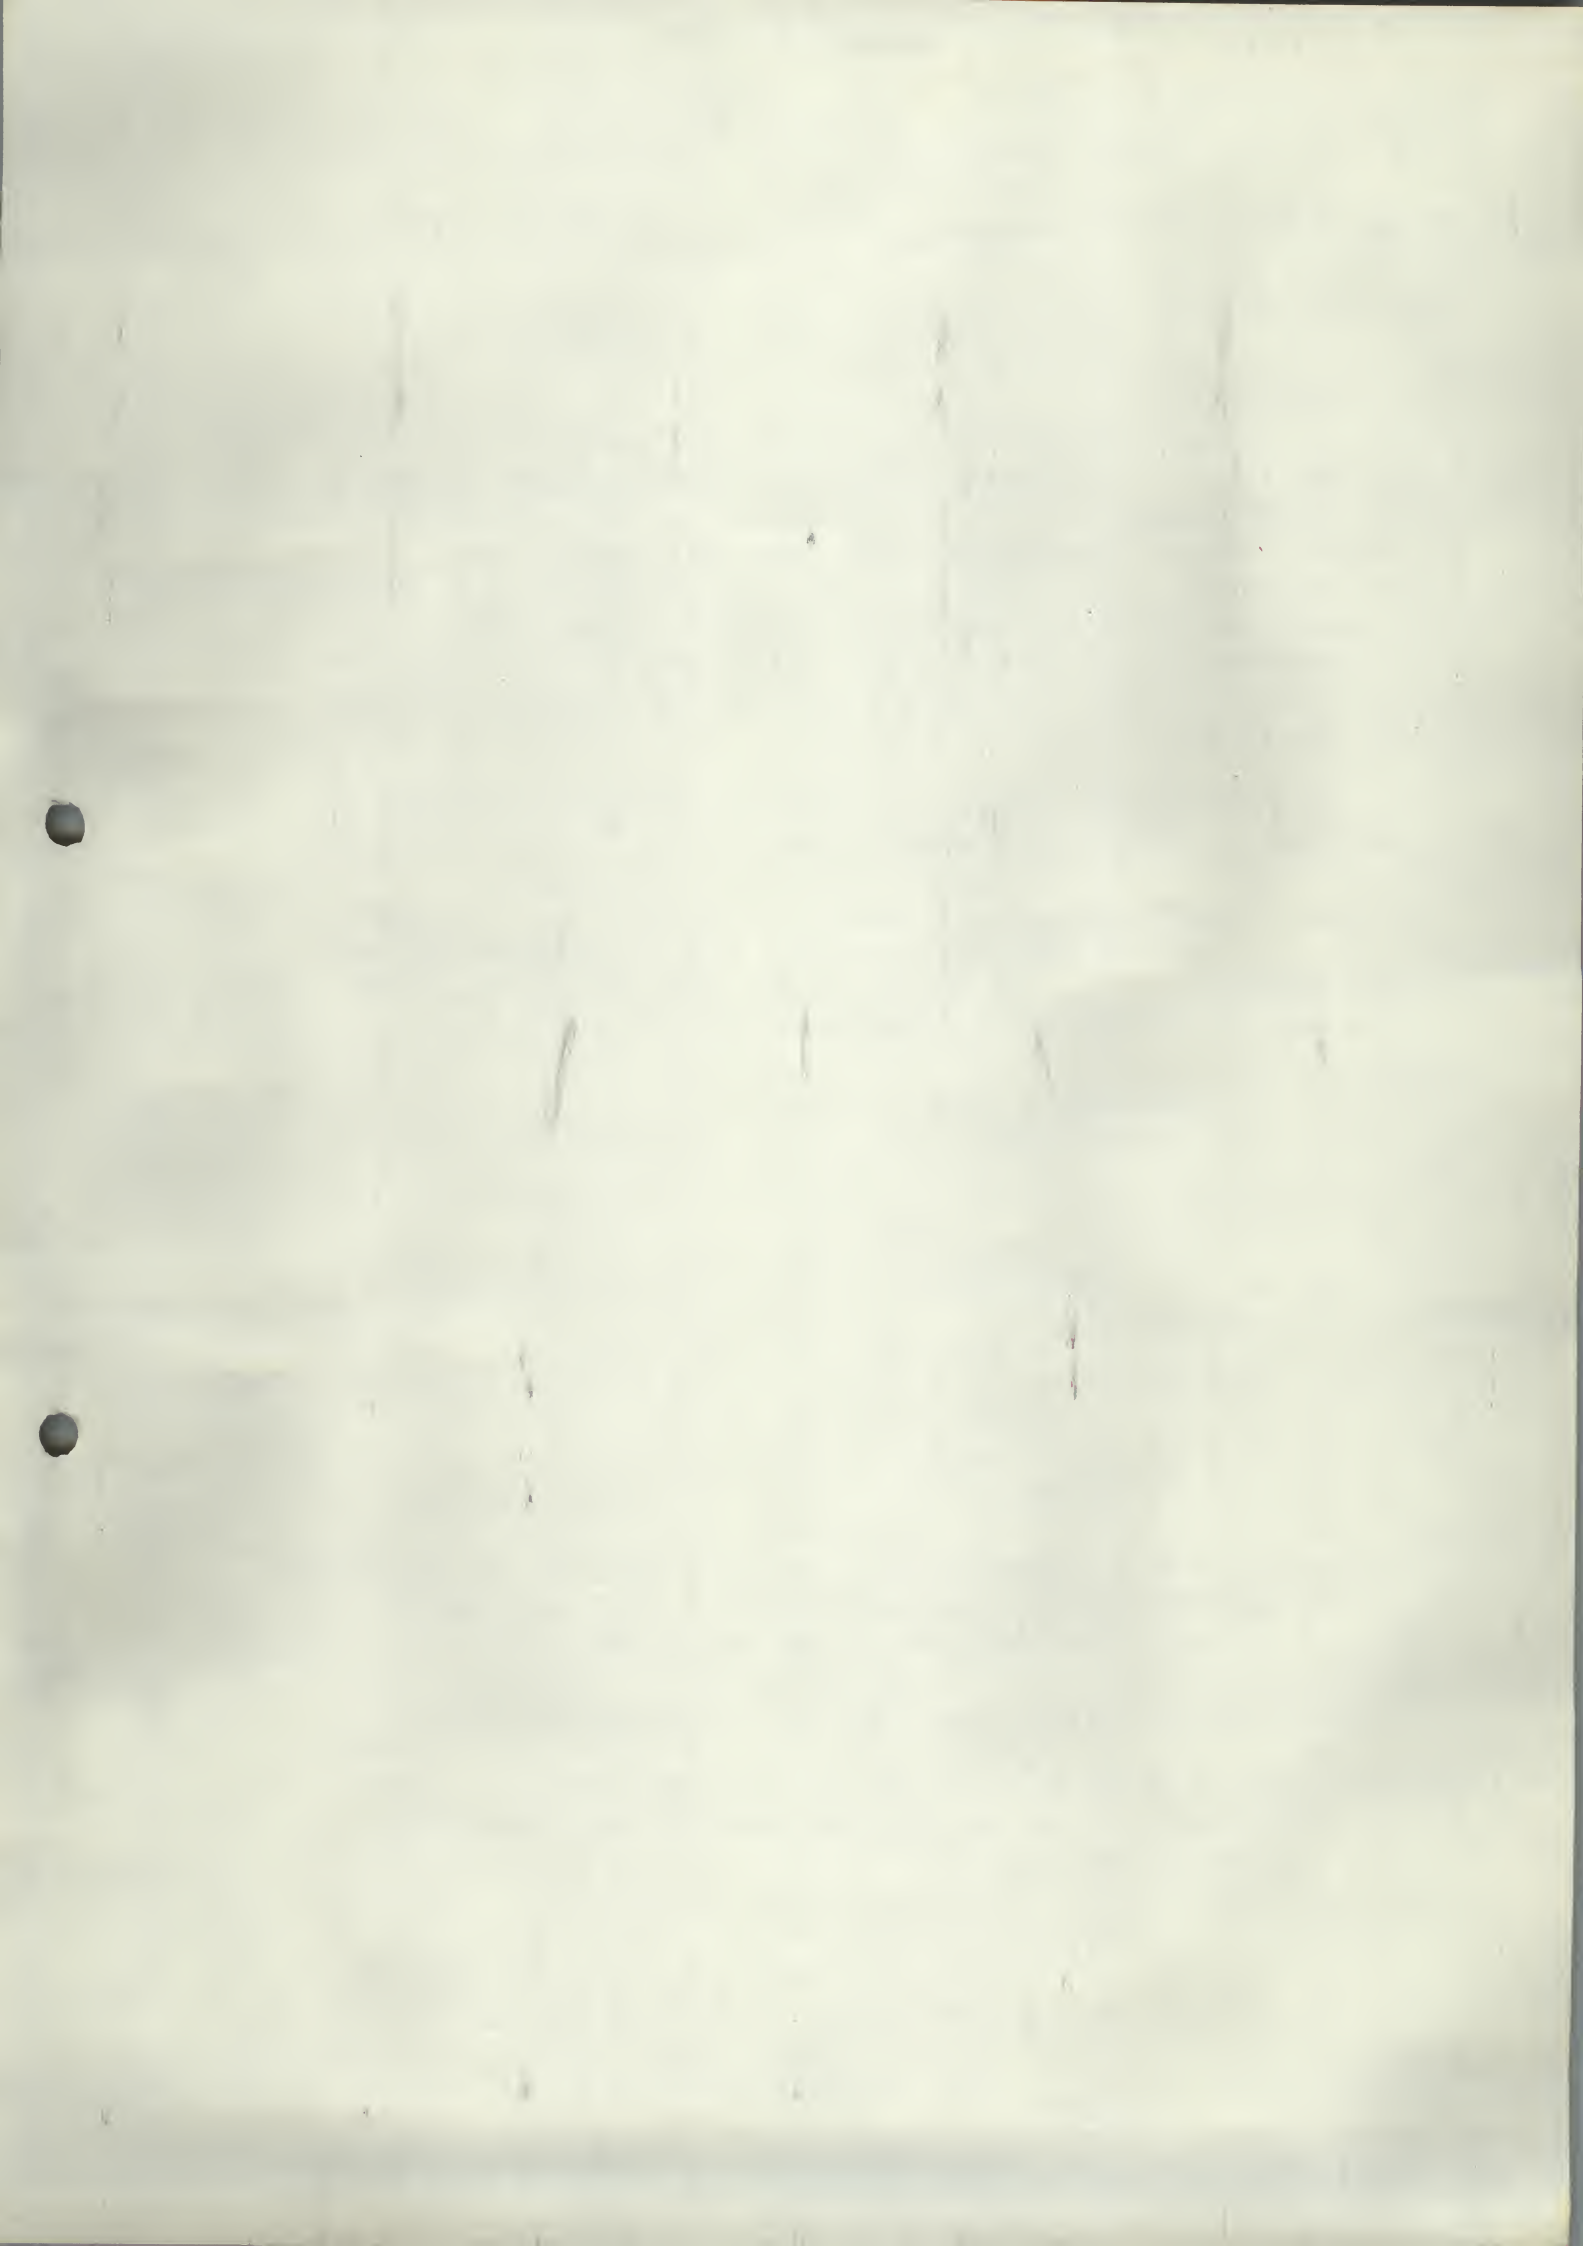

3. Writing a user command in field 0: The section in the Basic/RT user manual or the Basic/RT section of the new manual describes how to implement a user command. However, there is no available room in field 0 and some function or command must be eliminated to make room. To implement a user command in field 0, store UCOM at location 306 of field 0 and write the command over an existing function. Example 3 writes the command over the Exp function.

Return to Basic by jumping to DEVCON, DEVCOM or SKIPIT as described in the Basic user's manual.'

4. Writing a user command in field 1: To put the command in field 1, put a 7743 at location 306 of field 0 and the UCOM address at 744 of field 1. At the end of the UCOM code exit back to field 0 by doing a

```
JMS I UJMP  
DEVCON
```

or

```
JMS I UJMP  
DEVCOM
```

or

```
JMS I UJMP  
SKIPIT
```

depending on the condition of the user command as explained in the Basic/RT user's manual. When a user's command UCOM is entered the data field is for field 1 (CDF 10). On exit the data field must also be field 1. Remember the floating point package can not be called from field 1.

EXAMPLE 3. User command in field 0. In this example, UCOM A,B will multiply A times B, fix the answer, add 260 octal to the value and issue a TLS.

/BAS03

PAL8-V7

PAGE 1

```

      /BAS03
0016  AC3=16
4744  FIX=4744
0177  GETWD=177
7616  MEVAL=7616
4435  FENTER=4435
0200  FWD=200
2000  FSTA=2000
0000  FEXIT=0
6000  FMU=6000
7176  DEVCON=7176
00306 0306      *306
      6114      UCOM
      6114      *6114
06114 4740  UCOM,  JMS I XGETWD
06115 4741      JMS I XMEVAL
06116 4435      FENTER
06117 2226      FSTA+FWD+TEMP-.
06120 0000      FEXIT
06121 4741      JMS I XMEVAL
06122 4435      FENTER
06123 6222      FMU+FWD+TEMP-.
06124 0000      FEXIT
06125 4742      JMS I XFIX
06126 7200      CLA
06127 1016      TAD AC3
06130 1343      TAD UC260
06131 6002      IOF
06132 6041      TSF
06133 5332      JMP .-1
06134 6046      TLE
06135 6001      ION
06136 7200      CLA
06137 5744      JMP I XDEVCO
06140 0177  XGETWD, GETWD
06141 7616  XMEVAL, MEVAL
06142 4744  XFIX,   FIX
06143 0260  UC260,  260
06144 7176  XDEVCC, DEVCON
06145 0000  TEMP,   0;0;0
06146 0000
06147 0000

```

/exit

EXAMPLE 4. User command in field 1. In this example, UCOM will type a Ø on the teletype (it may overtype the previous line).

/RAS04


PAL8-V7

PAGE 1

/RAS04

	0000		FIELD 0
	0306		*306
00306	7743		7743
	0001		FIELD 1
	0054	UJMP=54	
	7175	DEVCCM=7175	
	0744		*744
10744	0065		UCCM
	0065		*65
10065	7200	UCCM,	CLA
10066	6002		IOF
10067	6041		TSF
10070	5067		JMP --1
10071	1077		TAF UC260
10072	6046		ILF
10073	6001		IGN
10074	7200		CLA
10075	4454		JMS I UJMP
10076	7175		DEVCCM
10077	0260	UC260,	260

J.

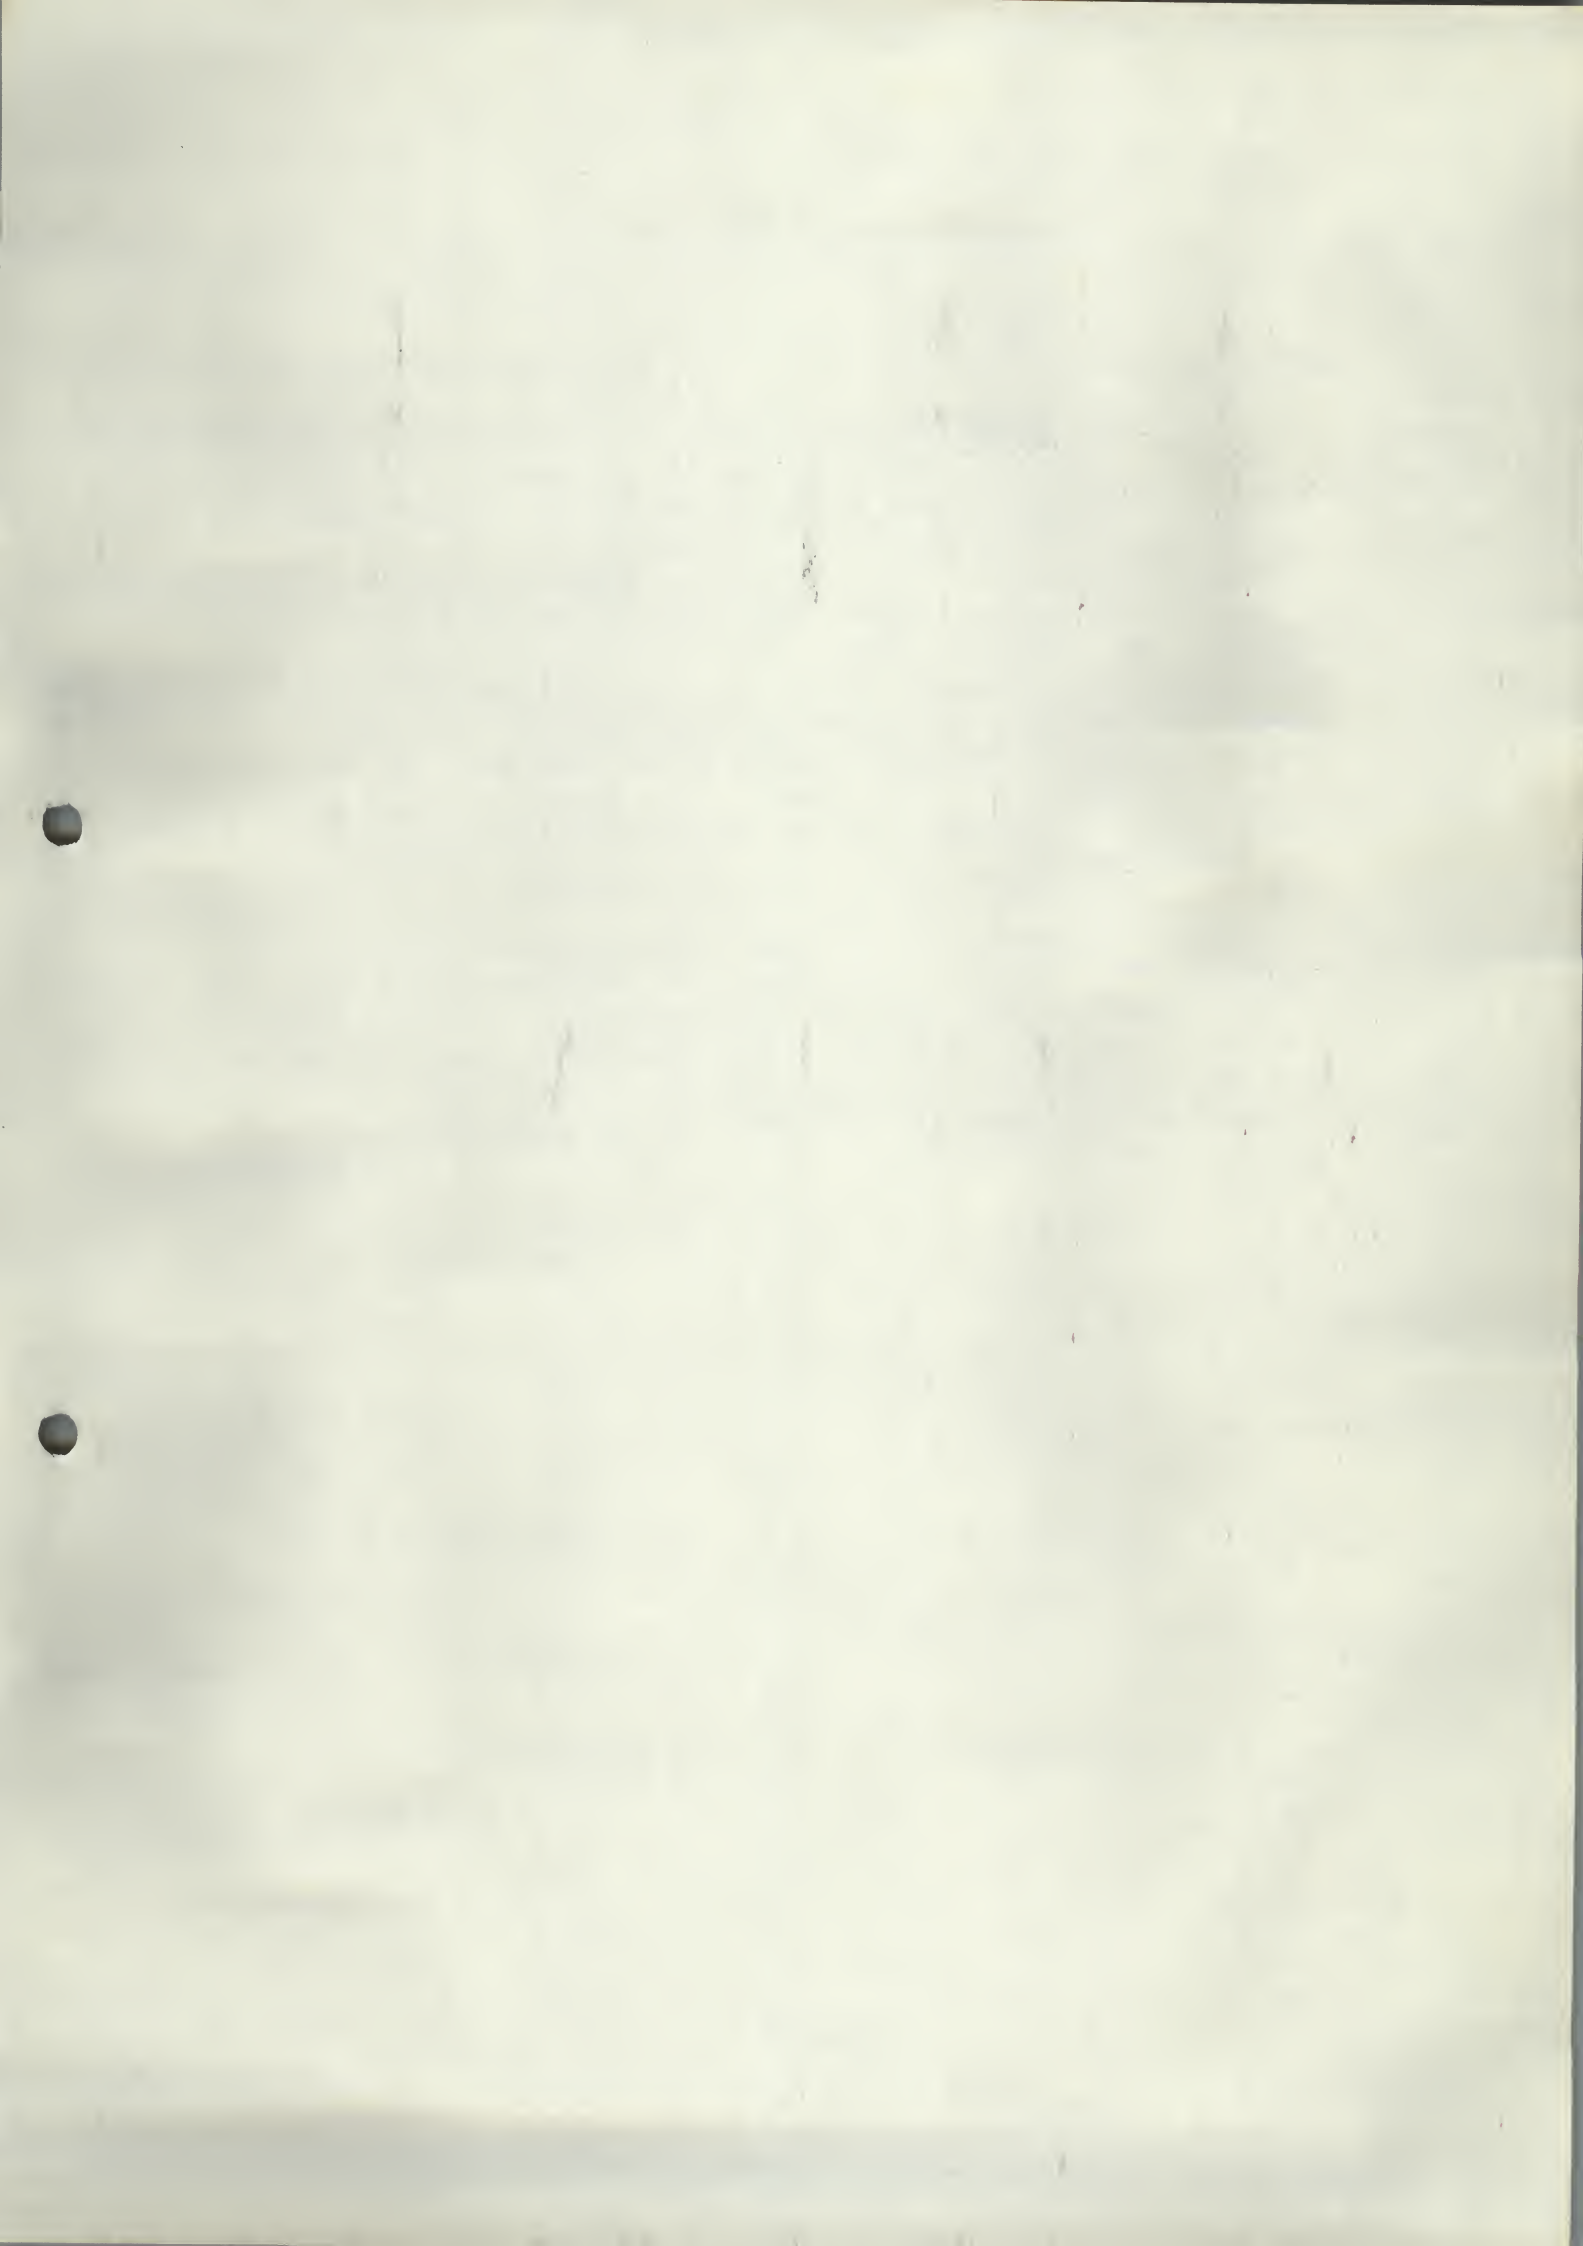

When loading Basic/RT from field 1, it will automatically start up. When a user function or command is to be used, two binary tapes must be loaded in which case the automatic startup is undesirable. If the LAB8/e has 12K or more, put the binary loader in field 2. Load both tapes and start Basic/RT in field 0, data field 0 at location 1000. In an 8K machine, load Basic/RT and let it start up. Hit a control C, halt the machine and load the overlay tape via the binary loader. Restart Basic/RT at 1000 or 6725 of field 0, data field 0. Note, when loading the overlay tape with the binary loader, make sure the data field is set correctly.

In conclusion, to do functions or user commands more complicated than shown above, the correct subroutine calling sequence can be established from the listing and the attached documentation. Basic/RT was created from 4K Basic Edusystem 10. There is documentation for 4K Basic Edusystem 10. The Basic/RT documentation considers only the changes from 4K Basic to 8K Basic/RT.


1. The first part of the report is a general description of the project and its objectives. It includes a brief history of the project and a statement of the problem to be solved. The second part is a description of the methodology used in the study. This includes a description of the data sources, the statistical methods used, and the results of the analysis. The third part is a discussion of the results and their implications. This includes a comparison of the results with previous studies and a discussion of the limitations of the study. The final part is a conclusion and a list of references.

1. The first part of the report is a general description of the project and its objectives. It includes a brief history of the project and a statement of the problem to be solved. The second part is a description of the methodology used in the study. This includes a description of the data sources, the statistical methods used, and the results of the analysis. The third part is a discussion of the results and their implications. This includes a comparison of the results with previous studies and a discussion of the limitations of the study. The final part is a conclusion and a list of references.

1. The first part of the report is a general description of the project and its objectives. It includes a brief history of the project and a statement of the problem to be solved. The second part is a description of the methodology used in the study. This includes a description of the data sources, the statistical methods used, and the results of the analysis. The third part is a discussion of the results and their implications. This includes a comparison of the results with previous studies and a discussion of the limitations of the study. The final part is a conclusion and a list of references.

UN2LUF, AND GO THROUGH THE USER SYMBOL TABLE AGAIN, REALLOCATING
UN2NOT, SPACE FOR A SCALAR FOR EACH VARIABLE.
UN2IN,


ALSO SET UP THE LOCATION COUNTER, PUSH DOWN LIST, READ POINTER,
FOR TABLE, AND GOSUB TABLE FOR EXECUTION OF A 'RUN'.
LIMIT, POINTER TO FIRST WORD OF USER SPACE (VARIABLE SPACE STARTS HERE).
XXTHEN, POINTER TO 'THEN' SYMBOL (FAKES LINE GETTER INTO STARTING
THE LINE WITH A LINE NUMBER).
LIST, POINTER TO 'LIS' PROCESSOR.
XXEOF, POINTER TO (EOF) SYMBOL.
PERMSY, POINTER TO PERM, SYMBOL TABLE (USER SYMBOL TABLE IS BELOW IT).
NOTNOW, POINTER TO INDIRECT STATEMENT HANDLER (INSERTS LINES).
NO, THE END STATEMENT IS EXECUTEABLE, IT IS NOT EQUIVALENT TO STOP;
IT CLEARS VARIABLES, THE REASON FOR THIS IS THAT AFTER A STOP,
ALL ARRAYS WHICH WERE DEFINED AT THE TIME OF THE STOP REMAIN
DEFINED (INTERACTIVE!). IF THE USER THEN CONTINUES TYPING MORE
PROGRAM, HE WILL EVENTUALLY COME UP AGAINST THE 'TOO-BIG ERROR'.
HE HAS TO HAVE A WAY OF CLEARING HIS ARRAYS TO GET PAST THE
ERROR, AND RATHER THAN ADDING A COMMAND, THE END STATEMENT WAS
UTILIZED, SO THE WAY TO GET PAST THE 'TOO-BIG ERROR' IN THIS CASE IS
TO TYPE A DIRECT 'END' STATEMENT.
STOP, PRINT 'READY' AND GO TO WAIT FOR A TELETYPE COMMAND.
OOLONG, THE 'LINE TOO LONG' MESSAGE.
DELETED, THE 'DELETED' MESSAGE.
ETLRET, FOR RETURNING FROM 'GETLIN' FROM OFF PAGE,
AFTER INSERTING A LINE, FIX UP LINENO DEFINITIONS,
RETURN.
E'LIN, ROUTINE FOR GETTING A TRANSLATED (INTO INTERPRETIVE CODE FORM)
LINE FROM THE TELETYPE. IT IS ENTERED WITH SOMETHING
IN THE AC-THAT SOMETHING BEING A POINTER TO 'THEN' IF THE LINE
IS MEANT TO START WITH A LINE NUMBER (AS OPPOSED TO A LITERAL).
NEWLI, GET A NEW LINE.
NEWCHAR, ONE CHARACTER PER WORD IN TRIMMED ASCII
WATCHING OUT FOR 175-ALT, 176-ALT, ' ' AND (CR).
IGNORE NONPRINTING CHARACTERS (AND ' ').
UBIG, IF THE LINE IS BIGGER THAN THE BUFFER CAN HANDLE, PRINT
'LINE TOO LONG' AND TRY FOR A NEW LINE.
LTMODE, PRINT 'DELETED' AND TRY FOR A NEW LINE.
ARROW, REMOVE PREVIOUS CHARACTER (IF THERE WAS ONE).
ARRET, NOW THERE IS A WHOLE LINE OF ASCII IN THE BUFFER, START
LOOP, SCANNING OFF SYMBOLS ONE AT A TIME, FROM LEFT TO RIGHT,
LOOP, IF THERE IS A MATCH WITH THE PERMANENT SYMBOL TABLE, USE THAT
AS THE DEFINITION (IGNORE ALL BLANKS IN THE PERM, SYMBOL TABLE).
LOOP, SKIP,
MATCH, WATCH OUT FOR THE SPECIAL CASE OF 'REM' (STUFF AFTER 'REM' IS
TREATED AS IF IT WAS QUOTED TEXT).
36, LITERALS.
40,
122,
7622,
OTHER, POINTER TO WHERE TO GO IF THERE IS NO MATCH IN THE PERM, SYMBOL
TABLE.
TABLE, POINTER TO THE PERMANENT SYMBOL TABLE.
THED, THERE WAS NO MATCH WITH THE PERM, SYMBOL TABLE.

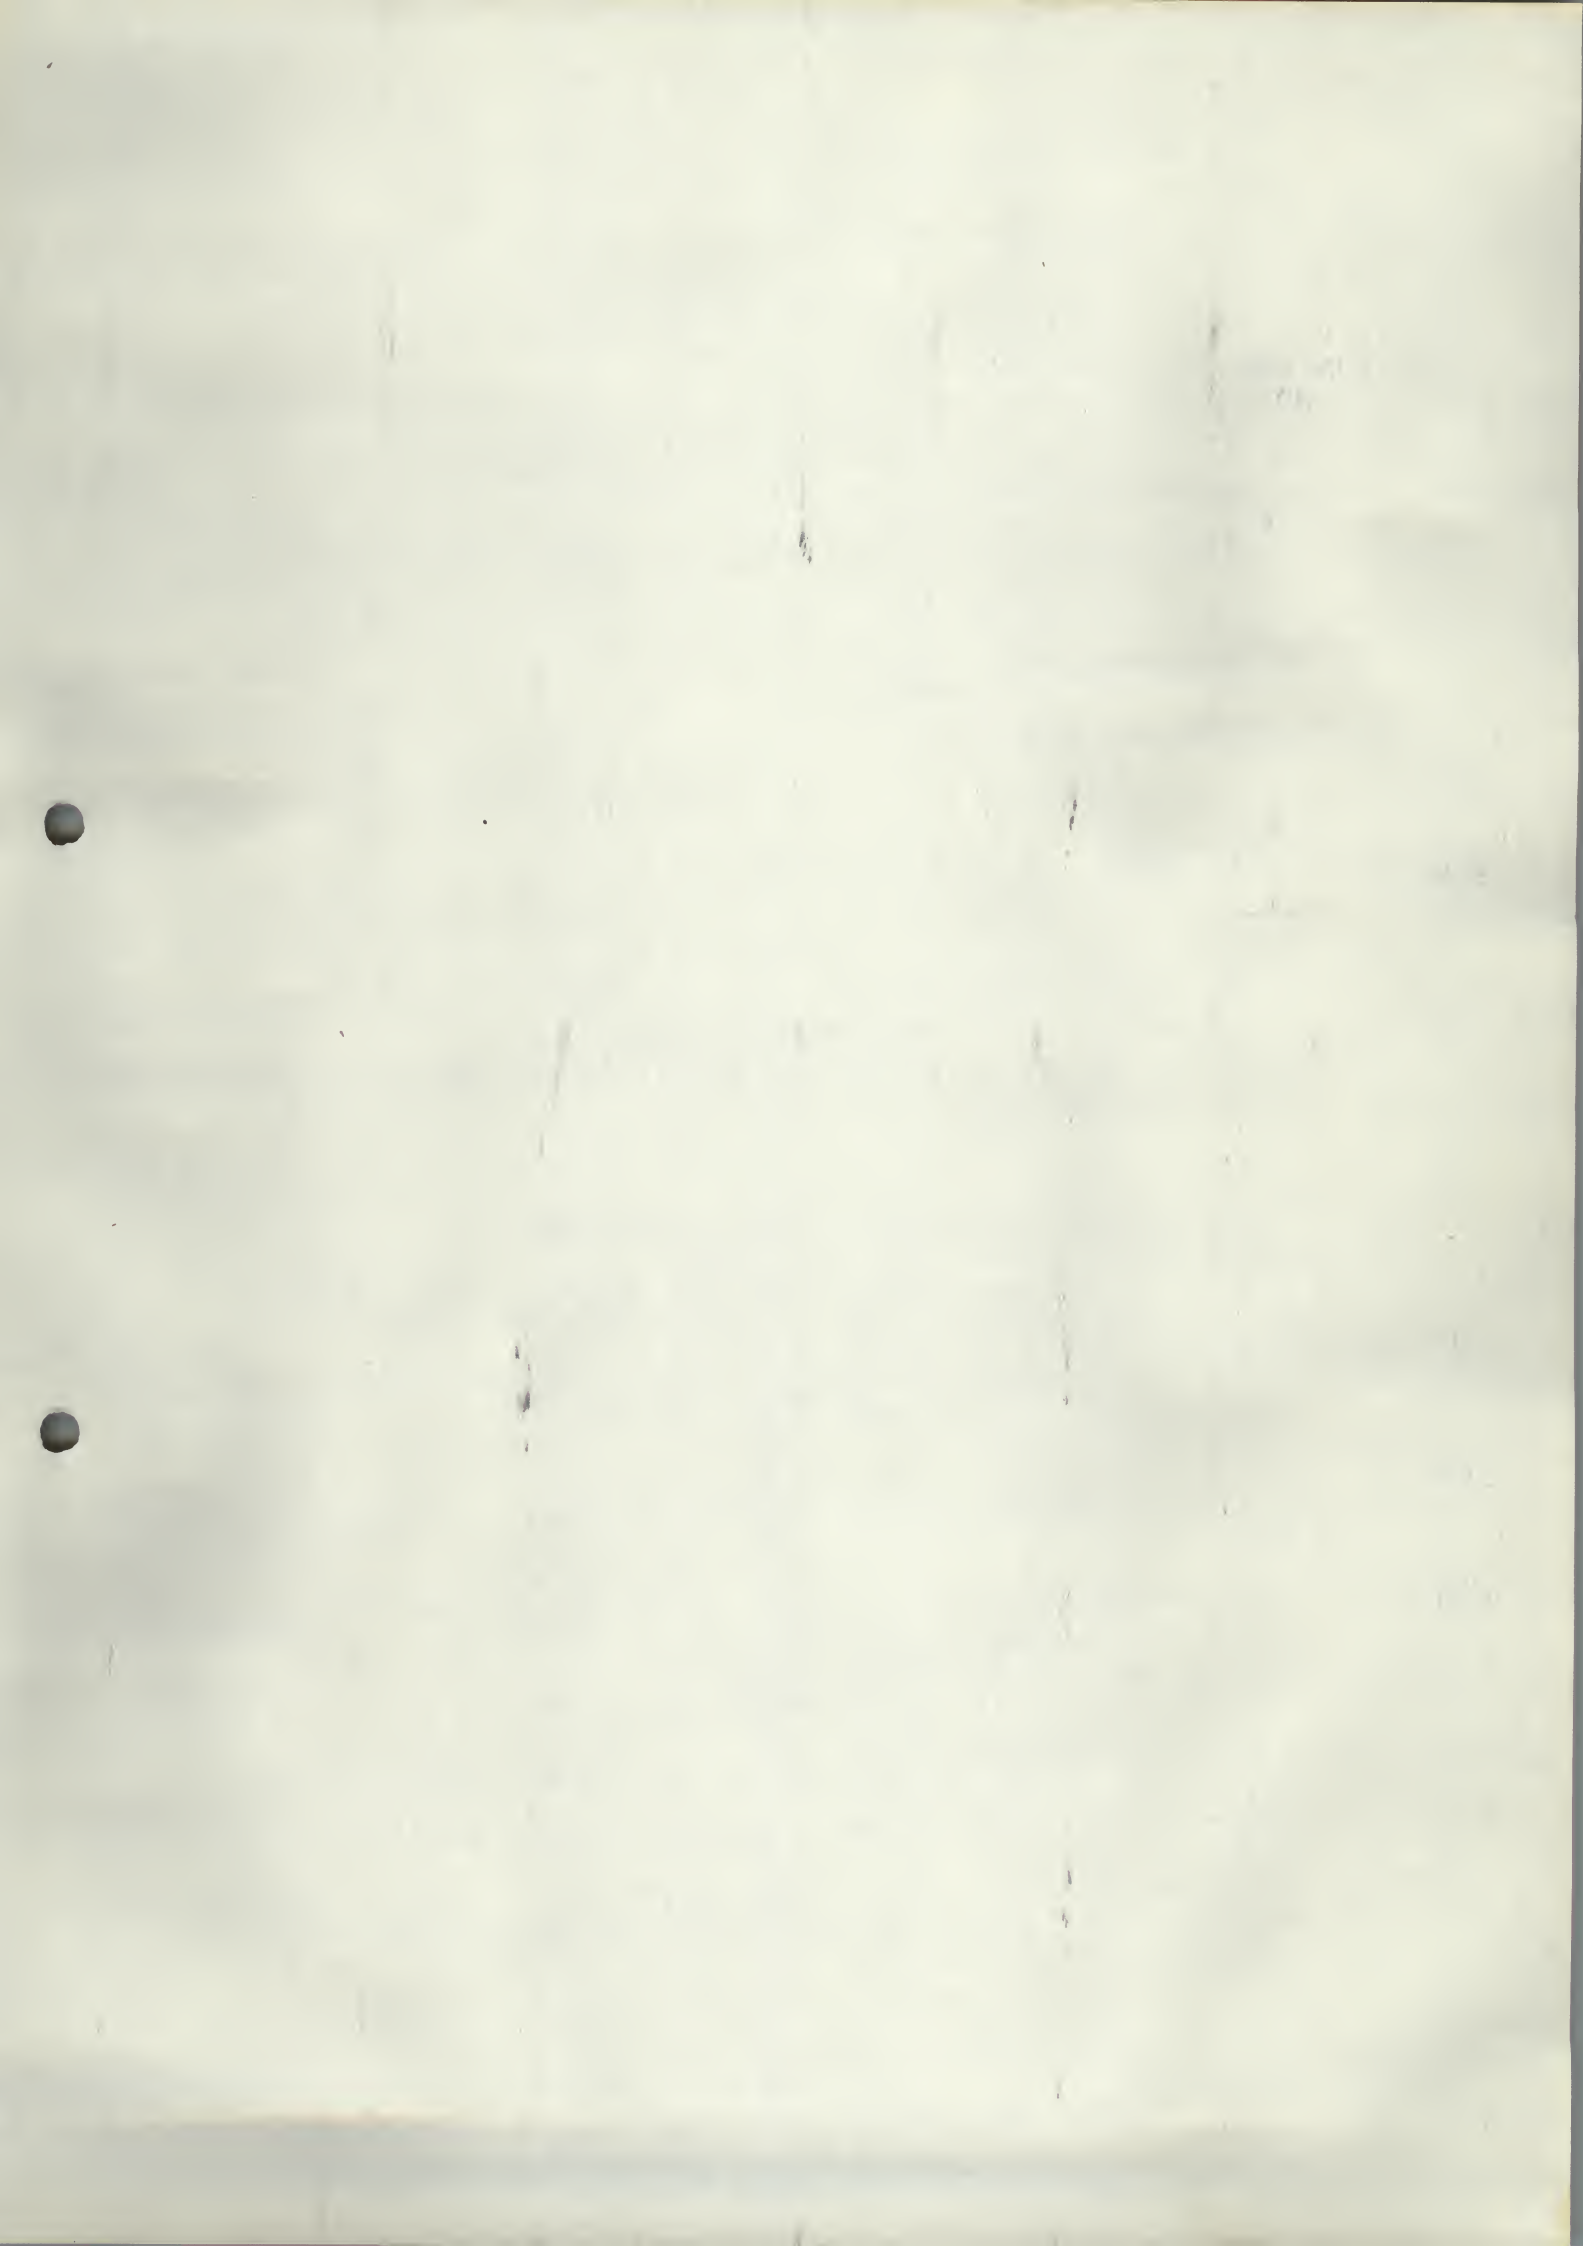


```

1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1 ETC. CHALK IT UP TO 'LINE TOO LONG'.
PTUETG, POINTER TO 'LINE TOO LONG'.
PGETLFE, POINTER TO RETURN FROM 'GETLIN'.
NCTCH, ITS NOT A CARRIAGE RETURN SO
    IF ITS A DIGIT OR '.', GO ACCUMULATE A LITERAL,
    IF ITS A LETTER, GO LOOKUP OR CREATE A VARIABLE.
REMPACK, OTHERWISE IT IS QUOTED(OR UNQUOTED) TEXT.
TXTPAK, PACK TWO SIXBIT CHARACTERS PER WORD.
LHALF, END WITH ONE OR TWO ZERO CHARACTERS(AT SIGNS DONT EXIST).
RHALF, AND
CRINTXT, CARRIAGE RETURN FORCES END OF TEXT.
DQINTXT, SO DOES ANOTHER DOUBLE QUOTE.
MTXXIT, THEN TRY FOR ANOTHER SYMBOL.
PLETTER, WHERE TO GO TO MAKE OR FIND A VARIABLE.
07753, LITERALS
04237,
042,
THISTXT, TEMPORARY.
NONBLNK, ROUTINE WHICH SKIPS OVER BLANKS(EVERYWHERE EXCEPT TEXT).
032, LITERALS.
07737,
PXXCRLF, POINTER TO (CRLF) SYMBOL.
PXXEXIT, POINTER TO (EXIT) SYMBOL.
LITRAL, CREATE A LITERAL OUT OF THE FLOATING POINT AC.
    DEPENDING ON HOW MANY LOW ORDER ZEROES, IT CAN BE
JUST1, 12 BITS,
ALL3, 36 BITS,
JUST2, 24 BITS, OR
JUST3, 0 BITS LONG.
POPERA, AUTO INDEX POINTER TO FLOATING POINT TEMPORARY.
PXXLIT0, POINTER TO ZERO LENGTH LITERAL SYMBOL.
DIGIT, A NUMBER IS TO BE ACCUMULATED, SO SET 'SNUMFLG' AS A FLAG
    TO TELL WHETHER IT SHOULD BE A LITERAL OR A STATEMENT NUMBER.
DIGIN, SCAN DIGIT BY DIGIT MULTIPLYING BY 10.0.
ITSDP, AND COUNTING THE NUMBER OF DIGITS AFTER A DECIMAL POINT.
ITSE, AND WATCHING OUT FOR 'E' EXPONENT.
ITSP, ACCUMULATE THE EXPONENT
NOTSGN, EITHER PLUS OR MINUS.
07673, LITERAL, (WHICH IS NOT EXECUTED SINCE THE PREV. INSTRUCTION
    MUST SKIP).
ONLY1,
ENDNUM, AND SUBTRACT THE NUMBER OF DIGITS AFTER THE DECIMAL POINT.
    THEN SCALE THE NUMBER UP OR DOWN.
MULXP, MULTIPLY BY 10.0 OR DIVIDE BY 10.0.
STAT'0, NOW COMES THAT FLAG FOR LINE NUMBER OR LITERAL.
STAT'0, MAKE A LINE NUMBER OUT OF IT.
FDIGIT, FLOATING POINT TEMPORARY FOR ADDING DIGITS ARE THEY ARE HIT.
MULXTEN, MULTIPLY BY 10.0 INSTRUCTION.
DIVXTEN, WHEN ADDED TO 'MULXTEN' MAKES A DIVIDE BY 10.0 INSTRUCTION.
OFFLAG, DECIMAL POINT FLAG.
DECFRAC, NUMBER OF DIGITS AFTER THE DECIMAL POINT.
ISDI, SPACE SAVER WHICH CHECKS IF THE CHARACTER IS A DIGIT.
027, LITERALS.
01742,
01774,
PLITRAL, POINTER TO LITERAL MAKER.
COMMON, SEARCH THROUGH
LUP, USER SYMBOL TABLE FOR A GIVEN LINE NUMBER
NOT, AND IF IT IS IN THERE RETURN A POINTER TO IT
IN, OTHERWISE PUT IT IN THERE AND THEN RETURN

```

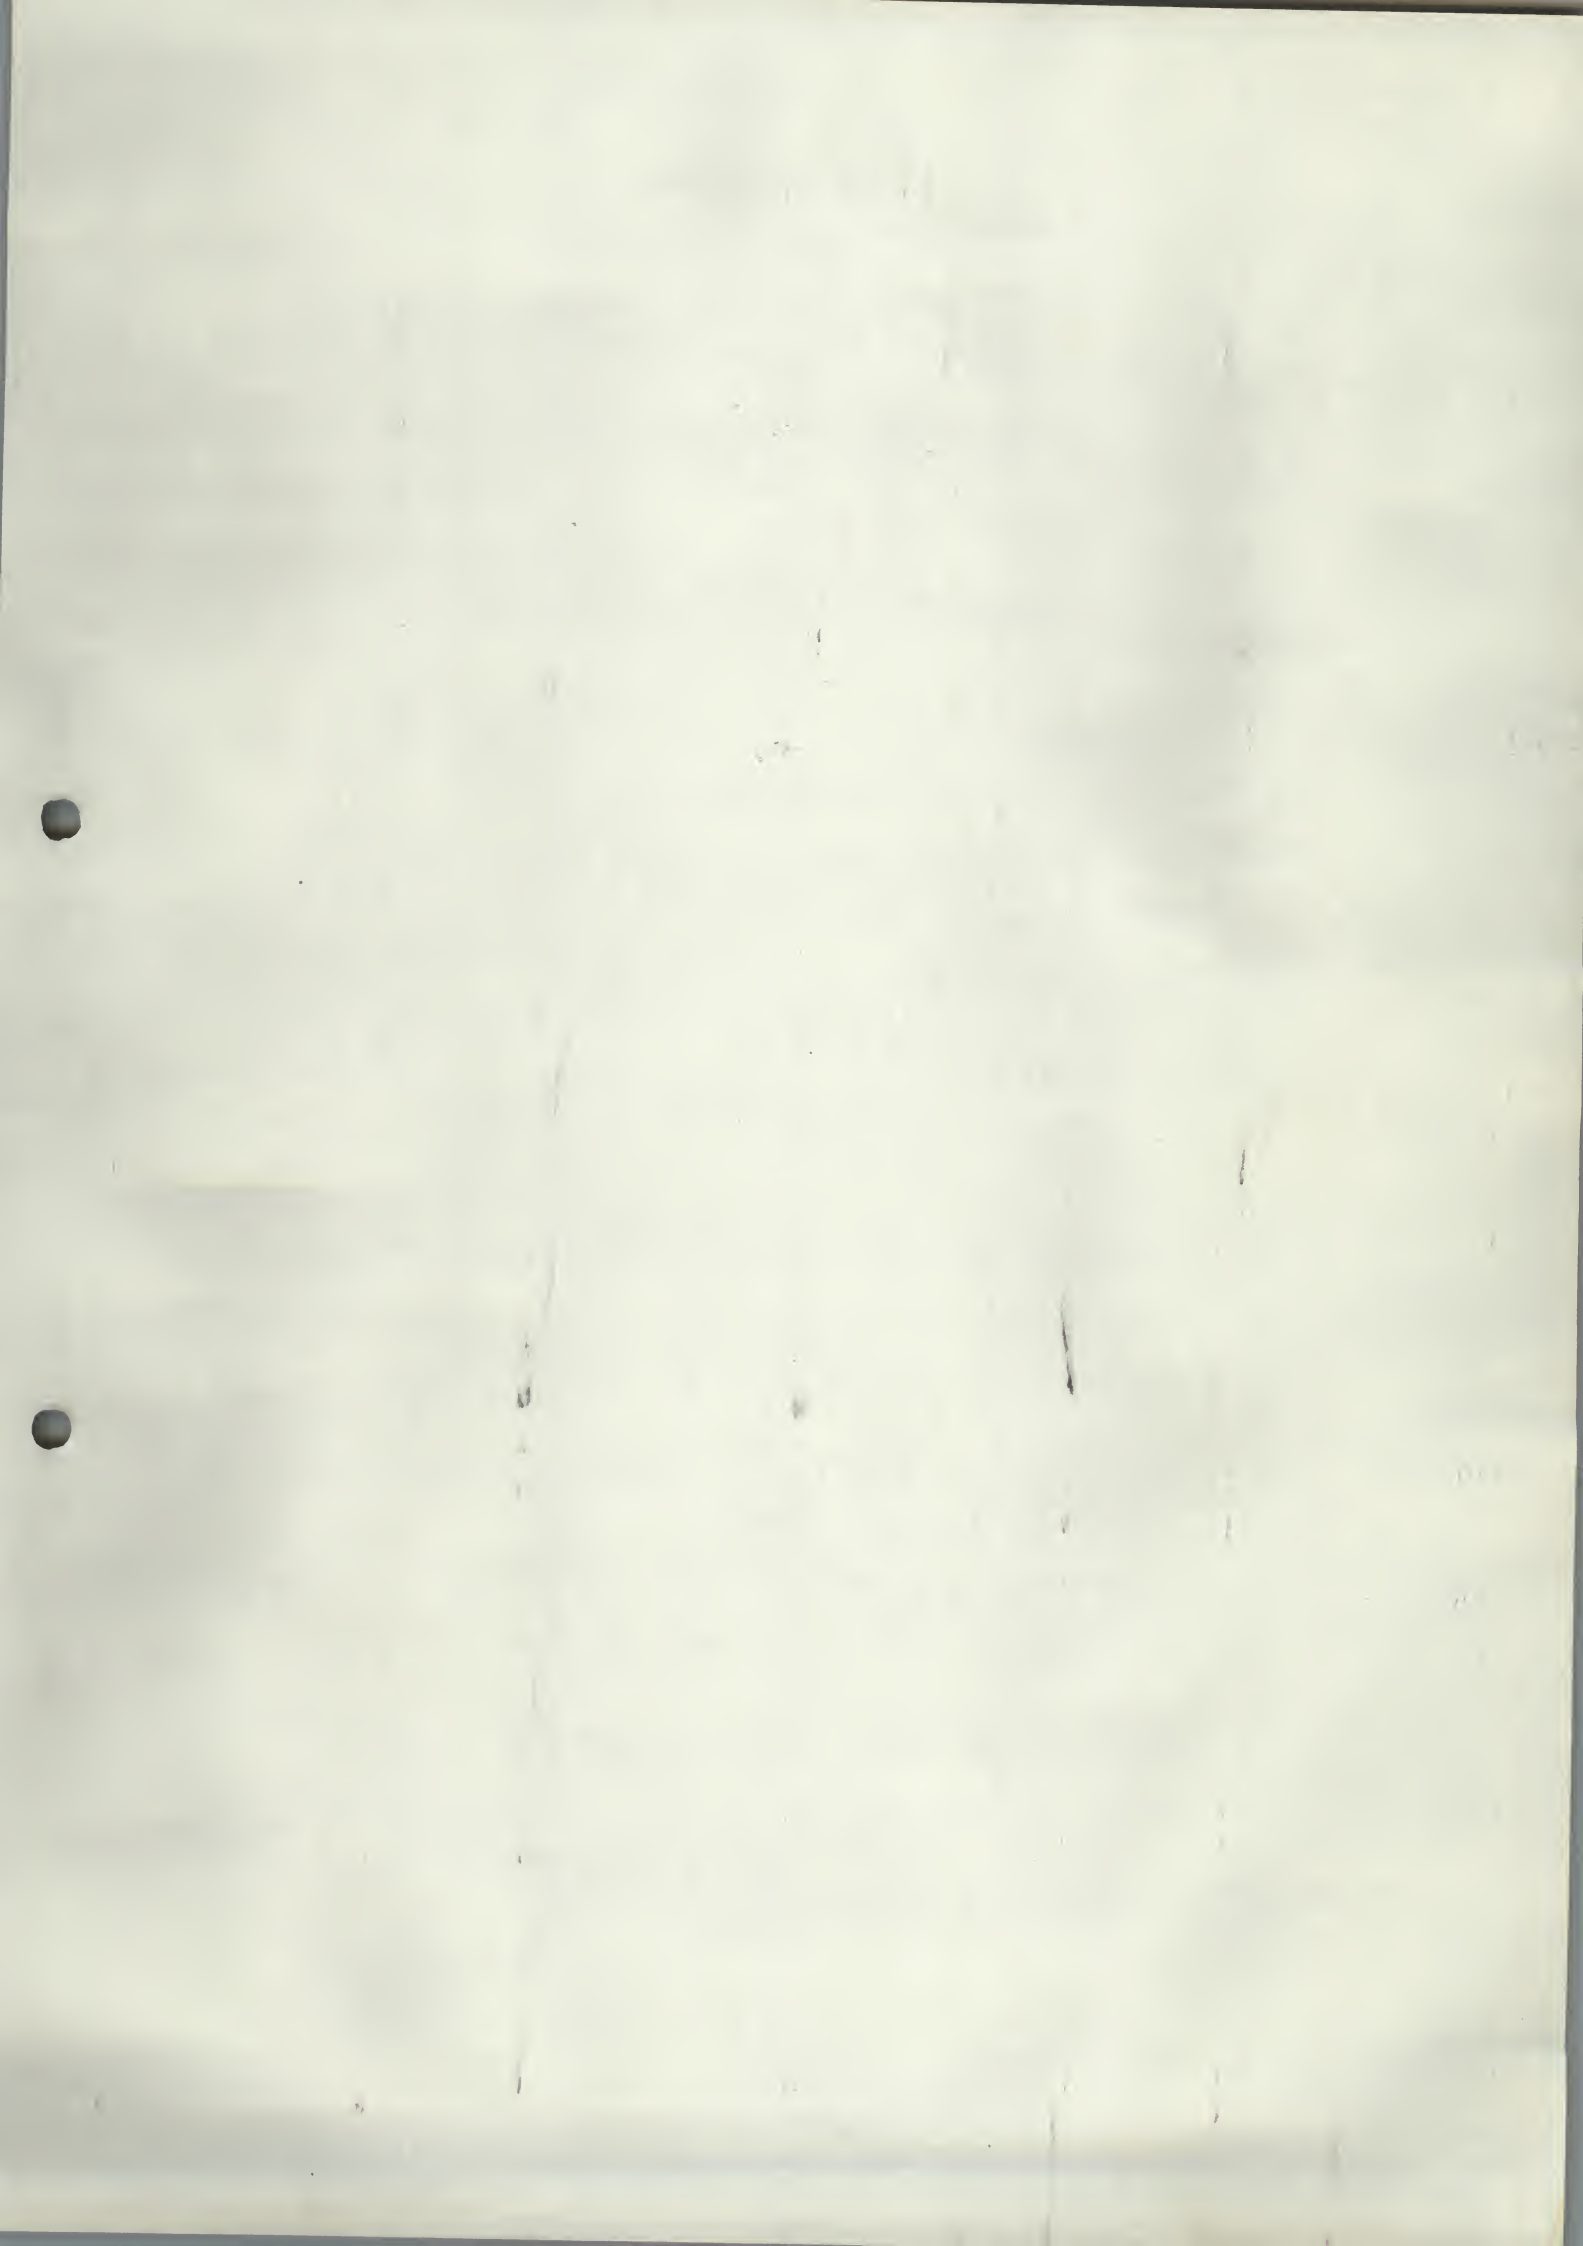A POINTER TO IT.
 ETTER, THERE WAS A LETTER WHICH MUST BE A VARIABLE,
 WHICH MAY OR MAY NOT BE FOLLOWED BY A DIGIT.
 MAKE THE VARIABLE NAME.
 SIMPLY, AND SEARCH THE USER SYMBOL TABLE FOR THAT VARIABLE NAME.
 VSCHLUP, IF IT IS FOUND, RETURN A POINTER TO IT.
 RSDEF?
 TSDEF,
 SCHNOT, OTHERWISE PUT ONE IN,
 SET UP THE CORRESPONDING VARIABLE SPACE, AND RETURN A POINTER
 TO THAT,
 .000, LITERAL,
 TEN, FLOATING POINT 10.0.
 POP, PUSH DOWN LIST POPPER,
 FOURLF, TEXT OF FOUR (CRLF)'S.
 UGH1, LINE MAKES PROGRAM 'TOO BIG, LINE IGNORED' MESSAGE.
 LIST, DOES THE LIST COMMAND,
 CHECKS IF THERE IS A LINE NUMBER FOLLOWING THE COMMAND,
 IF THERE IS, AND IT IS DEFINED, LIST FROM THAT LINE.
 LISTALL, OTHERWISE LIST FROM THE BEGINNING,
 LISTOM,
 LISTLUP, LISTING IS STOPPED BY TYPING ANY CHARACTER,
 IF IT'S (EOF) THEN THE LISTING IS DONE.
 IF IT'S A LINE NUMBER, PRINT IT.
 LIST2, IF IT'S A VARIABLE, PRINT IT.
 PRINVAR, TEMPORARY WHICH HOLDS THE VARIABLE NAME.
 LIST3, IF IT'S A LITERAL, THEN PRINT IT.
 LIST4, IF IT'S TEXT, THEN PRINT IT
 L4LUP, IN A LOOP.
 LIST5, OTHERWISE IT'S A SYSTEM SYMBOL, SO PRINT THAT.
 PRINTXT, SUBROUTINE FOR PRINTING PACKED ASCII TEXT,
 RLCOF,
 RTXRET,
 RSUBP,
 CRLFPH,
 07741, LITERAL,
 PRINUM, ROUTINE FOR PRINT LINE NUMBERS,
 IT DOES IT BY CONVERTING TO FLOATING POINT (WHICH THE OUTPUT
 ROUTINE WILL PRINT IN INTEGER FORM).
 0233, LITERAL,
 RESTORE, MUST BE FOLLOWED BY (CRLF) OR '\'
 RESETS THE READ-DATA POINTER,
 BREAK, 'STOP'
 READY, 'READY'
 CRLF= A CARRIAGE RETURN LINE FEED.
 MOREIN, IF IT'S A (CRLF) OR '\ ' THEN ITS THE END OF THE 'INPUT' STATEMENT.
 INPUT, PRINT A '?'.
 'NPLUP, GET A LINE, (CHECKING FOR 'STOP') AND FOR EACH VARIABLE, USING
 'GETVAR' AND 'STOVAR', SWITCH THE LOCATION COUNTER FOR A POINTER
 INTO THE LINE BUFFER AND SCAN A VALUE (EXPRESSIONS OK.),
 AND SWITCH THE LOCATION COUNTER BACK AFTERWARD,
 NPPT, TEMPORARY,
 NWOTIP, TEMPORARY,
 NLCTMP, TEMPORARY,
 01765, LITERAL.
 PSTOP, POINTER TO 'STOP' SYMBOL.
 XGIST, ROUTINE WHICH IMPLEMENTS 'GET+ISIT'.
 XISIT, ROUTINE WHICH IMPLEMENTS 'ISIT'.
 ISITLIT, ROUTINE WHICH CHECKS FOR AND ACCUMULATES LITERALS (AT RUNTIME).
 2000+N FROM @WORD MEANS AN N WORD LITERAL.

LOADED, RETURN WITH IT IN THE FLOATING AC.
ISLIT, SPACE SAVER IN ISITLIT.
ERROR, ERROR MESSAGE PRINTING ROUTINE.
GERROR, 'ERROR'
FPT, SLIGHTLY ABNORMAL FLOATING POINT PACKAGE- 27 BIT MANTISSA,
HAS 7 ADDRESSABLE INSTRUCTIONS:

FLOATING JUMP,
FLOATING STORE,
FLOATING LOAD,
FLOATING ADD,
FLOATING SUBTRACT,
FLOATING MULTIPLY,
AND FLOATING DIVIDE.

ADDRESSING IS PAGE ZERO DIRECT OR INDIRECT IF BIT 4 IS OFF.
OTHERWISE IT IS RELATIVE TO THE PROGRAM COUNTER.

THERE ARE ALSO THE SIX FLOATING POINT SKIPS, AND AN EXIT.

PLOOP, NOW YOU COME TO MY(L.W.E.) BASIC PHILOSOPHY ON DOCUMENTATION.
PPGZ, IF THE READER DOES NOT KNOW PDP-8 CODE WELL ENOUGH TO READ THE
PDCIT, LISTING, HE SHOULD NOT BE MODIFYING THE CODE. THIS IS ESPECIALLY
PNCADR, TRUE FOR NUMBER CRUNCHING.

PGOTO,
PJUMP,
PADDR,
POPER,
PSKIP,
PJMP
PSTO
IGHWU,
'600
PLAC,
PAPR2,


MORE OF BASIC '++' EXPONENTIATION, IF THE SECOND ARGUMENT
WAS SUITABLE, IT IS DONE BY REPEATED MULTIPLICATION.

R1,
CN,
OP3,
CADD,
PSUB,
PADD,
LGALF,
CKWDI,
ETSGI,
DEAD
PMUL,
MPYLI,
MULCLF,
PLOOP,
PTENP,
C577,
AORM,
NTBIG,
BUMP,
DEFF,
A 1,
DIV,
VLP,
ZDI,
FLOP,
CA,
D, 142
FIX,

SUBROUTINE TO DO BASIC 'INT' TO FLOATING AC. (INT(-1.5)=-2);

IT RETURNS WITH THE AC EQUAL TO THE LOW ORDER WORD PLUS
(IF ZERO ORIGIN INDEXING, THEN 1, ELSE 0).

FIXLUP,
ZFIXEX,
FIXLUIT,
SSFIX,
07545,
ARGERR, PRINT 'ARGUMENT ERROR'
DOTZERO, '0',
OUTNUM, ROUTINE TO PRINT FLOATING AC IN BASIC FORMAT. GIVES NO LEADING
OR TRAILING SPACES,
NONZERO,
CVTLDDP,
FMT2,
FMT1, THIS ENTIRE ROUTINE IS STOLEN FROM TSS8 BASIC,
FMT3,
TRYAGIN,
ZERDOLE,
DIGLO,
FIXUP,
17, LITERALS,
253,
0255,
0305,
0752,
PMFY,
PNEF,
FIXITUP,
JCC,
JORMIT,
JORMED,
OTX12,
XPGOOD,
VLOOP,
XPOK,
MPY,
NUMBUF, BUFFER FOR HOLDING ACCUMULATED NUMBER BEFORE PRINTOUT,
02062, LITERALS,
07610,
07773,
RND, BASIC 'RND' FUNCTION. (CAN BE DELETED.),
FRND2,
FRNDX,
FRND01,
FSQRX,
SQR, BASIC 'SQR' FUNCTION. (CAN BE DELETED.),
SQLCOP,
SQEXIT,
SQEXIT,
00767,
FN, BASIC 'FN' FUNCTION. (CAN BE DELETED.).
EXPECTS 'USERFN' TO HAVE A POINTER TO A LINE STARTING 'DEF'.
IT CHECKS FOR THAT, THEN 'PUSHES' THE VALUE OF THE FORMAL
PARAMETER, SETS IT EQUAL TO THE ACTUAL PARAMETER,
EVALUATES THE RIGHT SIDE OF THE 'DEF' STATEMENT,
THEN 'POPS' THE OLD VALUE OF THE FORMAL PARAMETER,
PUSHFN,
TAN, BASIC 'TAN' FUNCTION. (CAN BE DELETED.).
COS, BASIC 'COS' FUNCTION. (CAN BE DELETED.).
SIN, BASIC 'SIN' FUNCTION. (CAN BE DELETED.).

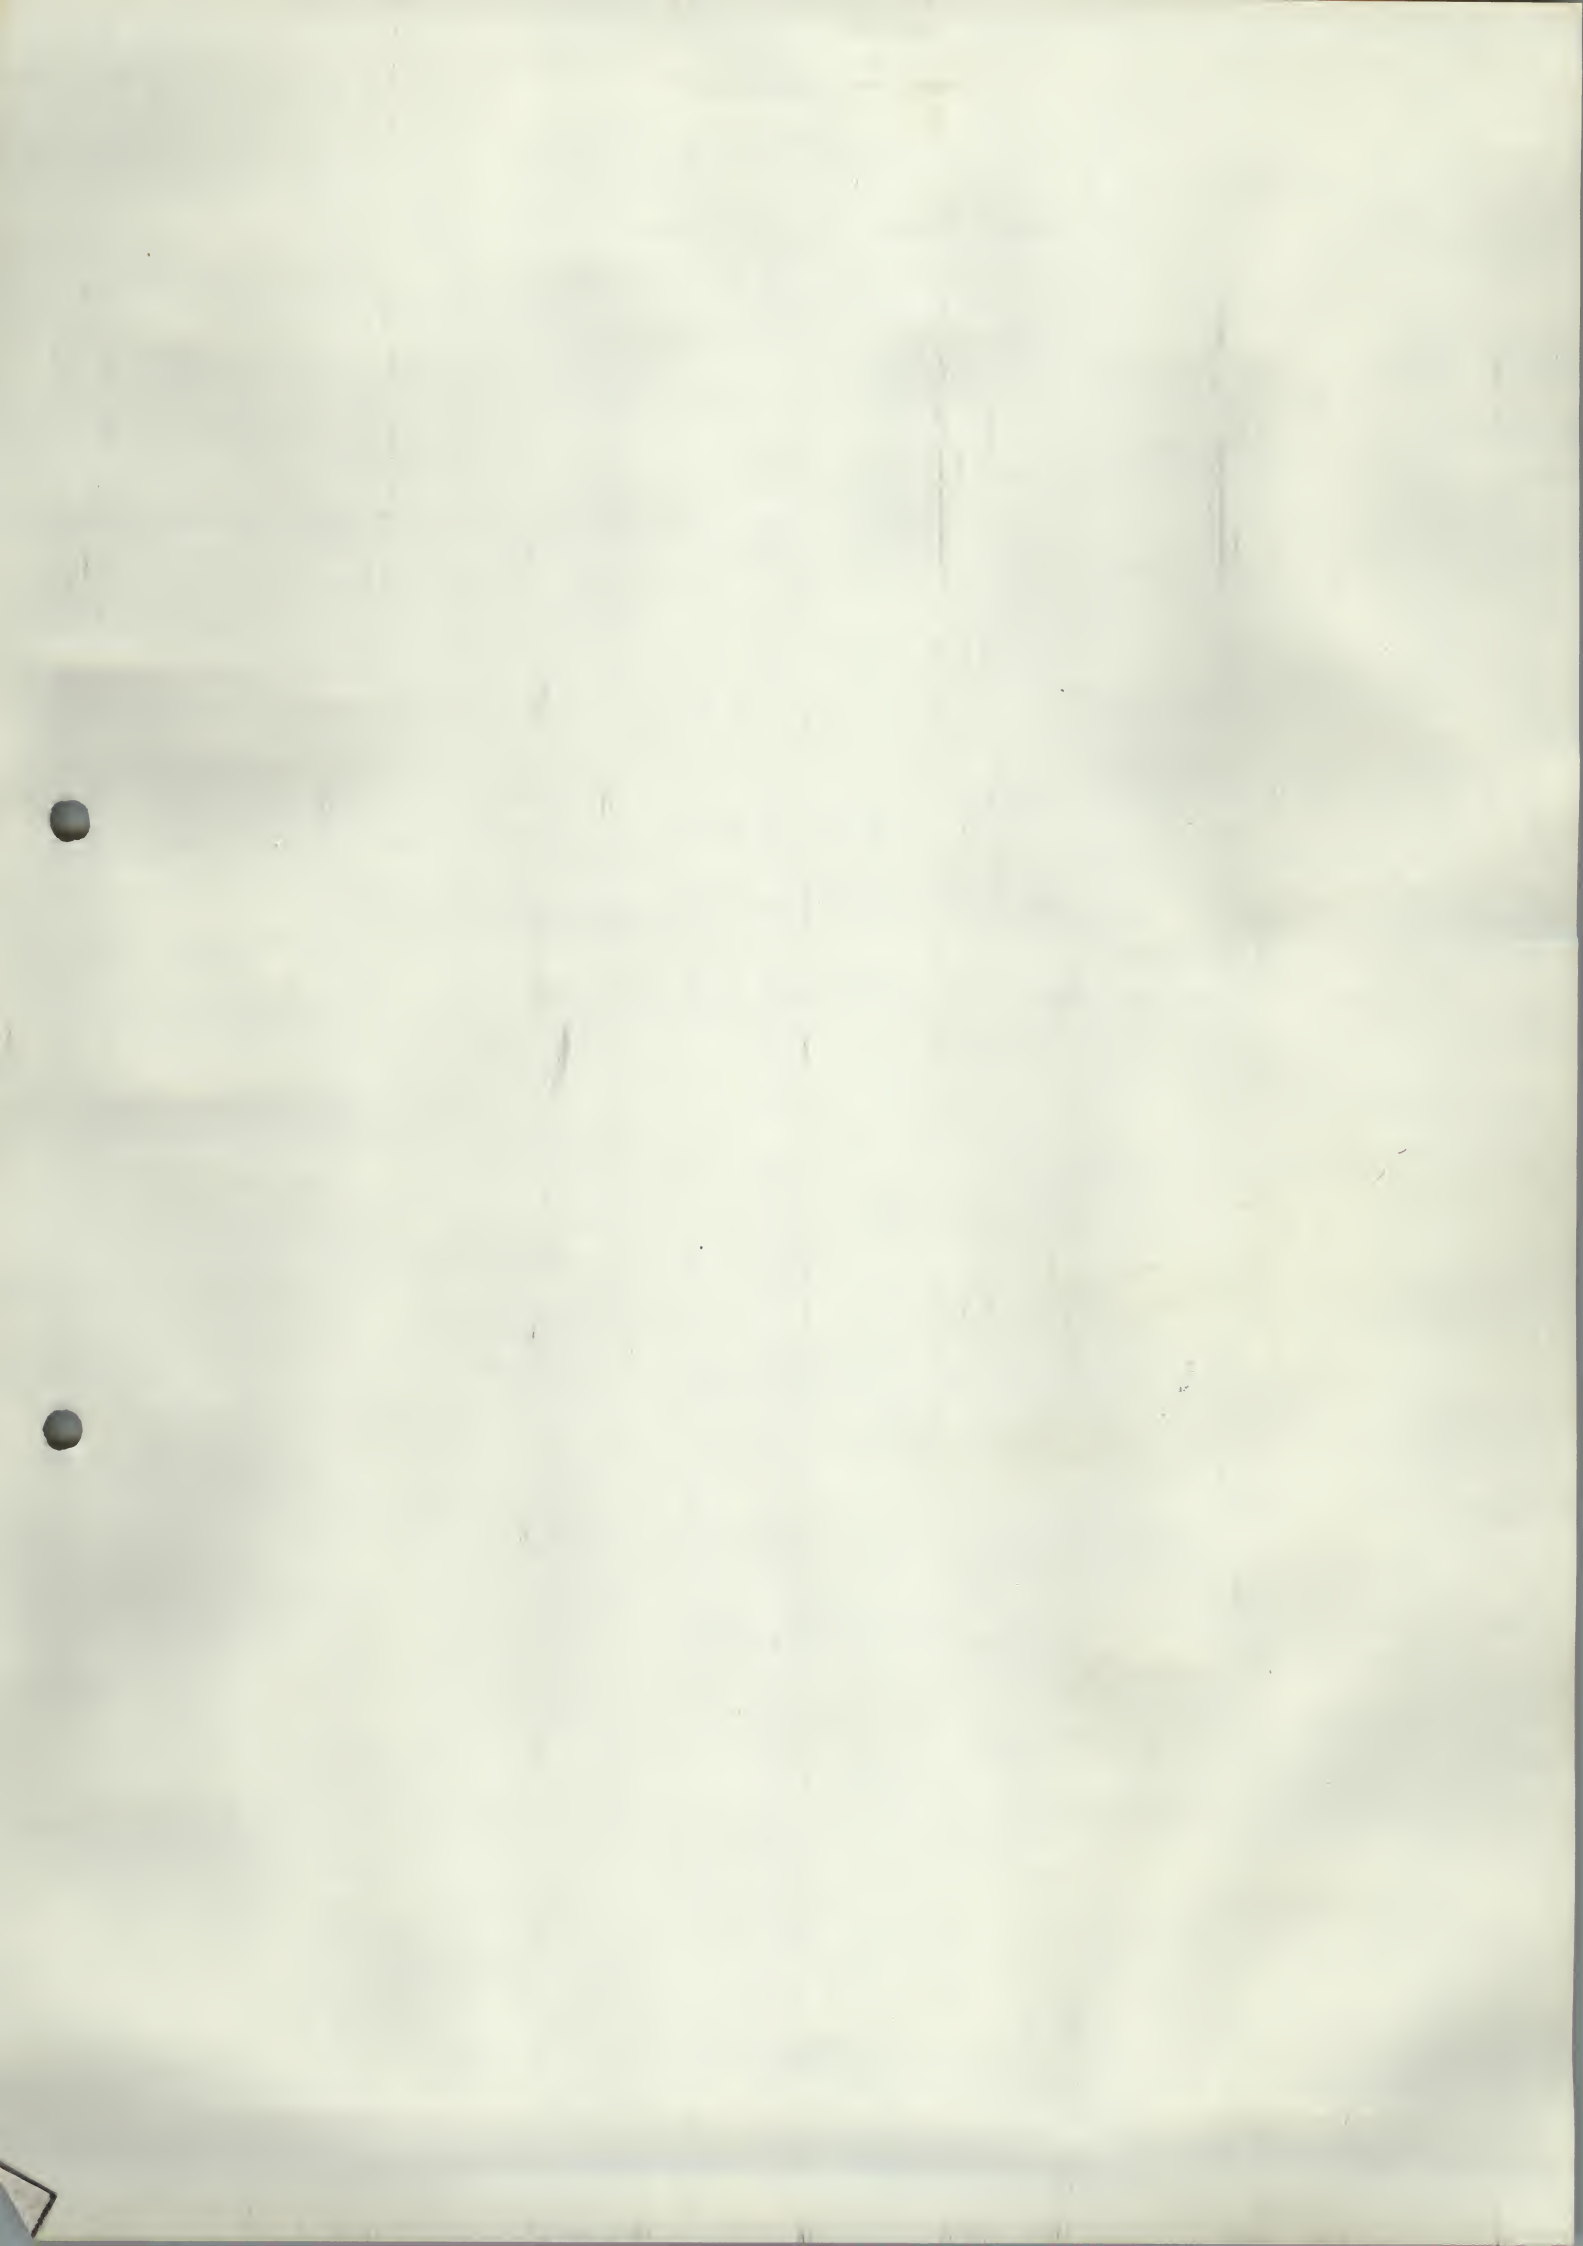


```


FSI' 10,
FSINOK,
PSGN,
PINT,
FTANT1,
FTANT2,
TSINZ,
FSINZZ,
FSINC1,
FSINC3,
FSINC4,
FSINC5,
FSINC6,
CSINC7,
CSINM4,
UPARPX, BASIC '*/' USING EXTENDED FUNCTIONS,
FUPRC1, IF THE SECOND ARGUMENT IS SUITABLE, DO IT BY THE MULTIPLICATION
METHOD, OTHERWISE,
EXPLONG,  $A+B = \text{EXP}(\text{LOG}(A)+B)$  WITH POSSIBLE NEGATIVE ARG, TO LOG,
PLOG,
PEXP,
EXP, BASIC 'EXP' FUNCTION.(CAN BE DELETED.),
FXXFFX,
PPINT,
FEXP1,
FEXP4,
FEXFF,
FEXPC1,
FEXPC2,
FEXPC3,
FEXPC4,
FEXPC5,
FEXPC6,
LOG, BASIC 'LOG' FUNCTION.(CAN BE DELETED.),
FLOGC2,
FLOGC3,
FLOGC4,
LOGFWD,
LOGACE,
LOGOKW,
FLOGC1,
ATN, BASIC 'ATN' FUNCTION.(CAN BE DELETED.),
ATNLOW,
ATNNO1,
ATNEI1,
FATN1,
FATNA1,
FATNT,
FATNTT,
FATNC1,
FATNC2,
FATNC3,
FATNC4,
FATNC5,
FATNC6,
FATNC7,
FATNC8,
FATNC9,
FATNC,
FATNCH,

```


FATNOJ,
LIMIT, FIRST LOCATION OF USER FREE SPACE,
'PLIMIT' IS THE ONLY POINTER TO IT SO THAT CHANGING 'PLIMIT'
IS ENOUGH TO REMOVE THE FUNCTIONS, THE INITIAL DIALOG
DOES THIS ON COMMAND.
PERISYM, THIS IS THE HIGHEST LOCATION OF CHANGEABLE USER STORAGE.
THE PERMANENT SYMBOL TABLE IS JUST ABOVE IT.

ITS FORM IS EXACTLY WHAT IT LOOKS LIKE:
CODE WORD;TEXT 'THE SYMBOLS PRINT NAME'

LINBUF, THE LINE INPUT BUFFER, TRANSLATED LINE STARTS HERE,
THERE IS NO COUNTER FOR THE FULLNESS OF THE LINE EXCEPT WHEN IT
IS JUST COLLECTED,
LBEGIN, MORE OF THE LINE INPUT BUFFER, UNTRANSLATED ASCII COMES IN
STARTING HERE FROM THE TELETYPE,
ENDLIN, THE ASCII CAN EXTEND AS FAR AS 'ENDPDL', BUT THE TRANSLATED
LINE MUST END AT 'ENDLIN',
PDLIST, PUSH DOWN LIST USED ONLY FOR EXPRESSIONS AND THINGS LIKE THAT.
'PDL' POINTS INTO THIS,
ENDPDL, END OF THE PUSH DOWN LIST,
FORLIST, FOR TABLE, A MAXIMUM OF 8 TWO WORD ENTRIES,
A VARIABLE, AND THE LOCATION OF THE 'TO' IN THE 'FOR' STATEMENT.
'FORCT' IS THE ONES COMPLEMENT OF THE NUMBER OF ENTRIES,
GOLIST, GOSUB TABLE, A MAXIMUM OF 8 ENTRIES.
A POINTER TO AFTER THE GOSUB,
'GOSPTR' POINTS INTO HERE TO THE NEXT FREE SPACE,
GSBEND, END OF THE GOSUB TABLE,
7726 THROUGH 7777 ARE UNTOUCHED BY EXECUTION OF BASIC.

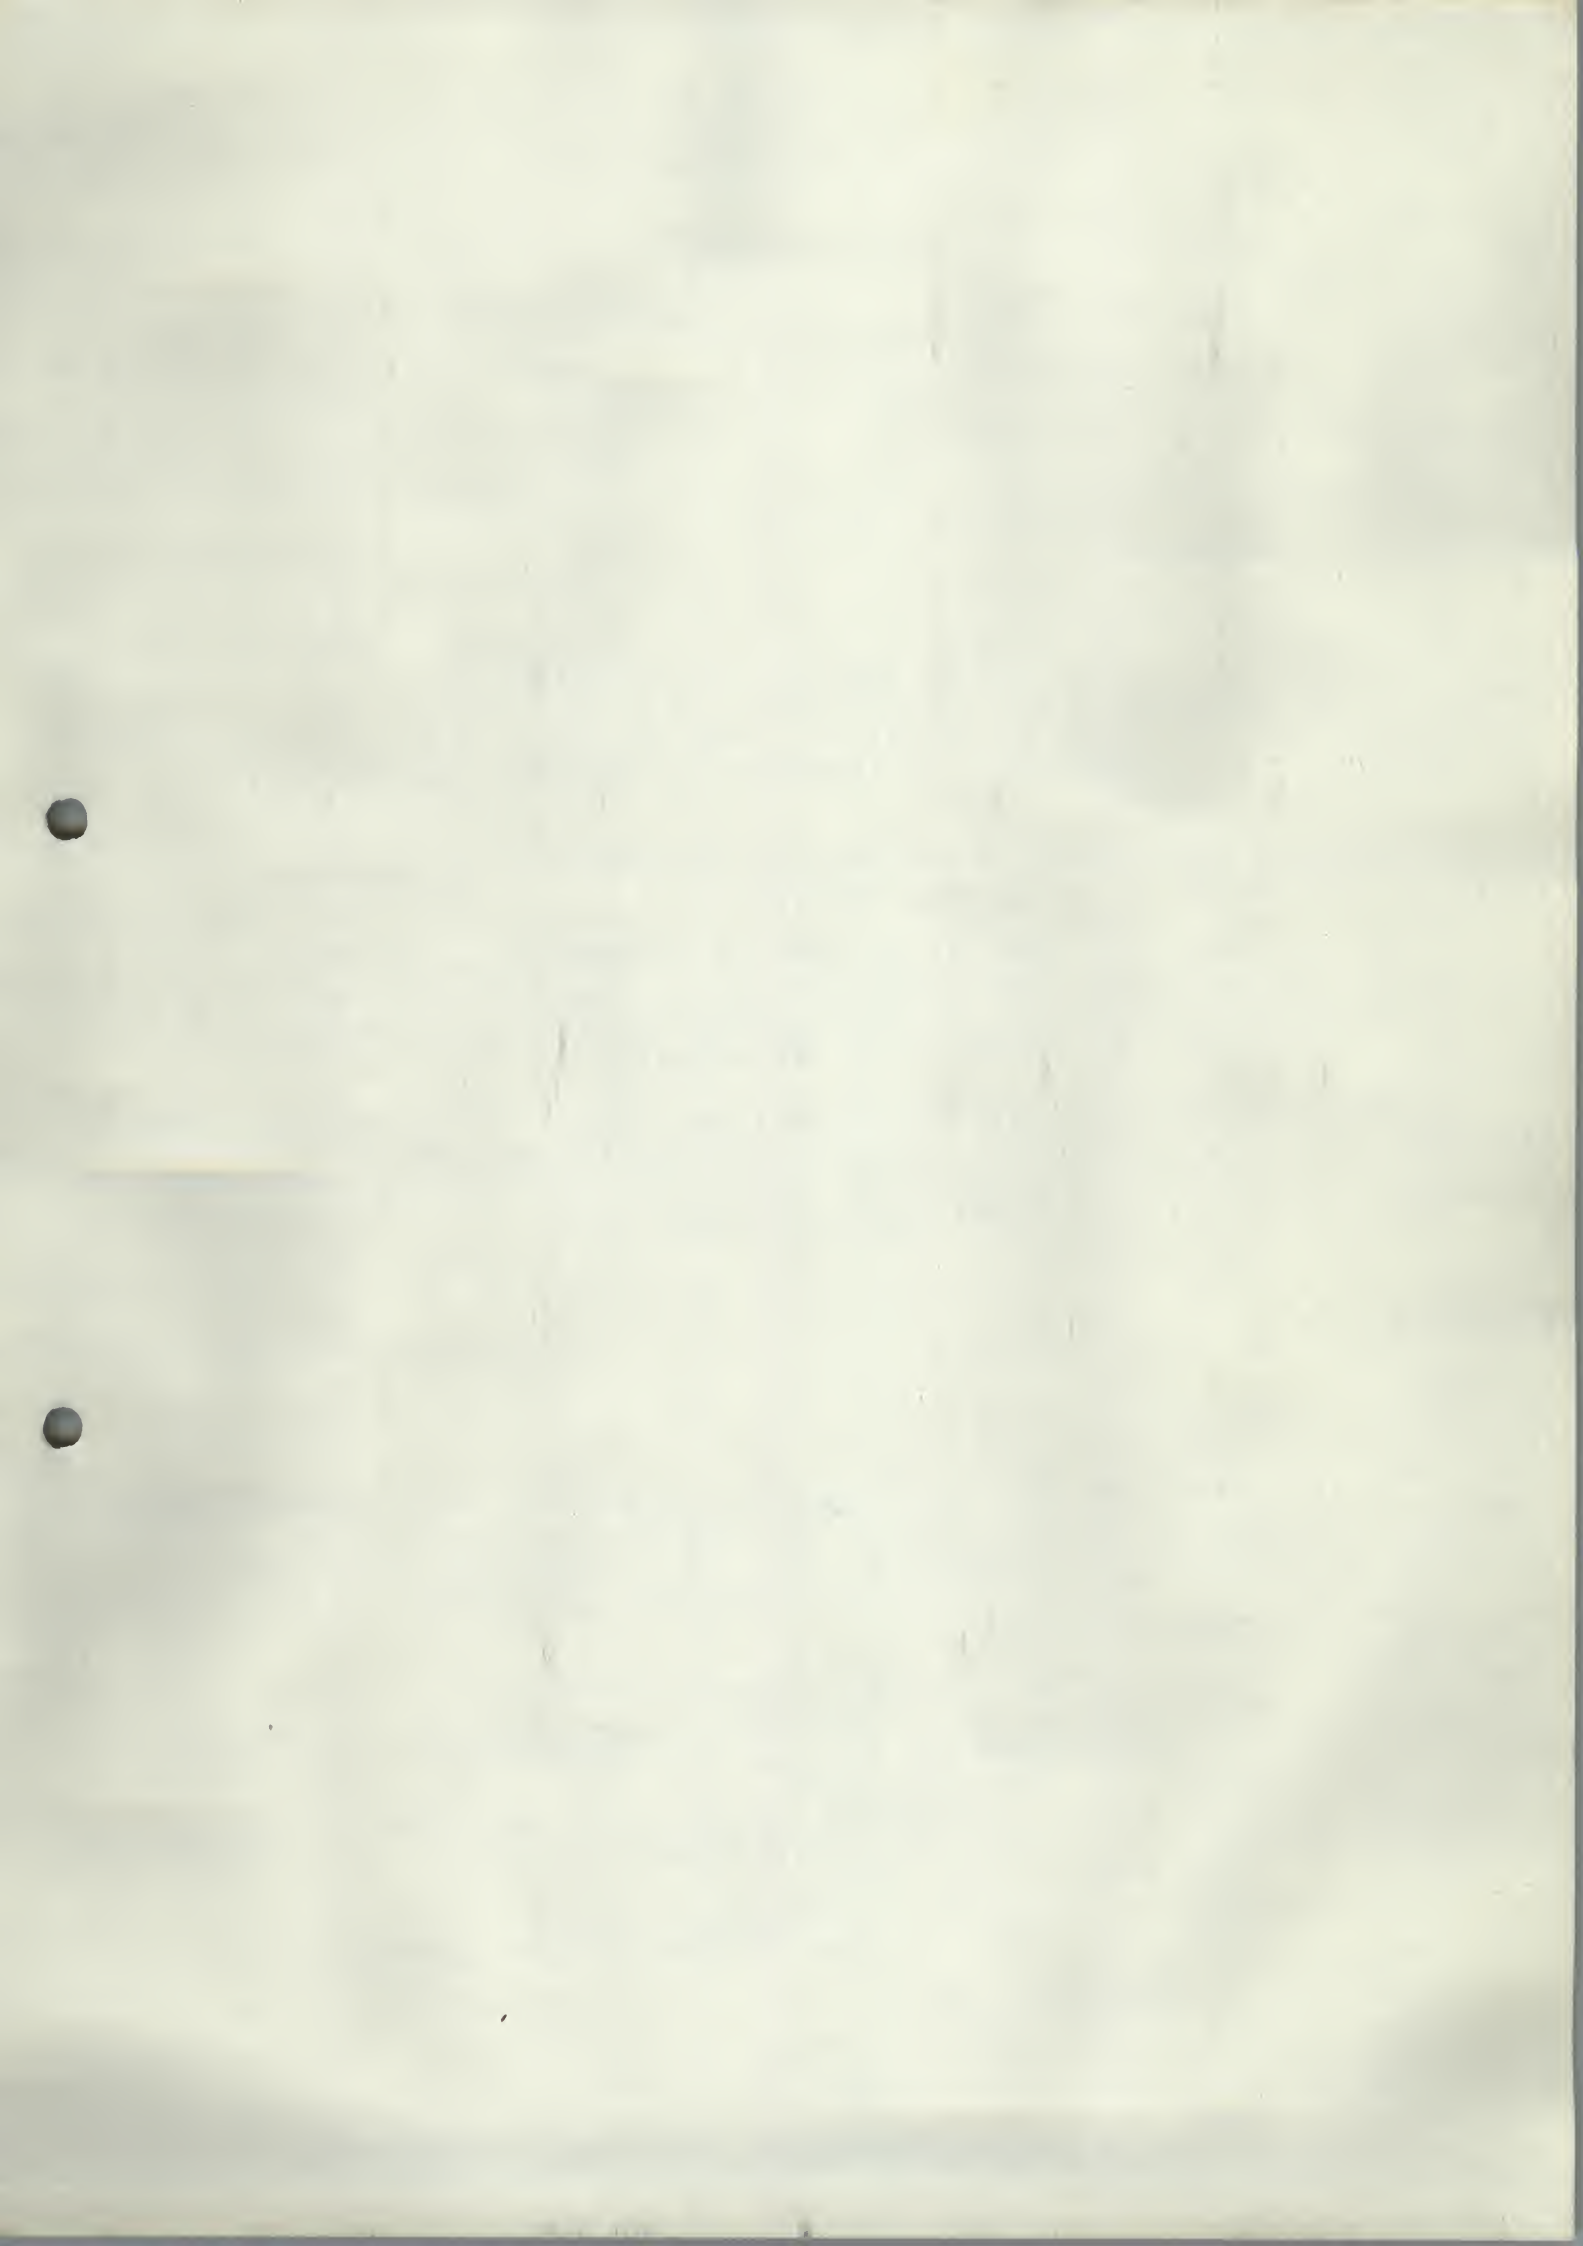

LAB-8/E DOCUMENTATION

THIS IS A DESCRIPTION OF THE INTERNAL WORKINGS OF BASIC FOR THE LAB-8/E. SINCE LAB-8/E BASIC IS A MODIFICATION OF EDUSYS-10 (OTHERWISE KNOWN AS 4K BASIC), THIS DOCUMENT WILL ONLY DESCRIBE THE CHANGES MADE TO EDUSYS-10 TO PRODUCE LAB-8/E BASIC.

LAB-8/E BASIC WORKS APPROXIMATELY THE SAME WAY AS EDUSYS-10 DOES. IT DIFFERS IN THE FOLLOWING RESPECTS:

- 1) LAB-8/E BASIC USES 8K OF CORE AS OPPOSED TO 4K OF CORE.
- 2) LAB-8/E BASIC USES INTERRUPTS AND HANDLES MORE DEVICES.
- 3) LAB-8/E BASIC HAS ADDITIONAL CODE TO HANDLE THE SPECIAL COMMANDS WHICH PERTAIN TO THE LAB-8/E.

WHAT FOLLOWS IS A LIST OF THE CHANGES MADE TO IMPLEMENT THE ABOVE FEATURES. KNOWLEDGE IS ASSUMED OF BASIC AND EDUSYS-10. A BRIEF DESCRIPTION IS PROVIDED AT THE END OF THIS MEMO WHICH DESCRIBES WHAT THE ROUTINES ADDED DO, AND WHAT KEY CORE LOCATIONS MEAN.

1) 8K MODIFICATION.

TO MAKE BASIC USE 8K, THE FOLLOWING CHANGE WAS MADE. IN 4K EVERYTHING RESIDED IN FIELD 0. IN THE 8K VERSION, EVERYTHING FROM THE ARRAY SPACE ON UP NOW RESIDES IN FIELD 1. IN ADDITION, SOME CODE NOW RESIDES IN FIELD ONE TO HANDLE THE CLOCK AND A-D INSTRUCTIONS. THUS A CORE MAP WOULD LOOK LIKE:

00000-10777
11000-17755

- BASIC SYSTEM [ALL CODE NEEDED FOR BASIC]
BASIC SYMBOL AREA. THIS AREA IS THE SAME AS IN 4K BASIC;
IT CONSISTS OF THE FOLLOWING IN THIS ORDER:
- 1) ARRAY AND VARIABLE SPACE
 - 2) FREE SPACE (EVERYTHING 'GROWS' INTO THIS SPACE)
 - 3) CODIFIED (COMPILED) BASIC PROGRAM IMAGE.
 - 4) USER SYMBOL TABLE AREA.
 - 5) BASIC'S PERMANENT SYMBOL TABLE AREA.
 - 6) THE LINERBUFFER (TTY AND TRANSLATED LINE BUFFER)
 - 7) THE STACK.
 - 8) THE FOR-NEXT LIST
 - 9) THE GO SUB LIST.

THUS UPPER CORE IS THE AREA WHERE ALL THE DRIVING TABLES AND PROGRAM-VARIABLE AREAS ARE IN BASIC.

17766-17777

LEFT ALONE (PRESERVED FOR THE RIM LOADER)


ALL OF THE SPACE THAT WAS IN FREE FIELD 0 IS NOW OCCUPIED BY CODE. THE BINARY LOADER MUST BE IN FIELD ONE DURING LOADING. WHEN BASIC IS STARTED, IT WILL DESTROY IT (BECAUSE IT IS IN THE BUFFER AREA). ONLY THE RIM LOADER WILL BE PRESERVED. LAB-8/E BASIC MAY NOT BE LOADED BY PS/8.

NOW THAT THE CORE LAYOUT HAS BEEN ESTABLISHED, THE MODE OF OPERATION WILL BE DISCUSSED. BASIC IN IT'S NORMAL MODE OF OPERATION WILL BE 'DIDDLING' WITH THE SYMBOL TABLE (EITHER THE PERMANENT ONE OR THE USER'S ONE), OR IT WILL BE EDITING, READING IN, OR TRANSLATING A LINE. THE LINE BUFFER IS IN FIELD ONE, AS IS THE SYMBOL TABLE, FOR-NEXT LIST, GO SUB LIST, ETC. THEREFORE, BASIC WILL BE SPENDING MOST OF IT'S TIME IN FIELD ONE. THIS MEANS THAT BASIC'S NORMAL MODE OF OPERATION IS FOR THE DATA FIELD TO BE SET TO FIELD 1. THEREFORE, THE DATA FIELD IS ALWAYS SET TO FIELD ONE EXCEPT IN THOSE RARE INSTANCES WHERE BASIC MUST REFERENCE FIELD 0 DATA INDIRECT. ONE SUCH PLACE WHERE THIS HAPPENS IS THE FLOATING POINT PACKAGE. THE FLOATING POINT PACKAGE SPENDS MOST OF IT'S TIME IN FIELD ZERO MODE. TO FIND OUT WHERE SUCH SPOTS OCCUR, THE CDF INSTRUCTIONS ARE TAGGED WITH THE COMMENT "////////// BK INSERT". THUS IF THE READER IS MODIFYING ONE OF THESE SECTIONS, HE SHOULD BE CAREFUL OF PICKING UP INDIRECT DATA OR EXITING WITH THE DATA FIELD SET INCORRECTLY. ALL TOTALED, THERE ARE RELATIVELY FEW CDF INSTRUCTIONS FOR THE SIZE OF A PROGRAM LIKE BASIC.

II) INTERRUPT I/O

WE NOW COME TO THE SECTION WHICH MAKES THE BIGGEST DIFFERENCE BETWEEN EDUSYS-10 AND LAB-8/E BASIC. INTERRUPT I/O GIVES LAB-8/E BASIC A 'SIMULATED' BETTER RUN-TIME BECAUSE OF BUFFERING AND ALLOWS THE CLOCK TO BE USED IN A REAL-TIME MANNER. A BASIC OVERVIEW FOLLOWS:

IT WAS STATED IN THE PREVIOUS SECTION THAT BASIC SPENDS MOST OF IT'S TIME IN FIELD ONE. THAT IS MOSTLY CORRECT, IF WE TAKE THE WORD 'BASIC' AS MEANING THAT PART WHICH RUNS OR TRANSLATES THE PROGRAM, THERE EXIST OTHER SECTIONS OF THE PROGRAM WHICH RUN WITHOUT EVER REFERENCING ANYTHING IN FIELD ONE. THE I-O ROUTINES ARE ONE OF THESE. THE I-O ROUTINES ARE BASIC'S WAY OF DEALING WITH THE OUTSIDE WORLD. IF BASIC WANTS TO PUT OR GET A CHARACTER, IT CALLS THE I-O ROUTINES TO DO THIS TASK. WHEN THE CHARACTER

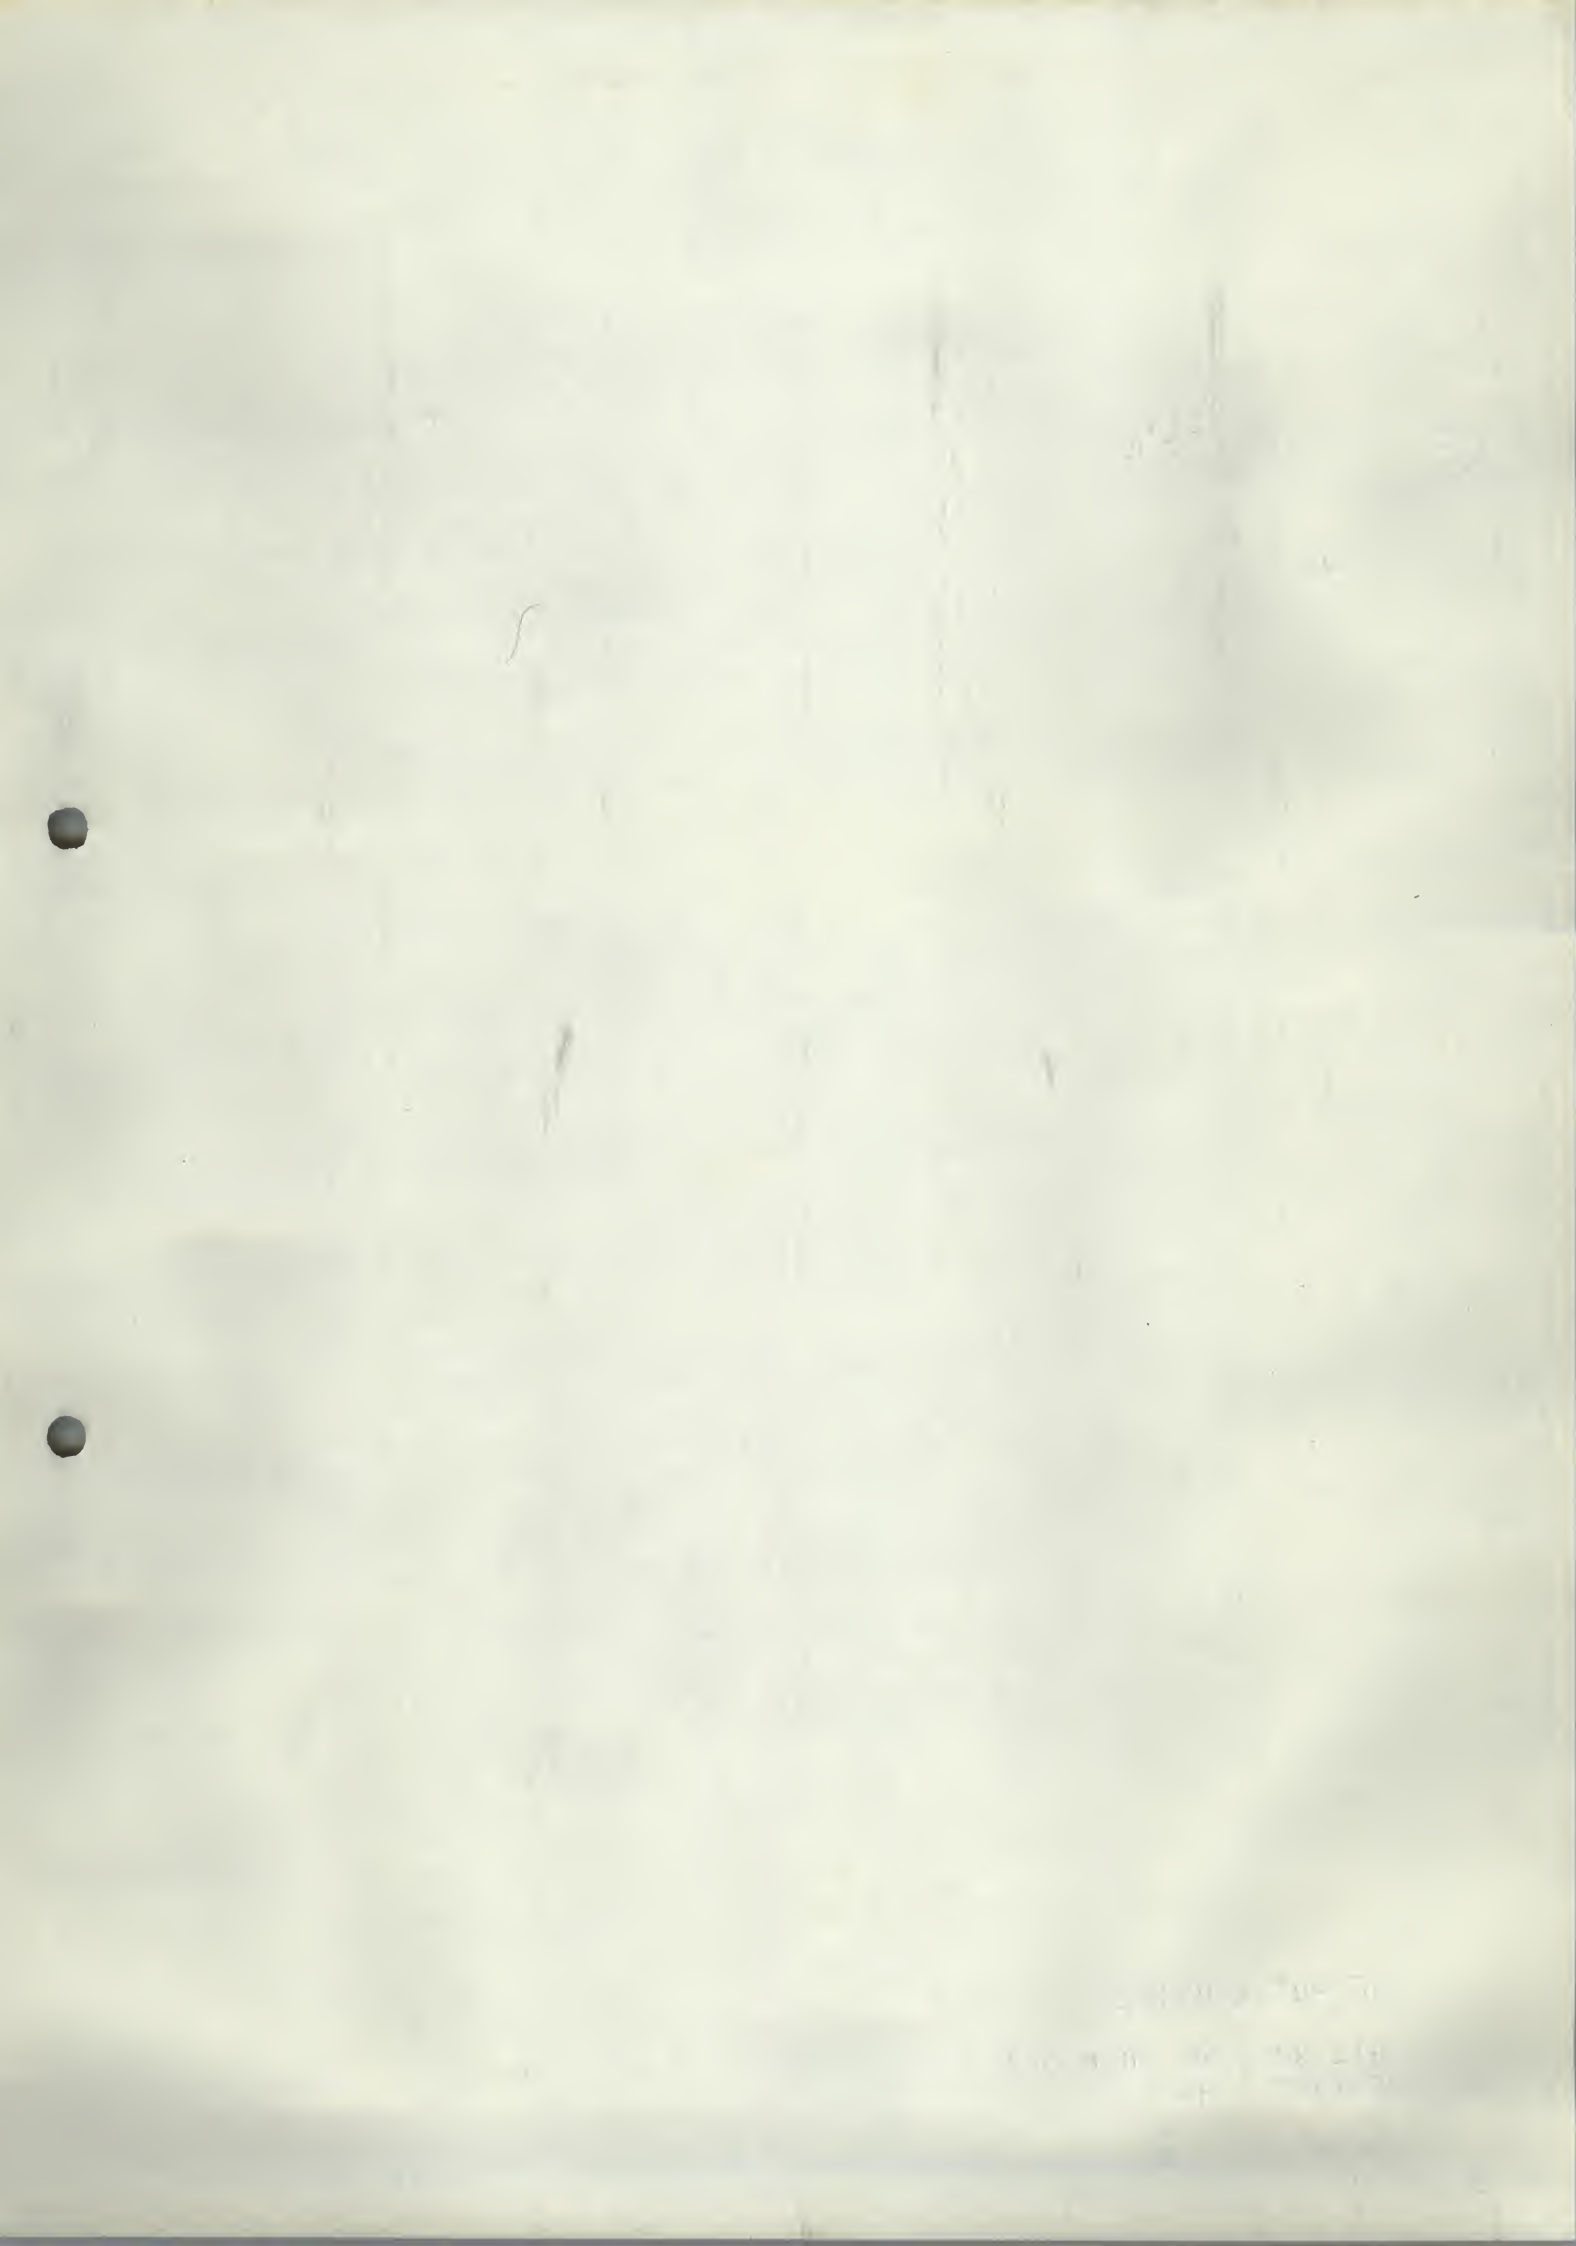

IS PROCESSED). OR WHEN ONE IS TYPED, THE I-O ROUTINES WILL RETURN TO BASIC AND BASIC WILL CONTINUE TO 'RUN' UNTIL IT WANTS ANOTHER CHARACTER OR UNTIL IT WANTS TO OUTPUT ANOTHER CHARACTER. IN REALITY, BASIC IS USUALLY WAITING FOR INPUT, WHEN BASIC CALLS THE I-O ROUTINES, THE I-O ROUTINES CHECK TO SEE IF IT CAN DO WHAT BASIC WANTS. IF IT CAN, IT DOES IT AND RETURNS TO BASIC. IF IT CANNOT, THEN IT WILL WAIT FOR AN INTERRUPT TO OCCUR AND SEE IF IT CAN PROCESS IT. IF IT STILL CANNOT, IT WILL WAIT AGAIN UNTIL THE DESIRED CONDITION IS MET. WHILE WAITING, THE I-O ROUTINES 'PUT BASIC TO SLEEP'. THEY DO THIS BY EXECUTING A LITTLE PROGRAM CALLED NULJOB. NULJOB IS RUN WHENEVER THE I-O ROUTINES ARE WAITING FOR AN INTERRUPT. IN LAB-8/E BASIC, NULJOB IS THE ROUTINE WHICH DISPLAYS THE CONTENTS OF THE DISPLAY BUFFER.

BASIC CALLS THE I-O ROUTINES TO GET OR PUT A CHARACTER, THE USE OF THE SCOPE WILL BE DISCUSSED IN THE NEXT SECTION.

A) THE GET ROUTINE:

THIS ROUTINE REQUESTS THE I-O ROUTINES TO GET A CHARACTER. THERE IS A FLAG ASSOCIATED WITH THIS ROUTINE. THIS FLAG IS CALLED 'INDEV'. INDEV IS EITHER A 1 OR 2. IF IT'S A ONE, THE GET ROUTINE (CALLED GETCH) WILL GET A CHARACTER FROM THE TTY, IF IT'S A TWO, IT WILL GET IT FROM THE HIGH SPEED READER, THE SEQUENCE OF EVENTS IS AS FOLLOWS:

GETCH FIRST CHECKS THE DEVICE FLAG, IF IT'S A ONE, THEN IT CHECKS TO SEE IF A CHARACTER HAS BEEN TYPED. TYPED CHARACTERS ARE LEFT BY THE INTERRUPT ROUTINES IN A LOCATION CALLED 'INCHAR'. IF NO CHARACTER HAS BEEN TYPED, IT CALLS A ROUTINE CALLED 'BIDLE', BIDLE PUTS BASIC TO SLEEP (RUNS THE NULL JOB) UNTIL AN INTERRUPT OCCURS. AFTER BIDLE RETURNS, GETCH AGAIN LOOPS AND CHECKS INCHAR. IF STILL NOT SET, IT PUTS ITSELF TO SLEEP AGAIN.

FOR THE HIGH SPEED READER, THE SEQUENCE IS DIFFERENT. THE ROUTINE 'GWHERE' FIRST REQUESTS A CHARACTER FROM THE HIGH SPEED READER. IT THEN INCREMENTS A COUNTER AND TESTS THE WORD 'HRCHAR'. ON AN INTERRUPT FROM THE HIGH SPEED READER, THE INTERRUPT ROUTINES PLACE THE CHARACTER IN HRCHAR. IF GWHERE GETS A CHARACTER FROM HRCHAR BEFORE TIME RUNS OUT, IT JUMPS TO THE MIDDLE OF GETCH. IF TIME RUNS OUT, THEN IT PRINTS THE MESSAGE 'TTY' ON THE TTY, AND THEN RESETS INDEV TO 1, AND THEN JUMPS TO NEAR THE BEGINNING OF GETCH TO WAIT FOR A TTY CHARACTER.

ASSUME THAT WE ARE NOW IN GETCH WITH A CHARACTER, WE NOW 'MASK' ALL ALTMODES INTO 175. IF RUBOUTS ARE SELECTED, WE MASK 177'S INTO 137'S. BACKSPACE (210) IS ALSO MASKED INTO 137. THUS SOME PRE-EDITING IS DONE ON THE CHARACTER, IT IS THEN RETURNED IN THE AC FROM GETCH.

) THE PUT ROUTINE:

THIS ROUTINE PRINTS A CHARACTER ON THE DESIRED OUTPUT DEVICE. IT IS A LOT MORE COMPLEX THAN GET. LIKE GET, THERE IS A FLAG ASSOCIATED WITH THE OUTPUT DEVICE. IT IS CALLED 'OUTDEV'. OUTDEV RANGES FROM 0 TO 3. 0 IS NO OUTPUT, 1 IS TTY OUTPUT, 2 IS PTP OUTPUT, AND 3 IS LPT OUTPUT. 'PUTER', THE OUTPUT ROUTINE, IS FULLY BUFFERED.

THEREFORE, IT IS POSSIBLE TO STORE AWAY CHARACTERS IN IT'S BUFFER TO BE OUTPUT LATER. THE BUFFER IS LOCATED AT OBLOW TO OBHIGH, THEREFORE, TO PREVENT DEVICE MIX-UPS, PUTER HAS IT'S OWN OUTPUT FLAG. IT IS CALLED 'ODEV'. ODEV CONTAINS THE NUMBER OF THE DEVICE WHICH IS NOW USING THE BUFFER. SHOULD PUTER BE CALLED TO PRINT A CHARACTER ON A DEVICE THAT IS DIFFERENT FROM THE ONE WHICH IS NOW USING THE BUFFER, PUTER WILL WAIT (VIA BIDDLE) UNTIL THE BUFFER IS EMPTY, THEN IT WILL CONTINUE. THERE ARE TWO OTHER POSSIBILITIES. ONE IS THAT THE BUFFER IS EMPTY, THE OTHER IS THAT THERE ARE CHARACTERS IN IT BUT GOING TO THE SAME DEVICE. IF THE BUFFER IS EMPTY, PUTER 'ASSIGNS' THE BUFFER TO THE DEVICE AND CALLS 'OUTIT' TO OUTPUT THE CHARACTER. OUTIT REMOVES ONE CHARACTER FROM THE BUFFER AND OUTPUTS IT, IF IT'S POSSIBLE. IF THERE ARE CHARACTERS IN THE BUFFER, THEN PUTER MERELY STICKS THE CHARACTER IN THE BUFFER AND RETURNS. THERE IS ONE OTHER FLAG ASSOCIATED WITH THE BUFFER THAT SHOULD CONCERN THE READER, IT IS CALLED 'CNTLO' AND IS THE CONTROL 0 FLAG. THIS FLAG ESSENTIALLY SAYS WHETHER OR NOT WE ARE UNDER A CONTROL 0 (SUPPRESS OUTPUT). IF WE ARE INDEED UNDER A CONTROL FLAG, THEN WE DO NOT PROCESS CHARACTERS. INSTEAD WE JUST RETURN IMMEDIATELY.

C) THE INTERRUPT CHAIN:

THIS IS THE ROUTINE WHICH CHECKS THE DEVICES ON AN INTERRUPT. IT BASICALLY DOES THE FOLLOWING. IT FIRST SAVES THE STATE OF THE MACHINE (AC, LINK, ETC.). IT THEN DOES IOT'S TO FIND OUT WHICH DEVICE IS INTERRUPTING. IF IT CANNOT FIND IT, IT HALTS (A FATAL ERROR). IF IT DOES FIND IT, IT GOES TO THE CORRECT ROUTINE, ON AN OUTPUT FLAG (TTY, LPT, PTP) IT CLEARS THE FLAG AND THEN CALLS OUTIT TO PRINT THE NEXT CHARACTER. ON A HIGH SPEED READER INTERRUPT, IT PUTS THE CHARACTER IN HCHAR. ON TTY INTERRUPT, IT CHECKS TO SEE IF IT'S A CONTROL CHARACTER (*C OR *D). IF IT ISN'T, IT MERELY PLACES THE CHARACTER IN INCHAR. IF IT IS A *D, THEN IT SETS THE CNTLO FLAG AND CALLS 'OUTDEL' TO DELETE THE PRESENT OUTPUT BUFFER. IF IT'S A *C, IT CHECKS NOINT (DISCUSSED AT THE END). IF IT'S OK TO STOP BASIC NOW, IT THEN RESETS BASIC WITH A STOP-READY MESSAGE AND GOES TO EDIT (THE EDITOR PORTION). THE ONLY OTHER DEVICE IN THE INTERRUPT CHAIN IS THE CLOCK, WHICH WILL BE DISCUSSED LATER. TO EXIT FROM AN INTERRUPT, 'INTEXT' RESTORES THE MACHINE (AC, LINE, ETC.).

1) LAB-8AE ADDITIONS:

THE LAB-8AE ADDITIONS ARE BASICALLY A SERIES OF COMMANDS WHICH OPERATE ON THE LAB-8AE PERIPHERALS. SINCE THE READER IS FAMILIAR WITH USYS-10, THE ACTUAL IMPLEMENTATION WILL NOT BE DESCRIBED. JUST THEIR RELATIONSHIP WITH THE REST OF BASIC WILL BE DESCRIBED.

- A) THE NULL JOB (OR NULJOB). THIS ROUTINE IS CALLED WHENEVER BASIC IS WAITING FOR SOMETHING TO HAPPEN. IT RUNS THE SCOPE IN LAB-87E BASIC. IT IS ALSO CALLED VIA THE "DELAY" COMMAND. THE DIFFERENCE IS JUST IN THE MANNER OF EXIT. THE FLAG 'NDELAY' CONTROLS THAT. NULJOB CHECKS TO SEE IF THERE IS A PLOTTING BUFFER ASSIGNED. IF THERE IS (DISB IS NON-ZERO) THEN IT WILL SET UP DISAUTO TO BE DISB. IT WILL THEN TAKE OUT X-Y PAIRS OF POINTS AND DISPLAY THEM. A MINUS ENTRY IS THE END OF LIST INDICATOR. ON END OF LIST, IT GOES BACK TO NULJOB AND CHECKS NDELAY TO SEE IF IT SHOULD RETURN TO THE CALLER. IF NOT, IT THEN RESTARTS ALL OVER AGAIN BY RECHECKING DISB.
- B) THE PLOT STATEMENT.
WHENEVER A PLOT COMMAND IS ENCOUNTERED, BASIC GOES TO 'PLOT'. PLOT FIRST CHECKS TO SEE IF A BUFFER IS ASSIGNED. IF ONE IS NOT ASSIGNED, IT ASSIGNS SPACE BY CHANGING ARRLOC. IT THEN CALLS PLOTB TO SET UP THE CORRECT BUFFER WORDS. WHEN A BUFFER IS PRESENT, PLOT CALLS MEVAL. MEVAL EVALUATES AN EXPRESSION. IT THEN MULTIPLIES THIS EXPRESSION BY FSHIFT FOR CORRECT SCREEN SCALING. IT THEN CALLS DBLIT TO PLACE IN THE SCOPE BUFFER. IT THEN GOES THE SAME FOR THE Y VALUE (EXCEPT NOT MULTIPLYING). WHEN ALL IS DONE, IT THEN GOES TO DEVCON TO CLEAN UP THE COMMAND.
- C) THE USE STATEMENT.
THIS STATEMENT ALLOCATES A SCOPE BUFFER IN BASIC. IT FIRST CHECKS TO SEE IF A BUFFER IS ASSIGNED. IF ONE IS, IT RETURNS. IF ONE ISN'T, THEN IT CALLS GETARY TO FIGURE OUT THE SIZE OF THE ARGUMENT AND TO ALLOCATE THE SPACE [ACTUALLY, IT'S ALREADY ALLOCATED]. IT THEN SETS DISB TO THE CORRECT ADDRESS AND THEN CALLS PLOTB TO SET UP BUFFER. IT THEN EXITS TO DEVCON.
- D) THE CLEAR COMMAND.
THIS STATEMENT CAUSES THE SCOPE BUFFER TO BE CLEARED. IF THERE IS A BUFFER PRESENT (DISB<>0), THEN IT PLACES AN ABORT CODE (4000) AS THE FIRST INSTRUCTION IN THE BUFFER. NULJOB WILL STOP DISPLAYING ON THIS, HENCE NOTHING WILL BE DISPLAYED.
- E) THE TST FUNCTION.
THE TST FUNCTION TESTS WHETHER OR NOT A CHARACTER HAS BEEN TYPED BY PLACING 'INCHAR' IN AC3 AND THEN NORMAL ZING IT. BECAUSE INCHAR IS ALWAYS ZERO IF NO CHARACTER HAS BEEN TYPED AND IS ALWAYS NON-ZERO IF A CHARACTER HAS BEEN TYPED, THIS MAKES TST BEHAVE AS DESIRED AND DESCRIBED.
- F) THE GET AND PUT FUNCTIONS.
THE GET AND PUT FUNCTIONS PERFORM THERE TASKS BY MERELY CALLING PUTER AND GETCH WITH THE CORRECT ITEM IN THE AC. THEY INSERT-REMOVE THE 8 BIT CHARACTER FROM AC3. FAIRLY TRIVIAL ROUTINES.
- THE RUBOUTS AND NO RUBOUTS COMMANDS.
THESE COMMANDS SET THE VARIABLE RBSWCH TO A 1 OR 0 DEPENDING ON WHETHER OR NOT TO PROCESS RUBOUTS. THE ROUTINE GETCH TESTS THIS FLAG WHEN INPUTING CHARACTERS.
- G) THE TAB FUNCTION.
THIS FUNCTION IS THE FUNCTION WHICH CAN POSITION THE PRINT

HEAD TO THE DESIRED POSITION. IT CONSIST OF TWO PARTS. THE FIRST IS THE ACTUAL TAB FUNCTION, THE SECOND IS CALLED 'TABDO' AND IS CALLED BY PRINT AFTER EVALUATING AN EXPRESSION IF THE TABFLG IS SET. WHAT HAPPENS IS AS FOLLOWS: WHEN TAB IS CALLED, IT FIRST FIXES THE ARGUMENT. IT THEN SETS 'TABFLG' TO INDICATE THAT WE HAVE PROCESSED A TAB FUNCTION. IT THEN GETS THE PRESENT POSITION OF THE PRINT HEAD FROM 'COLUMN' AND RETURNS THIS AS THE FUNCTION VALUE. THUS TAB CAN BE USED AS A REGULAR FUNCTION. IT THEN RETURNS TO THE CALLER. THE PRINT STATEMENT PROCESSOR CHECKS TABFLG AFTER EVALUATING AN EXPRESSION. IF IT'S SET (NON-ZERO) THEN IT GOES TO TABDO. TABDO PICKS UP WHERE WE WANT TO GO TO (LEFT IN 'TABDES' BY TAB) AND FIGURES OUT WHERE WE ARE BY USING COLUMN. IF WE ARE TOO FAR IT GIVES A CARRIAGE RETURN AND A NULL CHARACTER (TO PREVENT TIMING PROBLEMS). IT THEN SPACES OVER THE CORRECT NUMBER OF SPACES. WHEN DONE IT RETURNS TO 'PRINT+1' TO FINISH PROCESS THE COMMAND. NOTE THAT WE CANNOT RETURN TO THE SECTION WHICH CALLED IT BECAUSE IT WILL PRINT OUT A VALUE (SUCH AS 23) BECAUSE IT WILL TAKE THE EVALUATED NUMBER AND CONVERT IT TO ASCII.

THE FOLLOWING COMMANDS ARE ALL DONE IN (RESIDE) IN FIELD 1.

THE ADC FUNCTION.

THIS FUNCTION (RENAMED ZADDC) CALLS THE ROUTINE UADCB WITH A ZERO AC. UADCB IS THE GENERAL A-D DISPATCHER. UADCB HAS TWO COURSES OF ACTION DEPENDING ON THE AC. THE USER SHOULD READ IT'S DESCRIPTION AT THE END. UADCB WILL RETURN WITH THE CORRECT ADC VALUE IN THE FAC. IT WILL THEN RETURN TO THE CALLER.

THE SET RATE COMMAND.

THIS COMMAND SETS THE CLOCK GOING FROM THE ARGUMENTS. IT FIRST CALLS MEVAL (VIA UMEVAL) TO GET THE RATE (0-7). IT THEN PLACES THIS IN THE COMMAND REGISTER ALONG WITH A 5010. THESE ARE THE CORRECT HARDWARE FLAG BITS TO RUN IN 'NORMAL' CLOCK MODE. IT THEN JUMPS TO USETM. USETM WILL EVALUATE THE NEXT EXPRESSION (VIA UMEVAL) AND WILL THEN LOAD THE CLOCK REGISTER WITH THIS NUMBER. IT THEN CLEARS THE TWO TIME REGISTERS (TIM1 AND TIM2). THESE ARE INCREMENTED EVERY TIME A CLOCK TIC OCCURS. IT THEN RETURNS TO THE CALLER.


THE SET CLOCK COMMAND.

THIS IS SIMILAR TO THE SET RATE COMMAND EXCEPT THAT THE ENTIRE 12 BITS OF THE MODE THE USER HAS SPECIFIED IS USED. JUST BIT 8 IS SET ON TO INSURE INTERRUPTS. THEN IT GOES TO USETM.

THE WAITC COMMAND.

THIS COMMAND WAITS FOR A CLOCK TIC. IT FIRST PICKS UP THE LOW ORDER WORD OF THE CLOCK COUNTER (TIM2) AND SAVES IT IN UTEMP. IT THEN CALLS BIDDLE TO PUT BASIC TO SLEEP. WHEN IT'S AWAKENED, IT SEES IF THE TIME HAS CHANGED. IF IT HAS, IT RETURNS VIA DEVCOM. IF IT HASN'T, IT GOES TO SLEEP AGAIN.

- M) THE WAIT COMMAND.
THIS IS INTERNALLY IDENTICAL TO THE WAITC COMMAND. IT "FUDGES" THE TIME [TIM2] SO THAT WHEN AN INTERRUPT OCCURS, IT LOOKS LIKE THE TIME HAS RUN OUT AND RETURNS.
- N) THE ACCEPT COMMAND.
THE ACCEPT COMMAND WILL SET THE ACCEPT DATA SWITCH [ADACPT] IF AND ONLY IF WE HAVE A GOOD, CLEAN BUFFER [ABDGET>0]. IF WE DO NOT, WE FALL THROUGH TO THE 'REJECT' COMMAND.
- O) THE REJECT COMMAND.
THE REJECT COMMAND CLEARS THE ACCEPT DATA FLAG [ADACPT]. IT RETURNS TO BASIC VIA DEVCOM.
- P) THE REAL TIME COMMAND.
THIS COMMAND IS ONE OF THE MORE HAIRY OF THE NEW LAB-B/E BASIC COMMANDS. THE FOLLOWING IS WHAT OCCURS. IT FIRST CHECKS TO SEE IF WE ARE ACCEPTING DATA. IF WE ARE, THE COMMAND IS IGNORED [VIA SKIPIT]. IF WE ARE NOT ACCEPTING DATA, WE CALL GETARY TO GET US THE AREA THE USER REQUESTED. THIS DONE, WE THEN USE THIS INFORMATION TO SET THE BUFFER POINTERS [APUT1 AND APUT2] AND THE BUFFER LIMIT CONTROL INFORMATION [ADA1, ADA2, AND ADA3]. WE THEN GET THE CHANNEL NUMBER TO START [VIA UMEVAL] AND PLACE IT IN ADCX. WE THEN GET THE NUMBER OF CHANNELS TO USE AND PLACE IT IN ADCUNT. WE FINALLY GET THE NUMBER OF TIME COUNTS TO DO AND LEAVE IT IN CT1, CT2 AND CT3. REMEMBER THAT THE TIME IS DOUBLE WORD, HENCE THE DOUBLE WORD ARITHMETIC AT THIS POINT, CT1 IS USED TO GIVE US A THREE WORD ZERO COUNTER SHOULD THE USER PUT IN 0 AS NUMBER OF COUNTS. NOTE THAT 2*36 IS A VERY LONG TIME. WE THEN ZERO OUT THE NUMBER OF SAMPLES PRESENTLY IN THE BUFFER [ACOUNT] AND TELL THE SYSTEM THAT WE'VE GOT A GOOD BUFFER [ABDGET >0].
- Q) THE TIME FUNCTION [TIM]
THE TIME FUNCTION RETURNS THE NUMBER OF TICS, EVERY TIME THE CLOCK INTERRUPTS, CLOCKI (THE CLOCK INTERRUPT ROUTINE) INCREMENTS TIM2 AND THEN TIM1. TIM RETURNS THIS TIME IN THE AC.
- R) THE ADB FUNCTION.
THIS FUNCTION CALLS UADCB WITH THE AC ALL 7777'S. UADCB WILL BE DESCRIBED NOW. UADCB IS THE MASTER A-D FUNCTION SWITCHER. UADCB EITHER DOES AN IMMEDIATE ADC IF THE AC IS ZERO OR WILL ATTEMPT TO GET A SAMPLE FROM THE USER'S A-D BUFFER IF THE AC IS NON-ZERO. IF THE AC IS ZERO, IT WILL CALL DOAD WITH THE INTEGERIZED AC3 (BITS 9-11). DOAD DOES AN A-D CONVERSION ON THE CHANNEL IN THE AC. IT THEN RETURNS THIS VALUE IN THE AC. UADCB THEN GOES TO UINAC, WHERE THE A-D VALUE IS PLACED IN THE FAC, NORMALIZED AND THEN BROUGHT INTO THE CORRECT NUMERIC RANGE (-1.V TO +1.V), THE FUNCTION THEN RETURNS. IF THE AC IS NOT ZERO (FOR AN ADB), IT CHECKS TO SEE IF THE BUFFER IS ACTIVE. IF NOT, AN ERROR IS GIVEN. IT THEN CHECKS TO SEE IF THE BUFFER IS ACTIVE, BUT THE TIME HAS RUN OUT. IF SO, ANOTHER MESSAGE IS GIVEN. IF ALL IS WELL, IT CALLS AGET TO GET AN A-D VALUE FROM THE USERS BUFFER. AGET IS MERELY THE RING BUFFER REMOVER. IF NOTHING IS IN THE BUFFER [ACOUNT=0], THEN AGET WILL PUT BASIC TO SLEEP. AGET RETURNS WITH CONVERTED NUMBER IN AC. UADCB THEN GOES TO UINAC WHICH WAS DESCRIBED ABOVE.

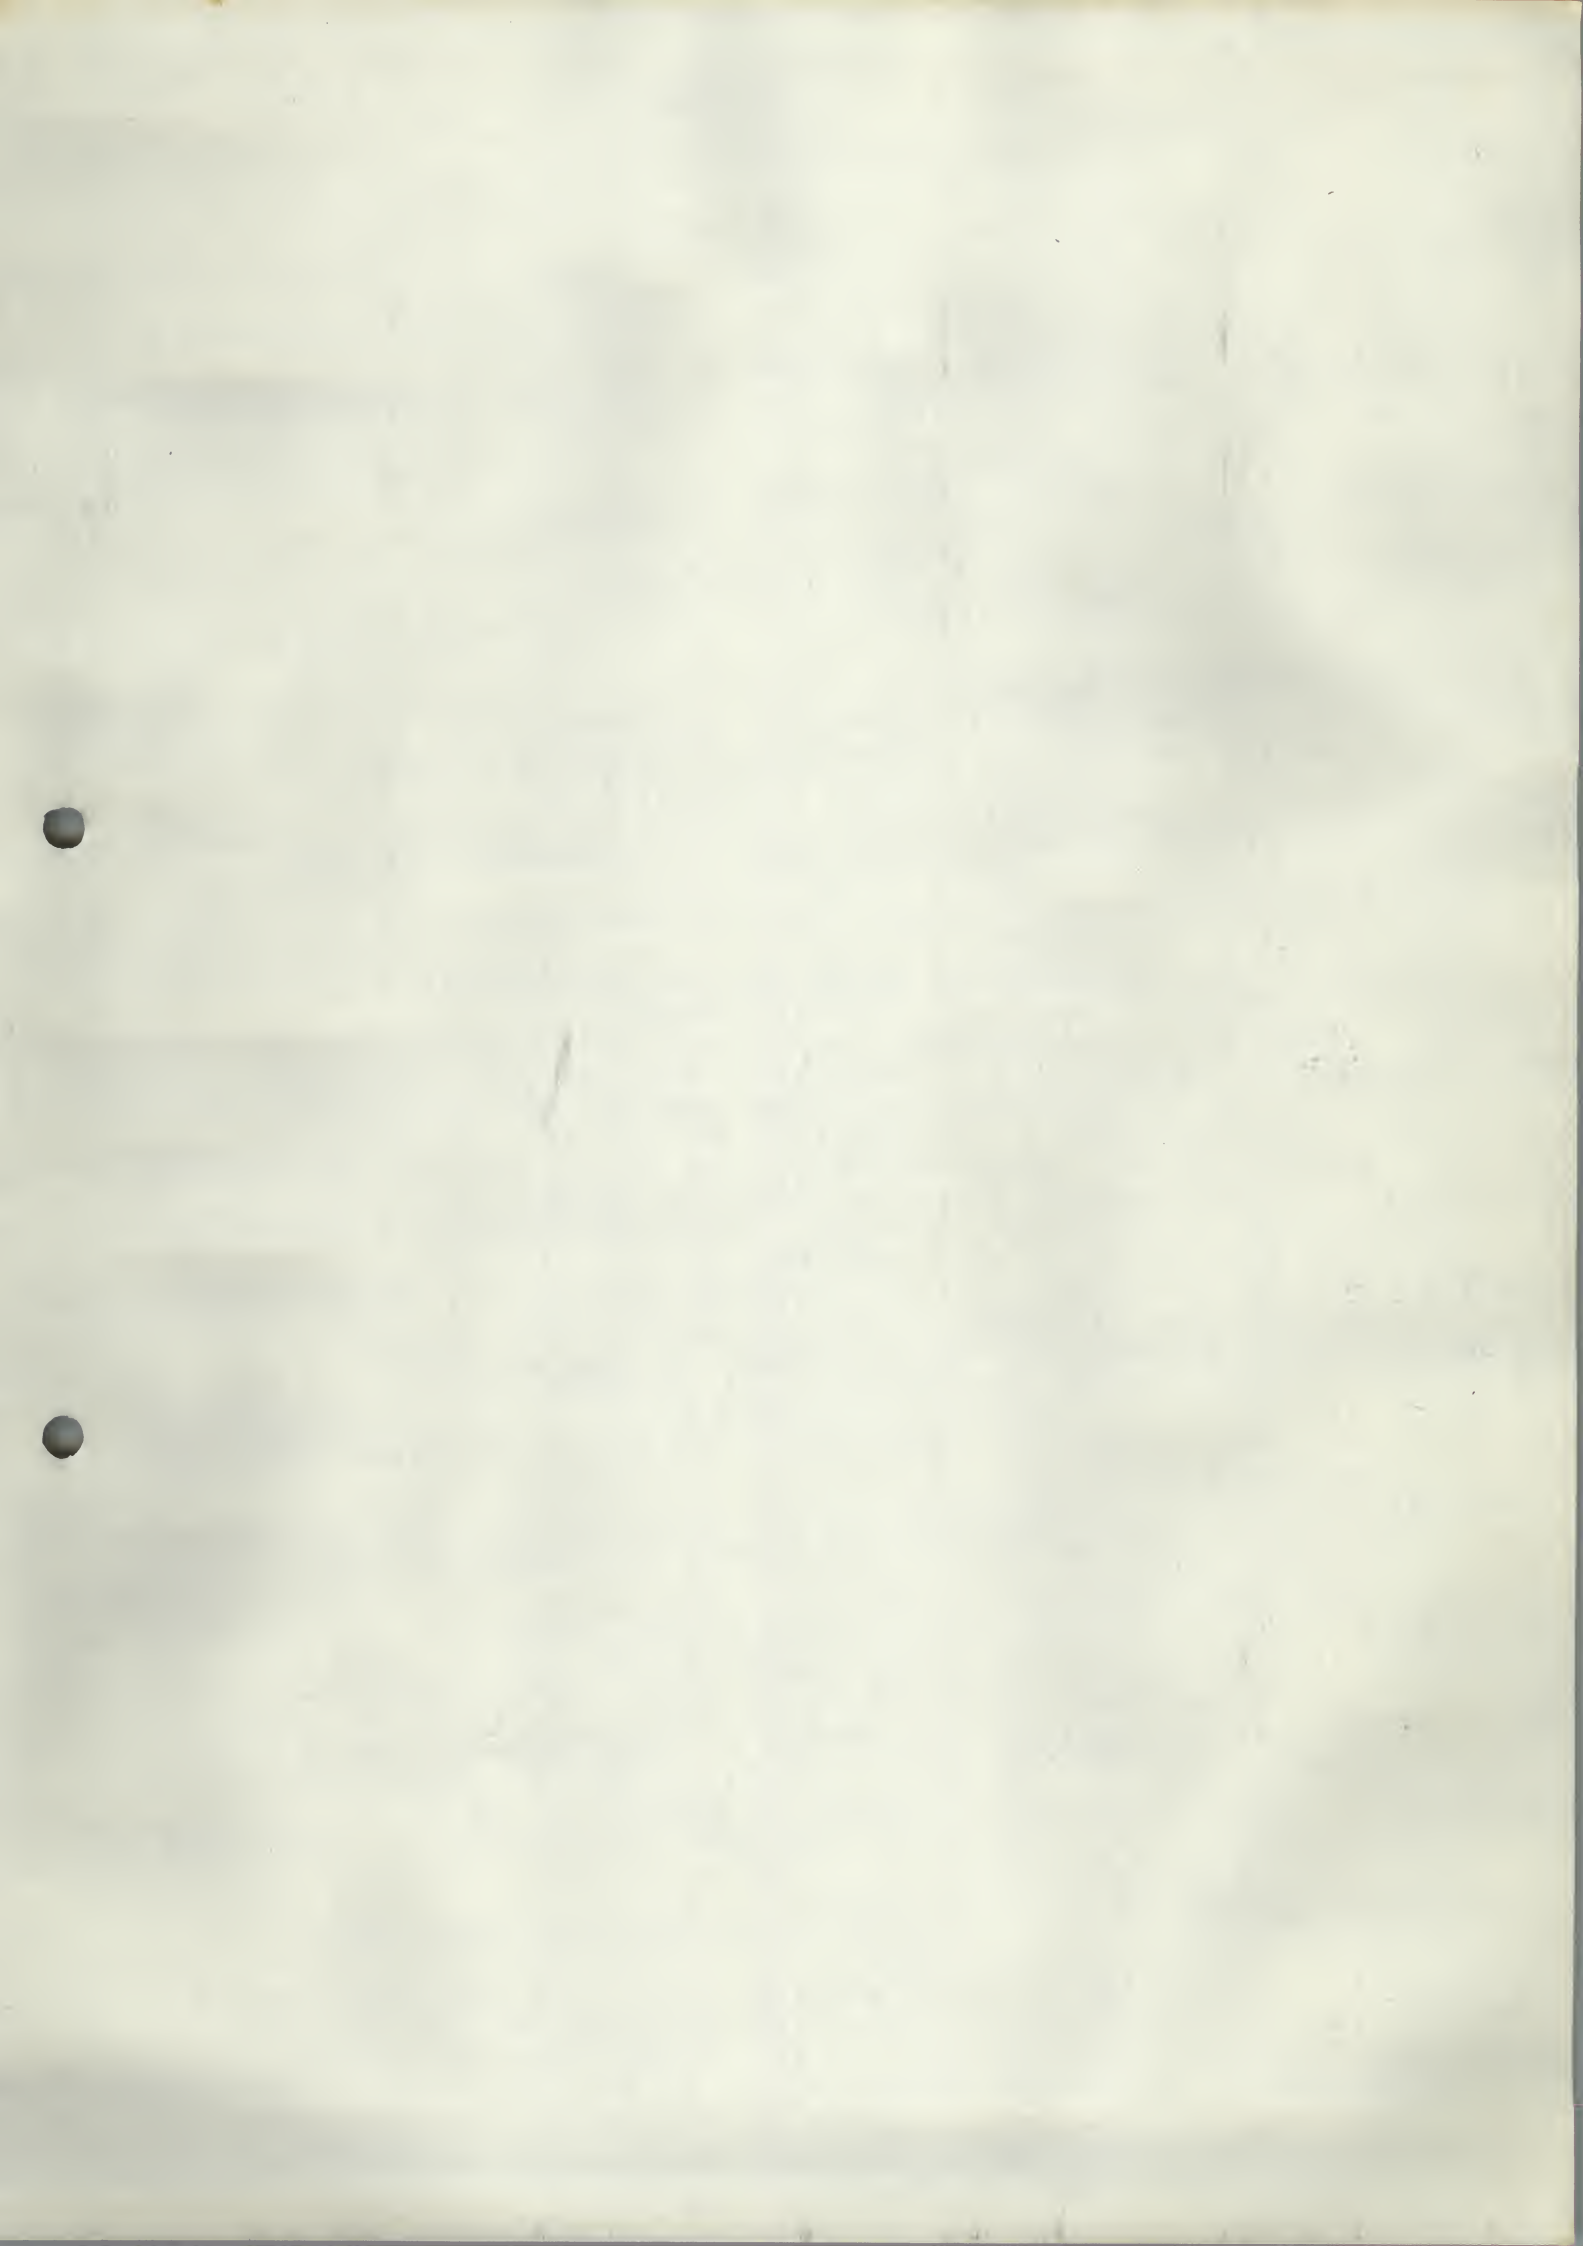

IMPORTANT ROUTINES AND LOCATIONS.

1) PAGE ZERO LOCATIONS.

0-2 USED FOR INTERRUPT VECTOR.
 DISAUTO, ADDRESS REGISTER USED AS POINTER TO NEXT ITEM TO BE
 DISPLAYED (EITHER AN X OR Y POINT), FOUND IN NULJOB.
 INDEV, CONTAINS INPUT DEVICE NUMBER (1=TTY, 2=PTR)
 OUTD2, CONTAINS OUTPUT DEVICE WHILE ACCEPTING AND ECHOING
 INPUT FROM THE TTY. IN OTHER WORDS, A TEMPORARY ASSIGNED
 JUST TO HOLD THE 'REAL' OUTPUT DEVICE.
 OUTDEV, OUTPUT DEVICE THE ROUTINES WILL USE (0=NOTHING,
 1=TTY, 2=PTP, 3=LPT)
 ODEV, OUTPUT DEVICE CURRENTLY BEING USED BY THE BUFFER.
 CNTLC, THE CONTROL C FLAG (+C). IF 0, NO CONTROL C.
 NOINT, A LOCATION WHICH TELLS WHETHER OR NOT THE +C CHARACTER CAN
 INTERRUPT BASIC. CERTAIN PROCESSES (SUCH AS CORE JUGGLING)
 CANNOT BE INTERRUPTED. THEREFORE THEY SET THE NOINT SWITCH TO
 A 0001. WHEN DONE, THEY RESET IT TO A 0. IF A +C SHOULD BE
 STRUCK, IT WILL NOT STOP BASIC, BUT IT WILL SET THE NOINT SWITCH
 TO A 7777. WHEN WE LEAVE THE CRITICAL PROCESS, NOINT WILL BE
 CHECKED TO SEE IF IT CONTAINS A 7777, AND IF SO, WE PROCEED AS
 IF A CONTROL C HAD JUST BEEN STRUCK.
 RBSWCH, THIS IS THE RUBOUTS SWITCH. 0=IGNORE RUBOUTS, <> TREAT
 RUBOUTS LIKE BACK-ARROWS (+), WHICH IS SHIFT O.
 DISB, ADDRESS OF PRESENT DISPLAY BUFFER. IF NONE IS PRESENT, THIS
 LOCATION IS ZERO. BUFFER IS ALWAYS IN UPPER CORE.
 PRESET, THIS POINTS TO A ROUTINE WHICH RESETS ALL FLAGS BACK TO TTY
 INPUT AND OUTPUT AND CLEANS UP THE BUFFERS, NECESSARY AFTER AN
 ERROR OCCURS.
 SPECINT, THIS POINTS TO SUBROUTINE WHICH CHECKS FOR ADDITIONAL DEVICE
 INTERRUPTS BESIDES THE STANDARD ONES. THE CLOCK TEST IS
 LOCATED THERE.
 PCONT, THIS POINTER POINTS TO A ROUTINE WHICH
 WAITS FOR OUTPUT TO TERMINATE (THE BUFFER EMPTY). THIS IS
 NECESSARY BECAUSE OTHERWISE ERROR AND/OR LISTING CONTROL
 INFORMATION MIGHT BE LOST IF A CONTROL C IS HIT AT THE WRONG
 TIME. IT ALSO RESETS THE CONTROL C FLAG. THIS ROUTINE IS ALSO
 FREQUENTLY USED BY THE LIST * OPTION TO SET THE NULL AFTER
 CARRIAGE RETURN FLAG [PUTXRA]. IT STORES THE AC
 IN PUTXRA FIRST, THEN WAITS FOR OUTPUT TO TERMINATE. HENCE THIS
 IS A TWO FOLD ROUTINE.
 DELOUT, THIS POINTS TO A ROUTINE WHICH
 DELETES THE CURRENT CONTENTS OF THE OUTPUT BUFFER, USED
 FREQUENTLY BY MANY ROUTINES.
 CNCLR, THIS ROUTINE TESTS AND CLEARS THE NOINT FLAG DISCUSSED EARLIER.
 SLEFT, THIS POINTER POINTS TO SUBROUTINE WHICH DETERMINES WHETHER OR
 NOT A GIVEN OPERATION WILL OVERFLOW FREE CORE. THE AMOUNT OF
 ROOM YOU WISH TO TAKE SHOULD BE IN THE AC. IF NO ROOM,
 THEN AN ERROR MESSAGE IS GIVEN.

(II) NEW OR CHANGED ROUTINES

CLRCNT: THIS ROUTINE IS DESCRIBED BY CNCLR ABOVE.

PUTCH: THIS ROUTINE WAS CHANGED SLIGHTLY SO THAT IF PUTXRA WAS SET, A CERTAIN NUMBER OF NULL (000) CHARACTERS WOULD BE PUNCHED AFTER THE CR LF. THE NUMBER OF NULL'S PUNCHED IS A FUNCTION OF THE NUMBER OF CHARACTERS ON THE LINE. ALL OTHER FUNCTIONS REMAIN THE SAME.

OBLOW: WHILE NOT A ROUTINE, THIS IS WHERE THE RING BUFFER FOR

OBHIGH: THE OUTPUT DEVICE IS LOCATED, RIGHT NOW IT IS ABOUT 8 LOCATIONS LONG. [IT EXTENDS FROM OBLOW TO OBHIGH].

PUTJ: THIS IS THE "PUT" FUNCTION, IMPLEMENTATION IS DESCRIBED IN THE I-O SECTION, ALONG WITH THE FUNCTION GET.

GETJ: SEE ABOVE.

PRINT: THIS ROUTINE HAS CHANGED SOMEWHAT, THE FUNCTION "CHECKW" HAS BEEN INCORPORATED TO SEE WHETHER OR NOT SOMETHING WILL FIT ON THIS LINE.

CHECKW: THIS FUNCTION IS CALLED WITH THE NUMBER OF PLACES YOU DESIRE TO PRINT IN THE AC, ACTUALLY, THE AC IS # OF PLACES DESIRED MINUS 1 (N-1). IF NOT ENOUGH ROOM, AN AUTOMATIC CR LF IS GIVEN, PRINT ALSO CHECKS THE SIZE OF THE LINE ON THE OUTPUT DEVICE. SIZE IS LEFT IN TWIDTH.

LIST: LIST NOW CHECKS TO SEE IF A * WAS GIVEN, IF SO, IT SETS THE PUTXRA FLAG BY CALLING POINT TO WAIT FOR I/O TO TERMINATE. SEE DESCRIPTION ABOVE.

FIX: THIS ROUTINE WAS ADDED TO ENABLE THE EASIER CONVERSION OF INTEGER NUMBERS TO FAC NUMBERS. REGFIX DOES THE FOLLOWING: IT CLEARS AC1 & AC2, IT SETS THE SIGN TO POSITIVE, IT SETS THE EXPONENT TO 233, WHICH IS CORRECT FOR FIXING A NUMBER, IT ALSO CLEARS THE OVERFLOW FLAG (OV), IT THEN RETURNS TO THE CALLER.

INPUT: THIS ROUTINE NOW CHECKS TO SEE IF THE INPUT IS FROM THE READER, IF IT IS, NO QUESTION MARK (?) IS GIVEN AND NO ECHO OF DATA.

DOAL: IF INPUT IS FROM THE TELETYPE, ALL IS AS BEFORE.

FPT: THE FLOATING POINT PACKAGE IS AS BEFORE, EXCEPT FOR SOME COFIS. THE ONLY TRICKY AREA IS THAT INDIRECTS GO THROUGH FIELD ONE, SO USE CAUTION.

TAB: DESCRIBED PREVIOUSLY (AS WITH TABDO).

INTER: THIS IS THE MAIN INTERRUPT PROCESSOR. IT IS DESCRIBED ABOVE. THE ONLY THING NOT MENTIONED WAS BIDLE.

BIDLE: BIDLE IS A ROUTINE TO BE CALLED WHEN YOU WANT TO PUT BASIC TO SLEEP. ESSENTIALLY THIS SETS A FLAG CALLED BUSY. WHEN BASIC GOES TO EXIT FROM AN INTERRUPT, IT CHECKS THE STATUS OF BUSY. IF IT'S ZERO, IT EXITS NORMALLY. THIS MEANS IT WAS IN BASIC WHEN IT INTERRUPTED. IF IT'S ONE, THEN IT WAS IN THE NULL JOB ROUTINE. IF SO, THEN NULLJOB COULD ONLY BE STARTED BY BIDLE. HENCE AFTER SERVICING THE INTERRUPT, IT RETURNS FROM BIDLE AND CLEARS THE BUSY FLAG. WHEN BIDLE IS CALLED AGAIN, BIDLE WILL EXIT TO THE LOCATION AS DEFINED BY WHAT THE INTERRUPT ROUTINES SAVED WHEN IN THE LAST BUSY 1 STATE. HENCE BUSY IS THE WORD WHICH KEEPS TRACK OF WHAT IS GOING ON.

INTEXT: THIS ROUTINE EXITS FROM AN INTERRUPT. IT INTEROGATES 'BUSY' TO FIND OUT WHAT TO DO.

PUTER: DESCRIBED PREVIOUSLY.

OBOP: BOPS UP EITHER INPUT OR OUTPUT BUFFER FLAG.

RESET1: THIS RESETS ALL DEVICES. SEE PRESET.

RESET2: THIS IS A MASTER RESET OF ALL HARDWARE STATUS FLAGS. ONLY CALLED WHEN STARTING UP BASIC.

OUTDEL: DESCRIBED ABOVE.

DEVCON1: GETS NEXT ITEM FROM 'USER STATEMENT', THEN CALLS DEVCON.

DEVCON: CHECKS TO SEE IF ITEM IS A C.R. IF NOT, THEN A SYNTAX ERROR RESULTS.

RTERR: THIS GIVES THE "RATE ERROR" MESSAGE.

GETARY: THIS ROUTINE LOOKS AT USER'S VARIABLE ARGUMENT. IT THEN PICKS UP SUBSCRIBING INFORMATION. IT THEN CALLS GETADD TO RETURN LAST ELEMENT IN ARRAY. IT HAS THE FIRST, AND NOW THE LAST, SO IT HAS THE SIZE. IT LEAVES POINTER TO FIRST IN AC1 AND POINTER TO LAST IN AC2. THEN IT RETURNS.

PLOTB: THIS SETS UP DISPLAY BUFFER. IT SETS UP DISB TO POINT TO CORRECT LOCATION. IT PUTS A 4001 IN LAST WORD OF BUFFER. IT PUTS A 4002 IN FIRST WORD OF BUFFER SO NOTHING WILL BE DISPLAYED. THEN IT RETURNS.

DBL11: THIS ROUTINE TAKES THE FAC AND STICKS IT IN THE BUFFER. IT FIRST CHECKS TO SEE IF IN RANGE (0 TO ,9999999999) AND THEN IF NOT IT SETS DBAD. IT THEN FIXES FAC, AND THEN

↓?
CALLS DBPUT TO PUT IN WORD. IT THEN PUTS IN A 4200 TO END THE BUFFER.

DBPUT: THIS ROUTINE PUTS THE AC IN THE BUFFER. IF THE CONTENTS OF WHERE IT'S GOING=4001, THEN WE'VE RUN OUT OF ROOM AND A "TOO-BIG" MESSAGE IS GIVEN. IT RETURNS TO CALLER IF SUCCESSFUL.

UUDATA: THIS GIVES THE "A-D FULL" MESSAGE.

SETUP: THIS IS ORIGINALLY EDUSYS-10 CODE WHICH WAS MOVED BECAUSE WE NEEDED ROOM ELSEWHERE.

ISSET: THIS ROUTINE INITIALIZES THE DISPLAY.

MEVAL: THIS ROUTINE EVALUATES AN EXPRESSION. LEADING COMMAS ARE IGNORED, BAD SYNTAX GETS AN ERROR, RETURN IS TO CALLER WITH RESULTS IN FAC.

LLLJMS: THIS ROUTINE PROVIDES COMMUNICATION BETWEEN THE UPPER AND LOWER BANKS. TYPICAL CALL FROM UPPER IS
JMS LLLJMS
YYYY

WHERE YYYY IS THE ROUTINE THE USER WISHES TO CALL IN LOWER BANK
RETURN IS ALWAYS TO UPPER FIELD.

LLLJMP: SAME AS LLLJMS EXCEPT THAT LLLJMS JMS'S AND LLLJMP JMP'S.

UNLOAD: GIVES THE "NO A-D" MESSAGE.

CCINTK: THIS ROUTINE CHECKS THE CLOCK FLAG. IF UP, THEN IT GOES TO CLOCK1 IN FIELD 1.

TST: DESCRIBED PREVIOUSLY.

- - - - -

F I E L D 1

CLOCK1: THIS ROUTINE IS EXECUTED ON A CLOCK INTERRUPT. IT FIRST CLEARS THE FLAG AND SAVES THE STATUS IN CLKSTS. IT THEN INCREMENTS THE TIME OF DAY [TIM2 AND TIM1], THEN CHECKS ADAPT AND ABDGET TO SEE IF WE'RE SAMPLING. IF WE ARE, THEN IT PICKS UP THE CHANNEL [ADGX] AND CALLS DDAO TO SAMPLE AS MANY TIMES AS NECESSARY AS DETERMINED BY ADJUST. IT CALLS APUT TO PLACE THE SAMPLES IN THE BUFFER. IT THEN INCREMENTS CT3, CT2 AND/OR CT1 TO FIND OUT WHETHER OR NOT DONE. IF DONE, IT CLEARS ADAPT AND SETS ABDGET MINUS.
IT NOW CHECKS TO SEE IF THE CLOCK IS UP AGAIN. IF IT IS, WE GET A RATE ERROR. IF IT ISN'T, WE CHECK FOR *C TO SEE IF IN THE REGION WHERE WE ARE INTERRUPTING SO FAST THAT WE CANNOT CHECK FOR A *C IN THE TTY ROUTINES, BUT NOT FAST ENOUGH SO THAT THE CLOCK FLAG TEST WILL CATCH IT. THIS CONDITION

COULD "LOCK OUT" BASIC SO NOTHING COULD HAPPEN, THAT IS WHY WE MUST CHECK FOR *C HERE, IF THIS IS THE CASE THEN WE MUST TAKE THE SAME ACTION AS FOR THE CASE WHERE WE COULD PHYSICALLY DETECT THE FACT THAT THE CLOCK WAS RUNNING TOO FAST. WHEN WE DECIDE THAT THE CLOCK IS RUNNING TOO FAST, WE STOP THE CLOCK (TO PREVENT FURTHER CLOCK INTERRUPTS) AND CALL 'RTERR' TO PRINT OUT THE ERROR MESSAGE ["RATE ERROR"]; IF THERE WAS NO ERROR, THEN WE EXIT NORMALLY VIA 'INTEXT'.

APUT: THIS PUTS A SAMPLE IN THE BUFFER, IF NO ROOM, WE GET A BUFFER FULL MESSAGE, POINTERS ARE SET UP BY REAL TIME STATEMENT.

AGET: OPPOSITE OF APUT, IF NOTHING THERE, IT PUTS BASIC TO SLEEP UNTIL AN INTERRUPT OCCURS, DESCRIBED PREVIOUSLY.

ABOP: THIS BOPS UP POINTERS OF APUT AND AGET, LIMITS SET BY REAL TIME STATEMENT, ADA1, ADA2 AND ADA3 ARE DETERMINING LIMITS AND FACTORS.

UCLS: CLS FUNCTION. PICKS UP CLKSTS AND RETURNS IT.

UCLC: EXECUTES 6137 AND RETURNS RESULTS IN FAC.

UUULLL: THIS IS THE UPPER CORE RESETTER.

DOAD: TAKES AC AS CHANNEL NUMBER AND DOES CONVERSION, HAS TIME OUT INCASE NO A-D OR A-D NOT WORKING.

USETF: THIS ROUTINE TAKES THE AC AND MAKES IT INTO A GOOD FAC, IT CALLS BEGFIX AND ANORM.

UUAC1-3: THESE ROUTINES ADD AC1 -AC3 RESPECTIVELY TO THE AC, THEY GET IT FROM FIELD 0.

UUMEVAL: MEVAL FUDGE CALL

UUPFIX: FIX FUDGE CALL.

UUDEVG: DEVCON FUDGE CALL.

UUJMS: UPPER CORE COUNTER PART OF LLLJMS

UUJMP: UPPER CORE COUNTER PART OF LLLJMP

UPCOMDO: UPPER CORE COMMAND DISPATCHER, VERY SIMPLE.

UPFUN: UPPER CORE FUNCTION DISPATCHER, ALSO SIMPLE.

COPYRIGHT 1971, DIGITAL EQUIPMENT CORPORATION
MAYNARD, MASS. (01754)

WRITTEN BY JACK BURNES

THIS BASIC IS A COMBINATION OF LAB-8/E BASIC

AND BK-BASIC FOR THE PDP-8. TO CREATE IT
FOR THE LAB-8/E SET "MACHINE=1", TO CREATE I

THE POP-8 SET "MACHINE=3".

MACHINE=1

THIS CODE OVERLAYS THE FINARY LOADER IN FIELD

ONE TO MAKE LAB-8/E BASIC SELF STARTING.

LFNZRD MACHINE

FIELD 1

*1704

JUNE 1 UGETWD

★6837★

17A

TAD

CUA

576

242

413

~~store~~ ~~checkbook~~ temp orany (should be \$)

2. ✓ check down temp every 1 hr
at HCT water
put it into 770
get check down
how is temp?
MS/HCT with non-pro-acc
yes apt to find it

/24204 +-----+
/ SYSTEM |
/11003 +-----+
/ ARRAY |
/ SPACE |
/ +-----+
/ FREE |
/ +-----+
/ CODIFIED |
/ BASIC |
/ +-----+
/ SYMBOL |
/ TABLE |
/ +-----+
/ LINEBUF |
/ +-----+
/ STACK |
/ +-----+
/ FORLIST |
/ +-----+
/ GOLIST |
/17756 +-----+
/ RIM |
/ +-----+
/17777 +-----+
/ LOADER |

+ - * /
/4290
/4201
/4302
/4303
/4404
/4105
/4106
/4107
/4110 <=>


```
/4110 =<
/4111 >=
/4111 =>
/4112 <>
/4213 (UMINUS)
/4114 (DONE)
/4115 ,
/4116 :
/4117 )
/4221 TO
/4122 STEP
/4123 (
/4224 FN
/4025 COS
/4226 TAN
/4227 ATN
/4430 LOG
/4231 EXP
/4332 SQR
/4233 ABS
/4234 SGN
/4435 INT
/4336 RND
/4137 SIN
/6100 (CRLF)
/6100 0
/5401 END
/6402 FOR
/6203 GOSUB
/6124 GOTO
/6404 THEN
/6405 IF
/6106 INPUT
/6227 LET
/5410 NEXT
/6111 PRINT
/6112 RETURN
/6113 STOP
/6214 DIM
/6115 RESTORE
/6117 DEF
/6220 READ
/6121 DATA
/6222 (EXIT)
/6223 (EOF)
```

```
FEEXIT=0000
FSVE=0040
FSEQ=0050
FSGE=0100
FSLI=0110
FSGI=0140
FSLE=0150
```


FJMP=1000
FJMPI=1400
FST=2000
FSTI=2400
FLO=3000
FLOI=3400
FAD=4000
FAOI=4400
FSB=5000
FSBI=5400
FMD=6000
FMPI=6400
FDV=7000
FDVI=7400
FWD=8000
BKWD=8400

ADCL=5532
ADLM=5531
AUST=5532
ADRB=5533
ADSK=5534
ADSE=5535
ADLE=5536
ADRS=5537
DILC=6050
DICO=6051
DISO=6052
DILX=6053
DILY=6054
DILY=6055
DILE=6056
DIRE=6057
CLEM=6134
CLAB=6133
CLOE=6132
CLZE=6130
CLSK=6131
CLCA=6137
CLSA=6135
CLBA=6136

/BASIC.L3E

PAL2

PAGE 1-1

5297 5610
6210 1310

JMP I
START

.+1

And start dump!

6211 7422
6212 7722

INTHLT, HLT
INTPLC, 7700

/BASIC4.52

DWS IT.

FIELD 0

/TO HELP BINARY LOADER IN CASE HE BL

/INTERUPT ROUTINES.
/UP, UP AND AWAY.JMP I .+1
INTER.

0000	0000	ARMLOC, 0
0001	5432	CODELOC, 0
0002	6500	PSYMTAB, 0
0003	0000	NSYMTAB, 0
0004	0000	0215, 215
0005	0000	0212, 212
0006	0000	0250, 260
0007	0000	OV, 0
0008	0000	INDEX1, 0
0009	0000	INDEX2, 0
0010	0000	DISAUTO, 0
0011	0000	AC3, 0
0012	0000	AC2, 0
0013	0000	AC1, 0
0014	0000	OP3, 0
0015	0000	OP2, 0
0016	0000	OP1, 0
0017	0000	ACS, 0
0018	0000	ACE, 0
0019	0000	NPS, 0
0020	0177	0177, 177
0021	0000	OPE, 0
0022	0000	TMP, 0
0023	7201	PGETCH, GEICH
0024	0741	PPUTCH, PUTCH
0025	0000	CINFLAG, 0
0026	4200	FENTER=JMS I .;FPT
0027	0000	PEL, 0
0028	7512	PLINBUF, LINBUF
0029	2266	MLINBUF, -LINBUF
0030	0135	MEMLIN, -ENDLIN
0031	0000	PREMP, 0
0032	0000	DECEXP, 0
0033	5335	PAUMBUF, NUMBUF
0034	0000	LOCCTR, 0
0035	0000	READLOC, 0
0036	7353	PARGERR, ARGERR
0037	0000	WORD, 0
0038	0240	0240, 240
0039	0000	LIVENO, 0
0040	0000	GOTEMP, 0
0041	7740	07740, 7740
0042	7770	07770, 7770
0043	0000	EPTR, 0
0044	0000	FPTR, 0
0045	0000	GPTR, 0
0046	0000	HPTR, 0
0047	0000	02, 2
0048	0000	FORCT, 0
0049	0000	SUMFLG, 0

/BASIC.L81

```
0165 0112 12
0166 0100 0
0167 0100 ADDRESS,0
0168 0177 77
0169 0177 377
0170 0172 0
0171 0172 0
0172 0172 0
0173 0172 0
0174 0172 0
0175 0172 0
0176 0172 0
0177 0172 0
0178 0172 0
0179 0172 0
0180 0172 0
0181 0172 0
0182 0172 0
0183 0172 0
0184 0172 0
0185 0172 0
0186 0172 0
0187 0172 0
0188 0172 0
0189 0172 0
0190 0172 0
0191 0172 0
0192 0172 0
0193 0172 0
0194 0172 0
0195 0172 0
0196 0172 0
0197 0172 0
0198 0172 0
0199 0172 0
0200 0172 0
0201 0172 0
0202 0172 0
0203 0172 0
0204 0172 0
0205 0172 0
0206 0172 0
0207 0172 0
0208 0172 0
0209 0172 0
0210 0172 0
0211 0172 0
0212 0172 0
0213 0172 0
0214 0172 0
0215 0172 0
0216 0172 0
0217 0172 0
0218 0172 0
0219 0172 0
0220 0172 0
0221 0172 0
0222 0172 0
0223 0172 0
0224 0172 0
0225 0172 0
0226 0172 0
0227 0172 0
0228 0172 0
0229 0172 0
0230 0172 0
0231 0172 0
0232 0172 0
0233 0172 0
0234 0172 0
0235 0172 0
0236 0172 0
0237 0172 0
0238 0172 0
0239 0172 0
0240 0172 0
0241 0172 0
0242 0172 0
0243 0172 0
0244 0172 0
0245 0172 0
0246 0172 0
0247 0172 0
0248 0172 0
0249 0172 0
0250 0172 0
0251 0172 0
0252 0172 0
0253 0172 0
```

/THIS PREVENTS INTERRUPTS DURING CRIT

/BASIC, LSE

```

0154 0130 0210, 200
0155 0202 FPFLAG, 0
0156 0140 POADD, 0ADD
0157 4435 04, 4
0158 0114 PLINFIX, LINFIX
0159 2337 07725, 7745
0160 7745 PCHKFIT, CHKFIT
0161 6435 PGOLIST, GOLIST
0162 7725 GSRPTR, 0
0163 0202 GET=1
0164 4273 ISIT=JMS I.;XISIT;XGISIT
0165 4266 MUSTBE=JMS I.;XMUST;XGMUST
0166 7352 PLEGIN, LBEGIN
0167 7345 MLEGIN, -LBEGIN-1
0168 2214 MLEND, -ENDPDL
0169 0374 PISITLI, ISITLI
0170 4134

```

PAGE

*-1

```

0177 0030 GETWD, 0
0178 1445 TAD I
0179 3050 CCA WORD
0180 2345 ISZ LOCCTR
0181 5577 JMP I GETWD
0182 0245 PLETD, LETDO
0183 4570 LETCO, MUSTBE
0184 3573 JMS I PEVAL
0185 4570 MUSTBE
0186 2030 /CR) OR '0'
0187 4341 JMS STOVAR
0188 4177 EXECUTE, JMS
0189 1274 TAD
0190 3311 DCA
0191 1452 TAD I
0192 7510 SPA
0193 5231 JMP
0194 7540 SZA CLA
0195 5313 JMP
0196 1350 TAD
0197 3352 DCA
0198 4177 JMS
0199 1450 TAD I

```

/IS IT A LINE NO

/NO

KEYWD

NOTKWD

WORD

LINE NO

GETWD

WORD

2227	7140	5313	7132	1450	7420	5532	7432	3737	6641	2213	2557	4413	3545	5517	3375	4407	3312	5637	2177	3252	3253	2254	3255	3256	3257	3258	3259	3260	3261	3262	3263	3264	3265	3266	3267	3268	3269	3270	3271	3272	3273	3274	3275	3276	3277	3278	3279	3280	3281	3282	3283	3284	3285	3286	3287	3288	3289	3290	3291	3292	3293	3294	3295	3296	3297	3298	3299	3300	3301	3302	3303	3304	3305	3306	3307	3308	3309	3310	3311	3312	3313	3314	3315	3316	3317	3318	3319	3320	3321	3322	3323	3324	3325	3326	3327	3328	3329	3330	3331	3332	3333	3334	3335	3336	3337	3338	3339	3340	3341	3342	3343	3344	3345	3346	3347	3348	3349	3350	3351	3352	3353	3354	3355	3356	3357	3358	3359	3360	3361	3362	3363	3364	3365	3366	3367	3368	3369	3370	3371	3372	3373	3374	3375	3376	3377	3378	3379	3380	3381	3382	3383	3384	3385	3386	3387	3388	3389	3390	3391	3392	3393	3394	3395	3396	3397	3398	3399	3400	3401	3402	3403	3404	3405	3406	3407	3408	3409	3410	3411	3412	3413	3414	3415	3416	3417	3418	3419	3420	3421	3422	3423	3424	3425	3426	3427	3428	3429	3430	3431	3432	3433	3434	3435	3436	3437	3438	3439	3440	3441	3442	3443	3444	3445	3446	3447	3448	3449	3450	3451	3452	3453	3454	3455	3456	3457	3458	3459	3460	3461	3462	3463	3464	3465	3466	3467	3468	3469	3470	3471	3472	3473	3474	3475	3476	3477	3478	3479	3480	3481	3482	3483	3484	3485	3486	3487	3488	3489	3490	3491	3492	3493	3494	3495	3496	3497	3498	3499	3500	3501	3502	3503	3504	3505	3506	3507	3508	3509	3510	3511	3512	3513	3514	3515	3516	3517	3518	3519	3520	3521	3522	3523	3524	3525	3526	3527	3528	3529	3530	3531	3532	3533	3534	3535	3536	3537	3538	3539	3540	3541	3542	3543	3544	3545	3546	3547	3548	3549	3550	3551	3552	3553	3554	3555	3556	3557	3558	3559	3560	3561	3562	3563	3564	3565	3566	3567	3568	3569	3570	3571	3572	3573	3574	3575	3576	3577	3578	3579	3580	3581	3582	3583	3584	3585	3586	3587	3588	3589	3590	3591	3592	3593	3594	3595	3596	3597	3598	3599	3600	3601	3602	3603	3604	3605	3606	3607	3608	3609	3610	3611	3612	3613	3614	3615	3616	3617	3618	3619	3620	3621	3622	3623	3624	3625	3626	3627	3628	3629	3630	3631	3632	3633	3634	3635	3636	3637	3638	3639	3640	3641	3642	3643	3644	3645	3646	3647	3648	3649	3650	3651	3652	3653	3654	3655	3656	3657	3658	3659	3660	3661	3662	3663	3664	3665	3666	3667	3668	3669	3670	3671	3672	3673	3674	3675	3676	3677	3678	3679	3680	3681	3682	3683	3684	3685
------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------

```

SMA CLA      NOTKWD
JMP          CML RTR
CLA CLL      WORD
TAD I        PSXERR
SML          SJUMP
JMP I        .+1
TAD          .+1
DCA          .+1
HLT          .+1
JMP I        .+1
EXECUTE
END
FOR
GOSUB
GOTO
IF
INPUT
LET
NEXT
PRINT
RETURN
STOP
DIN
RESTORE
SKIPI
DEF
READ
SKIPI
EXIT
STOP
ATTN
ATTN
LPTOUT*
PIPOUT
PIRIN
SXERR
RORO
NORUBO
IFNZRO
MACHIN

```

THIS SLOT IS NOW FREE. (6031)

0275	7633
0276	7654
0277	7446
0300	7430
0301	7743
0302	7743
0303	7743
0304	7743
0305	7743
0306	6441
0307	7743
0310	7743

CLEAR
DELAY
USE
PLOT
REALTIME
SETRATE
SETCLOCK
WAIT
WAIT
SXERR
ACCEPT
REJECT>

```
/"UCOM" --- USER COMMAND.
```


IFZERO MACHINE<

SXERR
 SXERR
 SXERR
 SXERR
 SXERR
 SXERR
 SXERR
 SXERR
 SXERR
 SXERR
 SXERR

0311	2022	GETVAR, 0			
0312	4177	LET, JMS	GETWD		
0313	4572	NOTKRD, 7020		/A VARIABLE	
0314	7030	TAD	WORD		
0315	1250	DCA	VAR		
0316	3343	DCA	SSONE		
0317	3344	DCA	SSTWO		
0321	3345	GET+ISIT		/''	
0322	4567	3755			
0322	3755	JMP I	GETVAR /NO		
0323	5711	JMS I	PEVAL		
0324	4541	JMS I	PFIX		
0326	4516	DCA	SSONE	/''	
0326	3344	ISIT			
0327	4568	3763			
0331	5335	JMP	NOCOMMA /NO		
0332	4521	JMS I	PEVAL		
0333	4526	JMS I	PFIX		
0334	3345	DCA	SSTWO	/''	
0335	4572	NOCOMMA, MUSTBE			
0336	3761	3761			
0337	4177	JMS	GETWD		
0340	5711	JMP I	GETVAR		
0341	0322	STOVAR, 2			
0342	4502	JMS I	PGETADDR		
0343	0322	VAR, 0			
0344	0322	SSONE, 0			
0345	0322	SSTAO, 0			
0346	4435	FENTER			
0347	2467	FSTI	ADDRESS		
0350	0020	FEVIT			
0351	5741	JMP I	STOVAR		
0352	4477	JMS I	PERROR		
0353	0525	FNERR, TEXT 'FUNCTION'			
0354	1615				
0355	2411				

/ROUTINE WHICH CHECKS STATUS OF CONT

0356 1716
 0357 0000
 0362 0000
 ROL C FLAG.
 0361 7201
 0362 1134
 0363 7652
 0364 5767
 0365 3134
 0366 5752
 0367 6572

CLRCNT, 0

CLA IAC

TAD NOINT

SNA CLA

JMP I

PBOMB

DCA NOINT

JMP I CLRCNT

PBOMB, CNTLCR

/WAS IT SET TO -1?

/YEP. GIVE STOP MESSAGE.

/NOPE. RESET IT.

/AND EXIT

0375 4477 SPACERR,JMS I PEROR
 0371 2417 TEXT '100-BIG'

0372 1755
 0373 0211
 0374 2700

IF,

JMS I PEVAL

FENTER

OPERAND

FST

FEXIT

MUSTBE

1774

/'THEN'

TAD

SPA SNA CLA

JMP SKIPIT

GET ISIT

0022

JMP I XEXECU

JMP GOTO+1

XEXECU, EXECUTE+1

FOR,

0412 0214

0413 4571

0414 7000

JMS FINDIT

JMP NOTHERE

/A VARIABLE

0375 4511
 0376 4435
 0377 2073
 0400 0000
 0401 4572
 0402 1774
 0403 1073
 0404 7752
 0405 5257
 0406 4567
 0407 0000
 0410 5512
 0411 5320
 0412 0214
 0413 4571
 0414 7000
 0415 4357
 0416 5235


```

0417 7201 CLA IAC
0420 1113 TAD INDEX1
0421 3414 DCA INDEX2
0422 7240 CLA CMA
0423 1013 TAD INDEX1
0424 3013 DCA INDEX1
0425 5232 JMP INLUPF
0426 1414 TAD I INDEX2
0427 3413 DCA I INDEX1
0430 1414 TAD I INDEX2
0431 3413 DCA I INDEX1
0432 2453 ISZ GOTEMP
0433 5226 JMP LUPF
0434 2453 ISZ FORCT
0435 1053 NOTHERE, TAD FORCT
0436 1344 TAD 011
0437 7750 SPA SNA CLA
0440 5331 JMP FORERR
0441 1450 TAD WORD
0442 7241 CIA
0443 3413 DCA I INDEX1
0444 1050 TAD WORD
0445 3252 DCA FORVAR
0446 4571 GET+MUSTBE /I=I
0447 3573 3673
0450 4521 JMS I PEVAL
0451 4532 JMS I PGETADDR
0452 2430 FORVAR, 0
0453 0000 0
0454 0000 0
0455 4435 FENTER
0456 2467 FSTI ADDRESS
0457 0000 FEYI
0458 4570 MUSTBE /'TO'
0461 3757 3757
0462 1045 TAD LOCCTR
0463 3413 DCA I INDEX1
0464 7240 CLA CMA
0465 1053 TAD FORCT
0466 3053 DCA FORCT

0467 4571 SKIPIT, JMS I PIGNORE /LOOK FOR "0" OR C.R.
047 5533 JMP I PEXECUTE /AND EXECUTE THE NEXT STATEMENT.

0471 2115 PIGNORE, IGNORE

```



```

0472 0232 PASSCR, 0
0473 4571 JMS I PIGNORE
0474 2350 ISZ WORD
0475 4566 ISIT
0476 4120 4100
0477 5273 JNP I
0500 5672 JNP I PASSCR

```

```

/THIS LOOKS FOR A REAL C.R.
/LOOK FOR "0" OR C.R.

```

```

/A REAL C.R. ?
/NOPE. A SLASH.
/AND RETURN TO CALLER.

```

```

0521 4477 FORERR, JMS I PERRR
0522 0517 TEXT 'FOR'
0523 2200
0524 0511 11
0525 4177 GOSUB, JMS GETWD
0526 4332 JMS GOROTH
0527 1165 TAD GSBPR
0528 1325 TAD MGSBEND
0529 7650 SNA CLA
0530 5326 JNP DEEPERR
0531 1045 TAD LOCCIR
0532 3565 DCA I
0533 2165 ISZ GSBPR
0534 5321 JNP GOTO+2
0535 4177 GOTO, JMS GETWD
0536 4332 JMS GOROTH
0537 2153 ISZ GOTEMP
0538 1453 TAD I
0539 3045 DCA I
0540 5043 JNP I PEXECUTE
0541 0323 MGSBEND, GSBEND
0542 4477 DEFPERR, JMS I PERRR
0543 2717 TEXT 'GOSUB'
0544 2325
0545 0320 GOROTH, 0
0546 4570 MUSTRE
0547 0300
0548 1450 TAD
0549 3253 DCA
0550 2152 ISZ
0551 4566 ISIT
0552 0300
0553 5350 JNP
0554 4477 JMS I PERRR
0555 1411 TEXT 'LINENO'

```

/A LINENO

/DEFINED


```

0545 1605
0546 1617
0547 0000
0550 4571 / (CR) OR '0'
0551 2220
0552 5732 JMP I GOROTH
0553 0010 VARTEMP,0:0;0
0554 0000
0555 0000
0556 7744 PXFORLI,FORLIST-1
0557 2220 FINDIT,
0558 1053 TAD FORCT
0559 3053 DCA GOTEMP
0560 1356 TAD PXFORLIST
0561 3013 DCA INDEX1
0562 5372 JMP INLOOP
0563 1413 TAD INDEX1
0564 1452 TAD WORD
0565 7652 SNA CLA
0566 5375 JMP FOUND
0567 2013 ISZ INDEX1
0568 2253 GOTEMP
0569 5355 JMP FINDLUP
0570 5757 JMP I FINDIT
0571 2357 ISZ FINDIT
0572 5757 JMP I FINDIT

```

PAGE

```

0600 4571 NEXT, GET+MUSTBE /A VARIABLE
0601 7000
0602 4572 JMS I PFINDIT
0603 5273 JMP NEXTERR
0604 1000 TAD WORD
0605 3237 DCA NEXTVAR / (CR) OR '0'
0606 4571 GET+MUSTBE
0607 2000
0608 1045 TAD LOCCTR
0609 3271 DCA LOCTEMP
0610 1413 TAD I INDEX1
0611 3045 DCA LOCCTR
0612 4531 JMS I PEVAL
0613 2303 FST+FWD+FORLIM-.
0614 0000 FEXIT
0615 4566 ISIT / (CR) OR '0'
0616 2000 JMS I TRYSTEP /NO
0617 5226 FENTER ONE
0618 4435 FLD
0619 3151 FJMP+FWD+GOTSIEP-. /'STEP'
0620 1237 TRYSTEP,MUSTBE
0621 3756 JMS I PEVAL
0622 4531 MUSTBE / (CR) OR '0'
0623 4572

```



```
0632 2300
0633 4435
0634 2272 GOTSTEP,FST+PWD+FORSTEP-.
0635 0004 FEXIT
0636 4532 JMS I PGETADDR
0637 0000 NEXTVAR,0
0642 0000
0641 0000
0642 4435 FENTER
0643 3437 FLDI ADDRESS
0644 4252 FAD+PWD+FORSTEP-.
0645 2572 FST+BKND+.-VARTMP
0646 5253 FSB+PWD+FORLIM-.
0647 0000 FEXIT
0652 1324 TAD ACS
0651 1324 TAD FORSTEP
0652 7770 SMA CLA
0653 1020 TAD AC1
0654 7540 SZA CLA
0655 5253 JMP FORDONE
0656 4435 FENTER
0657 3734 FLD+BKND+.-VARTMP
0662 2457 FSTI ADDRESS
0661 0000 FEXIT
0662 5253 JMP I PEXECUTE
0663 1271 FORDONE,TAD
0664 3445 DCA LOCTEMP
0665 2353 ISZ LOCCTR
0666 2353 ISZ FORCT
0667 5255 JMP GOTEMP
0671 0000 JMP I PEXECUTE
0672 2557 PFINDIT,FINDIT
0673 4477 NEXTERR,JMS I PERROR
0674 1615 TEXT 'NEXT'
0675 3024
0676 2332
0677 4571 RETURN, GET+MUSTRE / (CR) OR '0'
0702 2320
0701 1165 TAD GSRPTR
0702 1322 TAD MGOLIST
0703 7550 SNA CLA
0704 5313 JMP RETNERR
0705 7240 CLA CMA
0706 1165 TAD I
0707 3165 DCA I
0708 1555 TAD I
0709 3045 DCA I
0712 5533 JMP I PEXECUTE
0713 4477 RETNERR,JMS I PERROR
0714 2235 TEXT 'RETURN'
0715 2425
0716 2216
0717 0000
0722 2353 MGOLIST,-GOLIST
```


/BASIC.LBL

FURLIN, 0;0;0

0721 0000

FORSTER, 0;0

0722 0000

SGN,

0723 0000

FENTER

0724 0000

FSGE

0725 0000

FLD+FWO+MNSONE--

FSLE

0726 0000

FLD ONE

0727 4435

FEXIT

0728 0132

JMP I SGN

0729 3205

MNSONE, 6014;0;0

0730 0152

PUTCH,

0731 3151

PCCUNT,

0732 0132

TAD

0733 0132

TAD

0734 0132

TAD

0735 5726

TAD

0736 5014

TAD

0737 0000

TAD

0738 0000

TAD

0739 0000

TAD

0740 0000

TAD

0741 0000

TAD

0742 3326

TAD

0743 1326

TAD

0744 0027

TAD

0745 1374

TAD

0746 7540

TAD

0747 5357

TAD

0748 1344

TAD

0749 1126

TAD

0750 3237

TAD

0751 3126

TAD

0752 1237

TAD

0753 0376

TAD

0754 7110

TAD

0755 7172

TAD

0756 3237

TAD

0757 1326

TAD

0758 0375

TAD

0759 7440

TAD

0760 1365

TAD

0761 7640

TAD

0762 2126

TAD

0763 1326

TAD

0764 4777

TAD

0765 2237

TAD

0766 5376

TAD

0767 5741

TAD

0768 7763

TAD

0769 0140

TAD

0770 0000

TAD

0771 7002

TAD

0772 0000

0773 0000

0774 0000

0775 0000

0776 0000

0777 0000

0778 0000

0779 0000

0780 0000

0781 0000

0782 0000

0783 0000

0784 0000

0785 0000

0786 0000

0787 0000

0788 0000

0789 0000

0790 0000

0791 0000

0792 0000

0793 0000

0794 0000

0795 0000

0796 0000

0797 0000

0798 0000

0799 0000

0800 0000

0801 0000

0802 0000

0803 0000

0804 0000

0805 0000

0806 0000

0807 0000

0808 0000

0809 0000

0810 0000

0811 0000

0812 0000

0813 0000

0814 0000

0815 0000

0816 0000

0817 0000

0818 0000

0819 0000

0820 0000

0821 0000

0822 0000

0823 0000

0824 0000

0825 0000

0826 0000

0827 0000

0828 0000

0829 0000

0830 0000

0831 0000

0832 0000

0833 0000

0834 0000

0835 0000

0836 0000

0837 0000

0838 0000

0839 0000

0840 0000

0841 0000

0842 0000

0843 0000

0844 0000

0845 0000

0846 0000

0847 0000

0848 0000

0849 0000

0850 0000

0851 0000

0852 0000

0853 0000

0854 0000

0855 0000

0856 0000

0857 0000

0858 0000

0859 0000

0860 0000

0861 0000

0862 0000

0863 0000

0864 0000

0865 0000

0866 0000

0867 0000

0868 0000

0869 0000

0870 0000

0871 0000

0872 0000

0873 0000

0874 0000

0875 0000

0876 0000

0877 0000

0878 0000

0879 0000

0880 0000

0881 0000

0882 0000

0883 0000

0884 0000

0885 0000

0886 0000

0887 0000

0888 0000

0889 0000

0890 0000

0891 0000

0892 0000

0893 0000

0894 0000

0895 0000

0896 0000

0897 0000

0898 0000

0899 0000

0900 0000

0901 0000

0902 0000

0903 0000

0904 0000

0905 0000

0906 0000

0907 0000

0908 0000

0909 0000

0910 0000

0911 0000

0912 0000

0913 0000

0914 0000

0915 0000

0916 0000

0917 0000

0918 0000

0919 0000

0920 0000

0921 0000

0922 0000

0923 0000

0924 0000

0925 0000

0926 0000

0927 0000

0928 0000

0929 0000

0930 0000

0931 0000

0932 0000

0933 0000

0934 0000

0935 0000

0936 0000

0937 0000

0938 0000

0939 0000

0940 0000

0941 0000

0942 0000

0943 0000

0944 0000

0945 0000

0946 0000

0947 0000

0948 0000

0949 0000

0950 0000

0951 0000

0952 0000

0953 0000

0954 0000

0955 0000

0956 0000

0957 0000

0958 0000

0959 0000

0960 0000

0961 0000

0962 0000

0963 0000

0964 0000

0965 0000

0966 0000

0967 0000

0968 0000

0969 0000

0970 0000

0971 0000

0972 0000

0973 0000

0974 0000

0975 0000

0976 0000

0977 0000

0978 0000

0979 0000

0980 0000

0981 0000

0982 0000

0983 0000

0984 0000

0985 0000

0986 0000

0987 0000

0988 0000

0989 0000

0990 0000

0991 0000

0992 0000

0993 0000

PAGE

	START,	JMS I	XRESTA	/REST FLAGS AND DEVICES.
1000	4503	JMS I	XRESTA	
1001	5502	JMP I	.+1	
1002	2442	SCRATCH		
1003	7510	XRESTA, ISET		
1004	0420	EVAL,		
1005	4177	JMS	GETWD	
1006	1234	TAD	EVAL	
1007	4504	JMS I	PPUSH	
1010	1353	TAD	04014	
1011	4534	JMS I	PPUSH	
1012	5216	JMP	GETOPR+1	
1013	1354	TAD	04213	
1014	4534	JMS I	PPUSH	
1015	4177	JMS	GETWD	
1016	4566	ISIT		
1017	3577	SKP		
1020	7410	SKP		
1021	5213	JMP	ISUMIN	
1022	4566	ISIT		
1023	3500	SKP		
1024	7410	SKP		
1025	5215	JMP	GETOPR	
1026	4566	ISIT		
1027	3755	SKP		
1030	5235	JMP	NOPAREN /NO	
1031	4234	JMS	EVAL	
1032	4570	MUSTRE		
1033	3761	SKP		
1034	5507	JMP I	PGOTOPR	
1035	4566	ISIT		
1036	7330	SKP	/A VARIABLE	
1037	5385	JMP	NOTVAR /NO	
1040	3275	DCA	ONES	
1041	3277	DCA	TWOSS	
1042	1350	TAD	WORD	
1043	3275	DCA	WDTEMP	
1044	4567	GET+ISIT		
1045	3755	SKP		
1046	5274	JMP	GOTSS /NO	
1047	1275	TAD	WDTEMP	
1050	4504	JMS I	PPUSH	
1051	4204	JMS	EVAL	
1052	4566	ISIT		
1053	3763	SKP		
1054	5264	JMP	ONEDIM	
1055	4546	JMS I	PPIX	
1056	4534	JMS I	PPUSH	
1057	4204	JMS	EVAL	
1058	4535	JMS I	PPIX	
1061	3277	DCA	TWOSS	


```

1062 4545 JMS I PPOP
1063 5266 JMP +3
1064 3277 ONEDIN, DCA TWOSS
1065 4546 JMS I PPIX
1066 3276 DCA ONESS
1067 4572 MUSTBE /'0'
1070 3761
1071 4595 JMS I PPOP
1072 3275 DCA WOTEMP
1073 4177 JMS GETWD
1074 4582 GOTSS, JMS I PGETADDR
1075 0300 WOTEMP, 0
1076 3510 ONESS, 0
1077 2826 TWOSS, 0
1100 4435 FENTER
1101 3467 FLDI ADDRESS
1102 2880 FEXIT
1103 5724 JMP I +1
1104 1273 OPDNE
1105 4575 NOTVAR, JMS I PISITLIT /ISIT A LITERAL
1106 5312 JMP ISITFUN /NO
1107 5527 JMS PGOTOPR /IT IS IN THE AC NOW
1110 1458 ISITFUN, TAD I WORD
1111 1352 TAD 03754 /-4024, WHICH IS BEGINNING OF FUNCTI
ONS.
1112 7510 SPA /IS IT A LEGAL FUNCTION?
1113 5520 JMP I PSXERR /NO, EXIT WITH MESSAGE.
1114 7450 SNA /WAS IT 'FN'
1115 4177 JMS GETWD /YES, SKIP OVER LETTER
1116 4574 JMS I PPUSH
1117 4571 GET+MUSTBE /'0'
1121 3755
1121 4204 JMS EVAL
1122 4545 JMS I PPOP
1123 1330 TAD FJUMP
1124 3325 DCA +1
1125 7412 HLT
1126 5727 JMP I +1
1127 1230 FNEXIT
1130 4731 FJUMP, JMS I FUNTAB
1131 5453 FUNTAB, FN
1132 5516 COS
1133 5612 TAN
1134 6222 ATN
1135 6114 LOG
1136 5410 EXP
1137 5412 SQR
1140 6425 ARS
1141 2726 SGN
1142 6434 INT
1143 5353 RND
1144 5024 SIN
1145 1751 PUTJ /POINTER TO PUT CHAR ROUTINE.
1146 6441 SXERR /FOR THE MISC. FUNCTIONS.
1147 6441 SXERR
1150 6441

```


1151 1770 GETJ /GET A CHAR FROM THE TTY.
IFNZRO MACHINE<
1152 7747 ADC /"NORMAL" A-D CONVERSION RETURN.
1153 7757 TST /"TEST CHARACTER BUFFER".
1154 7747 TIM /TIME (# OF CLOCK TICKS).

>
IFZERO MACHINE<
SXERR
TST
SXERR
1155 5547 TAB /TAB FUNCTION IS IMPLEMENTED.
1156 6441 SXERR /UNIMPLEMENTED USER FUNCTION.

IFNZRO MACHINE<
1157 7747 CLS /GET STATUS OF LAST TICK.
1160 7747 CLC /GET CLOCK COUNT BUFFER.
1161 7747 ADB /GET CONVERSION FROM BUFFER.

>
IFZERO MACHINE<
SXERR
SXERR
SXERR

>

1162 3754 03754, 3754
1163 4014 04014, 4014
1164 4213 04213, 4213

ORLOW=.
ORHIGH=FNEXIT-1

PAGE

1200 457A FNEXIT, MUSTBE /131
1201 3751
1202 4177 GOTOPR, JMS GETWD
1203 4545 OPDONE, JMS I PPOP
1204 3456 DCA OLDOP
1205 1450 TAD I WORD
1206 0272 AND 0700
1207 7550 SNA CLA
1210 5220 JMP ITSOP
1211 1432 TAD I WORD
1212 0275 AND 07077
1213 1273 TAD 03755
1214 7133 CLL
1215 1356 TAD 023
1216 7520 SNL CLA
1217 5530 JMP I PSXERR
1220 1456 ITSOP, TAD OLDOP

1221	3272	AND	0700
1222	3271	DCA	OTEMP
1223	1450	TAD I	WORD
1224	0272	AND	0700
1225	7041	CIA	
1226	1271	TAD	OTEMP
1227	7710	SMA CLA	
1230	5247	JMP	DOITNOW
1231	1050	TAD	OLDOP
1232	4534	JMS I	PPUSH
1233	4435	FENTER	
1234	2373	FST	OPERAND
1235	0000	FEXIT	
1236	1373	TAD	OPERAND
1237	4514	JMS I	PPUSH
1240	1074	TAD	OPERAND+1
1241	4504	JMS I	PPUSH
1242	1075	TAD	OPERAND+2
1243	4514	JMS I	PPUSH
1244	1452	TAD I	WORD
1245	4514	JMS I	PPUSH
1246	5511	JMP I	PGETOPR
1247	1056	DOITNOW, TAD	OLDOP
1250	0072	AND	077
1251	1274	TAD	07764A
1252	7450	SMA	
1253	5363	JMP	UDOPER
1254	7001	IAC	
1255	7650	SMA CLA	
1256	5321	JMP	UMOPER
1257	1056	TAD	OLDOP
1260	0070	AND	077
1261	1276	TAD	OJUMP
1262	3271	DCA	OTEMP
1263	4505	JMS I	PPOP
1264	3375	DCA	OPERAND+2
1265	4505	JMS I	PPOP
1266	3374	DCA	OPERAND+1
1267	4505	JMS I	PPOP
1270	3073	DCA	OPERAND
1271	7402	PLT	
1272	0700	OTEMP, PLT	
1273	3755	0700, 700	
1274	7764	03755, 3755	
1275	7077	07764A, 7764	
1276	5677	07077, 7077	
1277	1312	OJUMP, JMP I	.+1
1300	1316	PLUS	
1301	1327	MINUS	
1302	1332	STAR	
1303	5742	SLASH	
1304	1342	UPARRX	/OR 'UPARROW' IF NO EXTENDED FNS
1305	1342	RELATE	
1306	1342	RELATE	
1307	1342	RELATE	

1310	RELATE	
1311	RELATE	
1312	FENTER	
1313	PLUS,	
1314	OPERAND	
1315	FADEXT,	
1316	FEXIT	
1317	JMP	
1318	MINUS,	
1319	FENTER	
1320	FSTR	
1321	FEXIT	
1322	UNOPER,	
1323	TAD	
1324	AC1	
1325	CLA	
1326	CLA	
1327	CLL	
1328	RAR	
1329	TAD	
1330	ACS	
1331	DCA	
1332	JMP	
1333	OPDONE	
1334	STAR,	
1335	FENTER	
1336	FMP	
1337	OPERAND	
1338	FJMP+BKWD+.	
1339	FADEXT	
1340	SLASH,	
1341	FENTER	
1342	FST+FWD+SLSTMP+.	
1343	FLD	
1344	OPERAND	
1345	FJMP+FKWD+SLSTMP+.	
1346	FJMP+FKWD+.	
1347	FADEXT	
1348	SLSTMP,0;0;0	
1349	RELATE,	
1350	TAD	
1351	OLDOP	
1352	CONST	
1353	THESKIP	
1354	0	
1355	THESKIP	
1356	10	
1357	THESKIP	
1358	DCA	
1359	FENTER	
1360	FSTR	
1361	OPERAND	
1362	THESKIP,HLT	
1363	FJMP+FWD+4	
1364	ONE	
1365	FLD	
1366	FEXIT	
1367	JMP	
1368	OPDONE	
1369	FLD	
1370	ZERO	
1371	FEXIT	
1372	JMP	
1373	OPDONE	
1374	JMS	
1375	I	
1376	PPOP	
1377	DCA	
1378	OLDOP	
1379	JMP	
1380	I	
1381	OLDOP	
1382	CONST,	
1383	23	
1384	4104	
1385	FSEW	
1386	FSGT	
1387	FSLT	
1388	FSGE	
1389	FSLE	
1390	FSNE	

PAGE

```

1400 0300 GETADDR,0
1401 6231 CDF I
1402 1632 TAD I
1403 3014 DCA INDEX2
1404 2230 ISZ GETADDR
1405 1620 TAD I
1406 3362 DCA GETADDR
1407 2230 ISZ GSS1
1408 1630 TAD I
1409 3363 DCA GETADDR
1410 2230 ISZ GSS2
1411 6211 CDF I
1412 1614 TAD I
1413 3067 DCA ADDRESS
1414 2067 TSZ ADDRESS
1415 1362 TAD GSS1
1416 7050 SNA CLA
1417 5261 JMP ALLOC
1418 7140 CLL CMA
1419 1362 TAD GSS1
1420 5372 SZL CLA
1421 1414 JMP SSERR
1422 3364 TAD I
1423 1353 DCA INDEX2
1424 7452 TAD GDIM2
1425 5253 SNA NOSS2
1426 7141 JMP CLA
1427 1364 TAD GDIM2
1428 7620 SNL CLA
1429 5372 JMP SSERR
1430 1362 TAD GSS1
1431 7141 CMA
1432 3362 DCA
1433 7413 SKP
1434 2362 TAD
1435 5246 JMP
1436 1363 TAD
1437 3362 DCA
1438 1362 TAD
1439 7144 CLL RAL
1440 1362 TAD
1441 6231 CDF I
1442 1632 TAD I
1443 3014 DCA INDEX2
1444 2230 ISZ GETADDR
1445 1620 TAD I
1446 3362 DCA GETADDR
1447 2230 ISZ GSS1
1448 1630 TAD I
1449 3363 DCA GETADDR
1450 2230 ISZ GSS2
1451 6211 CDF I
1452 1614 TAD I
1453 3067 DCA ADDRESS
1454 2067 TSZ ADDRESS
1455 1362 TAD GSS1
1456 7050 SNA CLA
1457 5261 JMP ALLOC
1458 7140 CLL CMA
1459 1362 TAD GSS1
1460 5372 SZL CLA
1461 1414 JMP SSERR
1462 3364 TAD I
1463 1353 DCA INDEX2
1464 7452 TAD GDIM2
1465 5253 SNA NOSS2
1466 7141 JMP CLA
1467 1364 TAD GDIM2
1468 7620 SNL CLA
1469 5372 JMP SSERR
1470 1362 TAD GSS1
1471 7141 CMA
1472 3362 DCA
1473 7413 SKP
1474 2362 TAD
1475 5246 JMP
1476 1363 TAD
1477 3362 DCA
1478 1362 TAD
1479 7144 CLL RAL
1480 1362 TAD GSS1

```

/..... 8 K INSERT.

/..... 8 K INSERT.

NOSS2,

PAL8

/RASIC.L8F

1456	1457	TAD	ADDRESS
1457	3357	DCA	ADDRESS
1460	5670	JMP I	GETADDR
1461	2834	ISZ	DIMFLAG
1462	7410	SKP	
1463	5273	JMP	ISDIM
1464	3034	DCA	DIMFLAG
1465	1363	TAD	GSS2
1466	7642	SZA	CLA
1467	1357	TAD	013
1470	3353	DCA	GSS2
1471	1357	TAD	013
1472	3352	DCA	GSS1
1473	1353	TAD	GSS2
1474	7450	SNA	
1475	7201	CLA	IAC
1476	7341	CIA	
1477	3354	DCA	GDIM2
1500	2134	ISZ	NOINT
1521	7371	CLA	CLL IAC
1512	1352	TAD	GSS1
1523	7432	SZL	
1524	5765	JMP I	PSPACERR
1525	2354	ISZ	GDIM2
1526	5322	JMP	.-4
1527	3354	DCA	GDIM2
1510	1354	TAD	GDIM2
1511	7124	CLL	CML RAL
1512	7428	SNL	
1513	1354	TAD	GDIM2
1514	3354	DCA	GDIM2
1515	1354	TAD	GDIM2
1516	7430	SZL	
1517	5765	JMP I	PSPACERR
1520	4544	JMS I	SPLEFT
1521	7410	SKP	
1522	5765	JMP I	PSPACERR
1523	7344	CLA	CLL
1524	1314	TAD	INDEX2
1525	3014	DCA	INDEX2
1526	1013	TAD	ARRLOC
1527	3414	DCA I	INDEX2
1530	1362	TAD	GSS1
1531	3414	DCA I	INDEX2
1532	1363	TAD	GSS2
1533	3414	DCA I	INDEX2
1534	7240	CLA	CMA
1535	1357	TAD	ADDRESS
1536	3057	DCA	ADDRESS
1537	1356	TAD	07774
1540	3363	DCA	GSS2
1541	1457	TAD I	ADDRESS
1542	2357	ISZ	ADDRESS
1543	4521	JMS I	PSTICKIT
1544	2353	ISZ	GSS2

/FORHID INTERRUPTS NOW.


```

1545 5341 JMP      .-4
1546 1364 TAD      GDIM2
1547 7841 CIA
1548 1168 TAD      04
1549 3354 DCA      GDIM2
1550 4521 JMS I   PSTICKIT
1551 2364 ISZ      GDIM2
1552 5352 JMP      .-2
1553 7345 CLA CLL  CMA RTL
1554 1230 TAD      GETADDR
1555 3232 DCA      GETADDR
1556 4543 JMS I   CNCLR
1557 5241 JMP      GETADDR+1
1558 2038 GSS1,
1559 2040 GSS2,
1560 2042 GDIM2,
1561 2044 PSPACER, SPACERR
1562 7774 07774, 7774
1563 2013 013,
1564 4477 SSERR,
1565 2325 JMS I   PERRR
1566 2223 TEXT 'SUBSCRIPT'
1567 1128
1568 2440

```

/CHECK FOR CONTROL C.

/(12) IF 1 ORG INDEXING

```

1576 1352 TAD      LINENO
1577 3213 DCA      INDEX1
1578 1413 TAD I   INDEX1
1579 3220 DCA      USERFN
1580 4571 GET+MUSTRE /'FN'
1581 3754 3754
1582 4571 GET+MUSTRE /A VARIABLE
1583 7830 7830
1584 4571 GET+MUSTRE /'C'
1585 3755 3755
1586 4571 GET+MUSTRE /A VARIABLE
1587 7100 7100
1588 4571 GET+MUSTRE /'I'
1589 3751 3751
1590 4571 GET+MUSTRE /'I'
1591 3673 3673
1592 5517 JMP I   PSKIPIT
1593 6457 PSKIPIT, SKIPIT
1594 2042 USERFN,
1595 4570 MORERD,
1596 3753 MUSTRE
1597 4513 JMS I   PGETVAR
1598 7240 CLA CMA
1599 1345 TAD      LOCCTR
1600 3273 DCA      LOCTMP

```

> MP *

1 arg 71
poly
Albion


```

1627 1246 TAD READLOC
1630 3246 DCA LOCCTR
1631 4567 GET+ISIT / (CR) OR '0'
1632 2330 2000
1633 7410 SKP
1634 5200 JMP
1635 4560 ISIT /A LINENO
1636 0300 0300
1637 7410 SKP
1641 5200 JMP
1641 4560 ISIT
1642 3753 3753
1643 5267 JMP DATAERR
ISSOME, JMS I PEVAL
1644 4541 1645 7242 CLA CMA
1646 1045 TAD LOCCTR
1647 3146 DCA READLOC
1650 1273 TAD LOCTMP
1651 3245 DCA LOCCTR
1652 4512 JMS I PSTQVAR / (CR) OR '0'
1653 4567 GET+ISIT
1654 2330 2000
1655 5221 JMP MORERD
1656 5533 JMP I PEXECUTE
1657 4177 SCHMR, JMS GETWD / 'DATA'
1661 4566 SEARCH, ISIT
1661 1757 1662 7410 SKP
1663 5244 JMP
1664 4566 ISIT
1665 1755 1755
1666 5267 JMP SCHMR
1667 4477 DATAERR, JMS I PERRR
1671 2401 TEXT 'DATA'
1672 2330 2000
1673 0300 LOCTMP, 0
1674 0300 GETBLK, 0
1675 4563 JMS I PCHKFIT
1676 1324 TAD CODELOC
1677 3145 DCA LOCCTR
1678 1034 TAD CODELOC
1679 1356 TAD ABCDEF
1682 3244 DCA CODELOC
1683 1024 TAD CODELOC
1684 3357 DCA BCDEFG
1685 1345 TAD PSYMTAB
1686 1356 TAD ABCDEF
1687 3245 DCA PSYMTAB
/UPDATE SYMBOL TABLE NOW.
/ BY ADDING IN CORRECTION FACTOR.

1712 1445 STBLP, TAD I LOCCTR /MOVE TEXT NOW.
1711 2145 ISZ LOCCTR
1712 3757 DCA I BCDEFG
1713 2157 ISZ BCDEFG
1714 1357 TAD BCDEFG /NOW CHECK FOR END.

```


1715	7041	CIA	PSYMTAB	
1716	1045	TAD		
1717	7640	SZA	CLA	
1720	5310	JMP	GTBKL	
1721	7240	CLA	CMA	
1722	1000	TAD	NSYMTAB	
1723	3000	DCA	NSYMTAB	
1724	1160	TAD	GSRT	
1725	7040	CMA		
1726	1164	TAD	PGOLIST	
1727	3357	DCA	BCDEFG	
1730	1164	TAD	PGOLIST	
1731	3050	DCA	WORD	
1732	1350	TAD	ABCDEF	
1733	1450	TAD	I	
1734	3450	DCA	I	
1735	2050	ISZ	WORD	
1736	2357	ISZ	BCDEFG	
1737	5332	JMP	-5	
1740	1050	TAD	FORCT	
1741	3357	DCA	BCDEFG	
1742	1360	TAD	PPFORLIS	
1743	3050	DCA	WORD	
1744	5352	JMP	+6	
1745	1356	TAD	ABCDEF	
1746	1450	TAD	I	
1747	3450	DCA	I	
1750	2050	ISZ	WORD	
1751	2050	ISZ	WORD	
1752	2357	ISZ	BCDEFG	
1753	5345	JMP	-6	
1754	1000	TAD	PSYMTAB	
1755	5674	JMP	I	
1756	7774	ABCDEF, -4	GETBLK	
1757	0000	BCDEFG, 0		
1758	7736	PPFORLI, FORLIST+1		
1761	0000	PUTJ, 0		
1762	4500	JMS	I	
1763	7200	CLA	PFI	
1764	1010	TAD	AC3	
1765	4433	JMS	I	
1766	4545	JMS	I	
1767	5761	JMP	I	
1770	3000	GETJ, 0		
1771	4776	JMS	I	
1772	4432	JMS	I	
1773	3010	DCA	AC3	
1774	4546	JMS	I	
1775	5770	JMP	I	
1776	3762	PBEGFIX, BEGFI		

/GETS A CHARACTER FROM THE TTY.
 /CLEAN UP THE FAC
 /FECIN A CHAR.
 /SAVE IT, BABY!
 /AND NORMALIZE AC.
 /AND RETURN NOW.

PAGE

/RESET AC SWITCH SO NO INTERRUPT NOW.

2000	2134	NOTNOW, ISZ	NOINT	
2001	2050	ISZ	WORD	
2002	1450	TAD I	WORD	
2003	7350	SNA		
2004	5232	JMP	INSERT	
2005	3371	DCA	LOWLOC	
2006	3450	DCA I	WORD	
2007	1371	TAD	LOWLOC	
2008	3345	DCA	LOCCTR	
2009	4510	JMS I	PPASSCR	
2010	1371	TAD	LOWLOC	
2011	7341	CIA		
2012	1324	TAD	CODELOC	
2013	7550	SNA CLA		
2014	5230	JMP	INSRTS	
2015	7341	CLA CLL	CMA	
2016	1371	TAD	LOWLOC	
2017	7341	DCA	LOWLOC	
2018	3371	CLA CLL	CMA	
2019	7340	TAD	LOCCTR	
2020	1345	DCA	LOCCTR	
2021	1771	TAD I	LOWLOC	
2022	3445	DCA I	LOCCTR	
2023	5212	JMP	MOVE	
2024	1345	TAD	LOCCTR	
2025	3344	DCA	CODELOC	
2026	1357	TAD	FPTR	
2027	1240	TAD	MLINBUF	
2028	7440	CMA		
2029	3357	DCA	FPTR	
2030	7326	CLA CLL CML RTL		
2031	1357	TAD	FPTR	
2032	7452	SNA		
2033	5313	JMP	FIXLIN	
2034	7140	CMA		
2035	4553	JMS I	PCHKFIT	
2036	1234	TAD	CODELOC	
2037	3345	DCA	LOCCTR	
2038	1437	TAD I	PLINBUF	
2039	7341	IAC		
2040	3413	DCA	INDEX1	
2041	1413	TAD I	INDEX1	

2052	3073	DCA	OPERAND
2053	1413	TAD I	INDEX1
2054	3474	DCA	OPERAND+1
2055	4336	JMS	COMPARE
2056	5261	JMP	NOTFRST
2057	4361	JMS	SUBRA
2058	5303	JMP	TRANSF
2059	4517	NOTFRST, JMS I	PPASSCR
2060	4336	JMS	COMPAR
2061	5261	JMP	NOTFRST
2062	1045	TAD	LOCCTR
2063	3360	DCA	LSTLOC
2064	1034	TAD	CODELOC
2065	3045	DCA	LOCCTR
2066	4361	JMS	SUBRA
2067	4177	JMS	GETWD
2068	1350	MOVLP, TAD	WORD
2069	3772	DCA I	PULOC
2070	2372	ISZ	PULOC
2071	4177	JMS	GETWD
2072	1350	TAD	LSTLOC
2073	7041	CIA	
2074	1345	TAD	LOCCTR
2075	7640	SZA CLA	
2076	5272	JMP	MOVLP
2077	1337	TRANSF, TAD	PLINBUF
2078	3360	DCA	GPTR
2079	1460	TAD I	GPTR
2080	2372	ISZ	GPTR
2081	3772	DCA I	PULOC
2082	2372	ISZ	PULOC
2083	2357	ISZ	FPTR
2084	5305	JMP	TRALUP
2085	4561	FIXLIN, JMS I	PLINFIX
2086	5520	JMP I	PEDIT

/THIS ROUTINE LOOKS FOR A "0" OR A C

2115	2020	IGNORE, 0	
2116	4567	GET+ISIT	/TEXT?
2117	5020	JMP	/NOPE.
2118	5327	JMS	NOTBAD
2119	4177	TAD	GETWD
2120	1350	AND	WORD
2121	2372	SZA CLA	077
2122	7640	JMP	-4
2123	5321	JMP	/NOPE.
2124	5316	JMP	/YEP. GET NEXT ITEM.
2125	4575	NOTBAD, JMS I	/IS IT A LITERAL?
2126	7410	SKP	
2127	5316	JMP	IGNORE+1
2128	4566	ISIT	/YES.
2129	2020		/"0" OR C.R.

2134 5316 JMP IGNORE+1 / N 0
 2135 5715 JMP I IGNORE /YES. RETURN TO CALLER.

2136 0320 COMPARE, 0
 2137 4567 GET+ISIT /A LINENO
 2142 0332 JMP
 2141 5356 TAD IAMLESS
 2142 1350 TAD WORD
 2143 7331 IAC
 2144 3313 DCA INDEX1
 2145 1413 TAD I INDEX1
 2146 7141 CLL CIA
 2147 1073 TAD OPERAND
 2150 7540 SZL CLA
 2151 5355 JMP FRSTINE
 2152 1413 TAD I INDEX1
 2153 7141 CLL CIA
 2154 1274 TAD OPERAND+1
 2155 7520 FRSTINE, SNL CLA /IS OPERAND<THIS LINENO
 2156 2336 IAMLESS, ISZ COMPARE /YES
 2157 5736 JMP I COMPARE
 2162 0322 LSTLOC, 0
 2161 0304 SUBRA, 0
 2162 1057 TAD FPTR
 2163 7100 CLL
 2164 1024 TAD CODELOC
 2165 3304 DCA CODELOC
 2166 1004 TAD CODELOC
 2167 3372 DCA PUTLOC
 2170 5751 JMP I SUBRA
 2171 0300 LOKLOC, 0
 2172 0302 PUTLOC, 0

2173 4177 PRINT, JMS GETWD /THIS INSTRUCTION MAY BE COMBINED WI
 2174 7346 IN THE GET INSTRUCTION BEL
 2175 1131 CLA CLL
 2176 1131 TAD OUTDEV /7775=-3. FOR DEVICE CHECK.
 2177 1131 TAD OUTDEV /MULTIPLY DEVICE BY 3.
 2200 1351 TAD OUTDEV /SO THAT LPT=6, PTP=3, AND TTY=0.
 2201 3357 DCA TWIDTH /NOK ADD IN 72. THUS TTY=72, LPT=80.
 /AND SAVE FOR FUTURE USE.


```

1202 4566 ISIT /CHECK FOR FIRST COMMA. ONCE ONLY CH
1203 3763 PRINTC /NO. CONTINUE CHECKING.
1204 5237 JMP PRINBLK /YEP. GIVE BLANK, THEN TAB OVER.
1205 5277 JMP

1206 4177 PRINTG, JMS GETWD /GET NEXT ELEMENT AFTER A TEXT ELEME
IT.

1207 3345 PRINTC, DCA TABFLG /RESET TAB INDICATER.
1208 4566 ISIT /CHECK TO SEE IF CARRIAGE RETURN.
1209 2000 JMP NOPCR /NOT A CARRIAGE RETURN. CONTINUE CHE
CKING.

1213 4514 JMS I PPRINTXT
1214 6531 CRLF
1215 5503 JMP I PEXECUTE

1216 4566 NOPCR, ISIT /IS IT A COMMA ("")
1217 3763 JMP PRENT /NO. FINISH CHECKING BELOW.
1218 5316 JMP PRINCOM /IT IS. PROCESS THE COMMA NOW.
1219 5333 JMP /TEXT

1222 4566 PRINTHS, ISIT
1223 5000 JMP NOTTXI
1224 5236 JMP GETWD
1225 4177 PRINQUO, JMS WORD
1226 1352 TAD
1227 7012 RTP
1228 7012 RTP
1229 7012 RTP
1230 4260 JMS
1231 1350 TAD
1232 4260 JMS
1233 1350 TAD
1234 4260 JMS
1235 5225 JMP PRINHAF
1236 1241 TAD WORD
1237 5640 PPRINRET
1238 1037 PEVALGO
1239 2242 NOTTXI, TAD
1240 1345 PRINRET, TAD
1241 1345 SZA CLA
1242 7640 JMP I
1243 6762 TAD
1244 1362 TAD
1245 4346 JMS CHECKW
1246 1124 TAD ACS
1247 7110 SPA CLA
1248 5254 JMP
1249 1751 TAD
1250 4433 JMS I PPATCH
1251 4517 JMS I POUTNUM
1252 1051 TAD
1253 4433 JMS I PPATCH
1254 5237 JMP PRINTC
1255 2000 PRINHAF, AND
1256 0070

```

/GO BACK AND GET NEXT.

1345 0000

TABFLG, 0

/TAB FOUND FLAG.

1346 0000

CHECKW, 0

/THIS ROUTINE CHECKS FOR LINE TOO LO

1347 1126

TAD

COLUMN

/GET WHERE AT NOW.

1348 7200

CMA

TAD

/WHEREAT-#OF PLACES IN OUT CHAR.

1349 1357

TAD

TWIDTH

/ADD IN WIDTH OF DEVICE.

1350 7700

SMA CLA

TAD

/TOO BIG.

1351 5746

JMP I

CHECKW

/NAH. RETURN TO SENDER.

1352 4514

JMS I

PPRINTXT

/YEP.GIVE C.R.L.F.

1353 6531

CRLF

JMP I

/AND RETURN TO SENDER.

1354 5746

JMP I

CHECKW

/AND RETURN TO SENDER.

1355 0000

TWIDTH, 0

JMP I

/0 IS OK SINCE IT'LL BE SET UP CORRE

1356 2014

14

JMP I

/MAGIC CONSTANT.

1357 0110

0110, 110

JMP I

/WDTH OF JTY PAPER.

1358 6350

TABTHR, TABDO

JMP I

/ROUTINE WHICH PROCESS TAB CHARACTER

363 0073

MENDPDL,-ENDPDL-1

JMP I

364 0000

PUSH, 0

JMP I

/MAGIC CONSTANT.

365 3436

DCA I

PDL

/WDTH OF JTY PAPER.

366 2036

ISZ

PDL

/MAGIC CONSTANT.

367 1036

TAD

PDL

/WDTH OF JTY PAPER.

368 1363

TAD

MENDPDL

/WDTH OF JTY PAPER.

369 7640

SZA CLA

JMP I

/WDTH OF JTY PAPER.

370 5754

JMP I

PUSH

/WDTH OF JTY PAPER.

371 4477

JMS I

PERROR

/WDTH OF JTY PAPER.

372 0530

TEXT 'EXPRESSION'

JMP I

/WDTH OF JTY PAPER.

373 2022

JMS I

PERROR

/WDTH OF JTY PAPER.

374 0523

JMS I

PERROR

/WDTH OF JTY PAPER.

375 2311

JMS I

PERROR

/WDTH OF JTY PAPER.

400 1716

JMS I

PERROR

/WDTH OF JTY PAPER.

401 0000

JMS I

PERROR

/WDTH OF JTY PAPER.

402 4541

EXIT,

JMS I

/WAIT FOR BUFFER TO EMPTY AND THEN C

403 1007

TAD

0215

/WAIT FOR BUFFER TO EMPTY AND THEN C

404 4433

JMS I

PPUTCH

/WAIT FOR BUFFER TO EMPTY AND THEN C

225	1210	EDIT,	TAD	0212	
226	4433		JMS I	PPUICH	
227	1132		TAD	OUTD2	/RESET DEVICE
228	3131		DCA	OUTDEV	
229	4543		JMS I	CNCLR	/CHECK TO SEE IF AC WAS TYPED.
230	1352		TAD	PXXIHEN	
231	4524		JMS I	PGETLIN	
232	1437		TAD I	PLINBUF	
233	3452		OCA	WORD	
234	1452		TAD I	WORD	
235	7651		SNA CLA		
236	5766		JMP I	PNOTNOW	
237	1212		TAD	0212	
238	4433		JMS I	PPUICH	
239	1132		TAD	OUTD2	/RESET I/O DEVICE.
240	3131		DCA	OUTDEV	
241	4566		ISIT		/RUN
242	3736		3736		
243	7410		SKP		
244	5252		JMP	RUN	
245	4566		ISIT		/LIS
246	3737		3737		
247	7410		SKP		
248	5763		JMP I	PLIST	
249	4566		ISIT		/SCR
250	3735		3735		
251	5254		JMP	IMMED	
252	1365		SCRATCH, TAD	PPERNSYM	
253	3034		DCA	CODELOC	
254	1364		TAD	PXEDF	
255	3765		DCA I	PPERNSYM	
256	1366		TAD	PPERNSYM	
257	7431		IAC		
258	3435		DCA	PSYMTAB	
259	7240		CLA CMA		
260	3236		DCA	NSYMTAB	
261	4537		JMS I	PRESET	/RESET DEVICES AFTER SCRATCH.
262	4262		JMS	CLEARV	
263	5543		JMP I	PEXECUTE	
264	1037		TAD	PLINBUF	
265	3445		DCA	LOCCTR	
266	1364		TAD	PXEDF	
267	3352		DCA	LINENO	
268	5523		JMP I	PEXECUTE	
269	7631		PUSET, SETUP		
270	0000		CLEARV,		
271	4561		JMS I	PUSET	
272	5333		JMP	RUNIN	
273	1450		TAD I	EPTR	
274	1352		TAD	07002A	
275	7642		SZA CLA		/IS IT A VARIABLE
276	5277		JMP	RUNNOT	/NO
277	2056		ISZ	EPTR	

2472	1456	TAD I	EPTR	
2473	3460	DCA	GPTR	
2474	1460	TAD I	GPTR	
2475	3456	DCA I	EPTR	
2476	7410	SKP		
2477	2456	RUN2NOT, ISZ	EPTR	
2478	2456	ISZ	EPTR	
2479	2456	ISZ	EPTR	
2480	2456	ISZ	EPTR	
2481	2456	ISZ	EPTR	
2482	2456	ISZ	EPTR	
2483	2457	ISZ	EPTR	
2484	5285	JMP	RUNLUP	
2485	1301	TAD	PLIMIT	
2486	3433	DCA	ARRLOC	
2487	1330	TAD	PSYMTAB	
2488	3456	DCA	EPTR	
2489	1420	TAD	NSYMTAB	
2490	3457	DCA	FPTR	
2491	5343	JMP	RUN2IN	
2492	1456	RUN2LUP, TAD I	EPTR	
2493	1360	TAD	07002A	
2494	7642	SZA CLA	RUN2NOT /NO	
2495	5337	JMP	EPTR	
2496	2456	ISZ	EPTR	
2497	1456	TAD I	TMP	
2498	3431	DCA	ARRLOC	
2499	1283	TAD	TMP	
2500	3456	DCA I	EPTR	
2501	1431	TAD	PSYMTAB	
2502	4521	JMS I	PSYMTAB	
2503	4521	JMS I	PSYMTAB	
2504	4521	JMS I	PSYMTAB	
2505	4521	JMS I	PSYMTAB	
2506	2456	ISZ	EPTR	
2507	3456	DCA I	EPTR	
2508	2456	ISZ	EPTR	
2509	3456	DCA I	EPTR	
2510	5342	JMP	•+4	
2511	2456	RUN2NOT, ISZ	EPTR	
2512	2456	ISZ	EPTR	
2513	2456	ISZ	EPTR	
2514	2456	ISZ	EPTR	
2515	2457	ISZ	EPTR	
2516	5314	JMP	RUN2LUP	
2517	1334	TAD	CODELOC	
2518	3445	DCA	LOCCTR	
2519	1125	TAD	PPDLIST	
2520	3456	DCA	POL	
2521	1414	TAD	CODELOC	
2522	3440	DCA	READLOC	
2523	7240	CLA CMA		
2524	3763	DCA	FORCT	
2525	1164	TAD	PGOLIST	
2526	3165	DCA	GSBPR	
2527	5662	JMP I	CLEARV	
2528	7000	07300A, 7000		

/BASIC.L5E

```

2561 1470 PLIMIT, LIMIT
2562 7253 PAXTHEN, XTHEN
2563 3630 PLIST, LIST
2564 7522 PAXEOF, XEOF
2565 7022 PPERMSY, PERMSY
2566 2572 PNOTNOW, NOTNOW
2567 4252 END,
2571 4517 STOP,
2571 4517 JMS I
2571 4517 JMS I
2572 4514 JMS I
2573 6325 READY
2574 5520 JMP I

```

```

CLEARY
PRESET
PCONT
PPRINTX

```

```

/RESET ALL DEVICES NOW,
/AND WAIT FOR I/O TO FINISH UP.
/AND GIVE THE STOP MESSAGE

```

PAGE

```

2620 4561 GETLRET, JMS I PLINFX
2621 4543 JMS I CNCLR
HERE.
2622 5643 JMP I GETLIN
2623 2200 GETLIN, 0
2624 3254 DCA SNUMFLG
2625 1131 TAD OUTDEV
2626 3130 DCA OUTD2
2627 3131 DCA OUTDEV
2628 1172 TAD PLREGIN
2629 3055 DCA EPTR
2630 1372 TAD 042
2631 3456 DCA I EPTR
2632 2356 ISZ EPTR
2633 4332 MENCHAR, JMS I PGETCH
2634 3456 DCA I EPTR
2635 7240 CLA CMA
2636 1127 TAD INDEV
2637 7832 SZA CLA
2638 5225 JMP +4
2639 3133 DCA CNTLO

```

/CHECK TO SEE IF AC WAS TYPED WHILE

```

/GET THE OUTPUT DEVICE.
/SAVE FOR A SECOND.
/TURN OFF THE OUTPUT DEVICE.

```

```

/CHECK THE INPUT DEVICE NOW.
/GET IT, BABY.
/IS IT THE ITTY?
/NOPE.
/IT IS. RESET CONTROL 0.

```


2713	1451	TAD I	HPTR
2714	7650	SNA CLA	
2715	5776	JMP I	POTHR
2716	1461	TAD	HPTR
2717	3450	DCA	WORD
2721	2461	ISZ	HPTR
2721	3424	DCA	ACS
2722	1462	TAD I	GPTR
2723	1454	TAD	07740
2724	7640	SZA CLA	
2725	5330	JMP	BSKIP
2726	2458	ISZ	GPTR
2727	5322	JMP	HLOOP
2730	7330	CLA CLL	CML RAR
2731	1424	TAD	ACS
2732	3424	DCA	ACS
2733	1451	TAD I	HPTR
2734	7430	SZL	
2735	2451	ISZ	HPTR
2736	7430	SZL	
2737	5343	JMP	•+4
2740	7012	RTR	
2741	7012	RTR	
2742	7012	RTR	
2743	0170	AND	077
2744	7450	SNA	
2745	5766	JMP I	JMATCH
2746	1454	TAD	07740
2747	7450	SNA	
2750	5330	JMP	BSKIP
2751	0370	AND	077
2752	1370	TAD	040
2753	7441	CIA	
2754	1450	TAD I	GPTR
2755	2452	ISZ	GPTR
2756	7450	SNA CLA	
2757	5322	JMP	HLOOP
2760	1451	TAD I	HPTR
2761	0370	AND	077
2762	2451	ISZ	HPTR
2763	7640	SZA CLA	
2764	5362	JMP	•-4
2765	5311	JMP	GLOOP
2766	6506	JMATCH, AMATCH	
2767	0330	036, 36	
2770	0340	040, 40	
2771	0122	0122, 122	
2772	0140	0140R, 140	
2773	3737	03737B, 3737	
2774	7533	07603, 7603	
2775	7715	07715, 7715	
2776	3002	POTHR, OTHER	
2777	7423	PIABLE, XXPLUS	

PAGE

3020	4310	OTHER,	JMS	NONBLK
3021	1301		TAD	077638
3022	7442		SZA	
3023	5223		JMP	NOTCR
3024	1325		TAD	PXXCRLF
3025	3457		DCA I	FPTR
3026	1157		TAD	FPTR
3027	3313		DCA	INDEX1
3028	1326		TAD	PXXEXIT
3029	1313		DCA I	INDEX1
3030	1413		TAD	INDEX1
3031	1411		TAD	MENDLIN
3032	7450		SNA	
3033	5622		JMP I	PGETLRET
3034	7710		SPA CLA	
3035	5210		JMP	.-7
3036	5621		JMP I	PTURIG
3037	2557		PTURIG, TURIG	
3038	2610		PGETLRE, GETLRET	
3039	1322		NOTCR, TAD	07737
3040	7450		SNA	
3041	5724		JMP I	JDIGIT
3042	1372		TAD	077648
3043	7100		CLL	
3044	1455		TAD	012
3045	7432		SZL	
3046	5724		JMP I	JDIGIT
3047	1320		TAD	07725A
3048	1320		CLL	
3049	1321		TAD	032
3050	7432		SZL	
3051	5733		JMP I	PLETTER
3052	7332		CLA CLL	CML RAR
3053	1456		TAD I	EPTR
3054	3056		DCA I	EPTR
3055	1376		REMPACK, TAD	PTEXT
3056	3457		DCA I	FPTR
3057	2457		ISZ	FPTR
3058	3347		TXTPAK, DCA	THISTXT
3059	1456		TAD I	EPTR
3060	1301		TAD	077638
3061	7450		SNA	
3062	5270		JMP	CRINXT
3063	1344		TAD	07753
3064	7650		SNA CLA	
3065	5372		JMP	DOINTXT

3056	1456	TAD I	EPIR
3057	077	AND	
3060	3456	DCA I	EPIR
3061	1317	TAD	THISIXT
3062	7450	SNA	
3063	5272	JMP	LHALF
3064	1456	TAD I	EPIR
3065	3457	DCA I	EPIR
3066	2157	ISZ	EPIR
3067	5274	JMP	RHALF
3070	1456	TAD I	EPIR
3071	7120	CLL	RTL
3072	7226	RTL	
3073	7226	RTL	
3074	2156	ISZ	EPIR
3075	5246	JMP	TXTPAK
3076	1327	CRINTXT,TAD	THISIXT
3077	5723	JMP I	JTXXIT
3100	7725	07725A, 7725	
3101	7753	077633, 7763	
3102	7754	077643, 7764	

3103	3436	PLETTER, LETTER	
3104	7753	07753, 7753	
3105	4200	04223, 4200	
3106	0442	042, 42	
3107	0002	THISIXT, 0	
3110	0332	NONBLNK, 0	
3111	1456	TAD I	EPIR
3112	1354	TAD	07740
3113	7640	SZA	CLA
3114	5317	JMP	.+3
3115	2056	ISZ	EPIR
3116	5311	JMP	NONBLNK+1
3117	1456	TAD I	EPIR
3120	5710	JMP I	NONBLNK
3121	0332	032, 32	
3122	7737	07737, 7737	
3123	3231	JTXXIT, MTXXIT	
3124	3234	JOIGIT, DIGIT	
3125	7226	PXXCRUF, XXCRLF	
3126	7635	PXXEXIT, XEXXIT	
3127	0772	PCPERA, OPERAND-1	
3130	7536	PXXLIT2, XXLIT0	
3131	4435	LITRAL, FEENTER	
3132	2273	FST	OPERAND
3133	0220	FEXIT	
3134	1076	TAD	OPERAND+2
3135	7640	SZA	CLA
3136	5346	JMP	ALL3
3137	1074	TAD	OPERAND+1
3140	7640	SZA	CLA
3141	5347	JMP	JUST2

3142	1273	TAD	OPERAND
3143	7650	SNA	CLA
3144	5350	JMP	JUST0
3145	7344	CLA	CLL CMA RAL
3146	7341	IAC	
3147	1162	TAD	02
3148	7442	CMA	
3150	7442	CMA	
3151	3331	DCA	TMP
3152	1327	TAD	POPERA
3153	3213	DCA	INDEX1
3154	1431	TAD	TMP
3155	7442	CMA	
3156	1332	TAD	PXXLIIT0
3157	5353	JMP	JUST0P
3158	6201	CDF	0
3161	1413	TAD	INDEX1
3162	6211	CDF	10
3163	3457	DCA	I
3164	2357	ISZ	FPTR
3165	2331	ISZ	TMP
3166	5360	JMP	JUST0F
3167	5516	JMP	I PSLOOP

/..... 8 K INSERT.

/..... 8 K INSERT.

3172	1337	DQINTXT, TAD	THISTXT
3171	2456	ISZ	EPTR
3172	7444	SZA	
3173	5376	JMP	+3
3174	1325	TAD	04200
3175	5723	JMP	I JTXIT
3176	1336	TAD	042
3177	3457	DCA	I
3202	2357	ISZ	FPTR
3201	3457	DCA	I
3202	2357	ISZ	FPTR
3203	5516	JMP	I PSLOOP

3204	7232	DIGIT,	CLA	
3205	1454	TAD	I	SNUMFLG
3206	1370	TAD	01774	
3207	7442	SZA		/IS IT 'GOTO' OR 'THEN'
3210	7331	IAC		
3211	7140	SZA		/OR 'GOSUB'
3212	1375	TAD	01742	
3213	7550	SNA	CLA	/OR 'LIST'
3214	7244	CLA	CMA	/YES
3215	3454	DCA		SNUMFLG
3216	4435	FENTER		
3217	3152	FLD	ZERO	
3220	0030	FEXIT		
3221	3355	DCA	DPFLAG	
3222	3360	DCA	DECFRAC	
3223	7410	SKP		

3224	2056	ISZ	ISZ	EPTR	
3225	4522	JMS I	JMS I	PNONBLNK	
3226	1316	TAD	TAD	07673	
3227	7450	SNA	SNA		
3230	5263	JMP	JMP	ITSE	
3231	1370	TAD	TAD	027	
3232	7450	SNA	SNA		
3233	5256	JMP	JMP	ITSDP	
3234	1374	TAD	TAD	07764C	
3235	7100	CLL	CLL		
3236	1055	TAD	TAD	012	
3237	7424	SNA	SNA		
3240	5331	JMP	JMP	ENDNUM	
3241	7110	CLL RAR	CLL RAR		
3242	1373	TAD	TAD	02049A	
3243	3360	DCA	DCA	FDIGIT	
3244	7210	RAR	RAR		
3245	3351	DCA	DCA	FDIGIT+1	
3246	4435	FENTER	FENTER		
3247	6515	FMPI	FMPI	PTEN	
3250	4310	FAD+FWO+FDIGIT-	FAD+FWO+FDIGIT-		
3251	0000	FEXIT	FEXIT		
3252	1365	TAD	TAD	DFFLAG	
3253	7640	SZA CLA	SZA CLA		
3254	2350	ISZ	ISZ	DECFRAC	
3255	5224	JMP	JMP	DIGIN	
3256	1365	TAD	TAD	DFFLAG	
3257	7640	SZA CLA	SZA CLA		
3260	5331	JMP	JMP	ENDNUM	
3261	2355	ISZ	ISZ	DFFLAG	
3262	5224	JMP	JMP	DIGIN	
3263	3350	DCA	DCA	FDIGIT	
3264	1054	TAD	TAD	SNUMFLG	
3265	7640	SZA CLA	SZA CLA		
3266	5331	JMP	JMP	ENDNUM	
3267	2350	ISZ	ISZ	EPTH	
3270	4522	JMS I	JMS I	PNONBLNK	
3271	1371	TAD	TAD	07725B	
3272	7450	SNA	SNA		
3273	5330	JMP	JMP	ITSP	
3274	1372	TAD	TAD	07776	
3275	7640	SZA CLA	SZA CLA		
3276	5341	JMP	JMP	NOTSGN	
3277	2360	ISZ	ISZ	FDIGIT	
3278	2150	ITSP,	ITSP,		
3279	4757	NOTSGN,	NOTSGN,		
3281	5331	JMS I	JMS I	JISDIG	
3282	5331	JMP	JMP	ENDNUM	
3283	2355	ISZ	ISZ	EPTR	
3284	3351	DCA	DCA	FDIGIT+1	
3285	4767	JMS I	JMS I	JISDIG	
3286	5322	JMP	JMP	ONLY	
3287	7230	CLA	CLA		
3288	1351	TAD	TAD	FDIGIT+1	
3311	7106	CLL RTL	CLL RTL		
3312	1351	TAD	TAD	FDIGIT+1	

3313	7134	CLL RAL	FDIGIT+1
3314	3361	DCA	JISDIG
3315	4767	JMS I	
3316	7673	07673,	
3317	1361	TAD	FDIGIT+1
3320	3361	DCA	FDIGIT+1
3321	2356	ISZ	EPTR
3322	1360	TAD	FDIGIT
3323	7110	CLL RAR	FDIGIT+1
3324	1361	TAD	
3325	7420	SNL	
3326	7041	CIA	
3327	1366	TAD	
3330	3366	DCA	DECFRAC
3331	7200	CLA	DECFRAC
3332	1366	TAD	DECFRAC
3333	7702	SMA CLA	
3334	1364	TAD	DIVXTEN
3335	1363	TAD	MULXTEN
3336	3346	DCA	MULEXP
3337	1360	TAD	DECFRAC
3340	7510	SPA	
3341	7241	CIA	
3342	7440	CMA	
3343	3366	DCA	DECFRAC
3344	5350	JMP	•+4
3345	4435	FENTER	
3346	7432	MULEXP,	
3347	0000	HLT	
3350	2366	FEXIT	
3351	5345	ISZ	DECFRAC
3352	2364	JMP	•-4
3353	5777	ISZ	SNUMFLG
3354	4006	JMP I	PLITRAL
3355	7232	JMS I	PPIX
3356	5757	CLA	
3357	3400	JMP I	PCOMMON
3358	0000	PCOMMON,COMMON	
3361	0302	FDIGIT, 0:0;0	
3362	0004	MULXTEN,FMPI	PTEN
3363	6545	DIVXTEN,F0V-FMP	
3364	1000	DFFLAG, 0	
3365	0302	DECFRAC, 0	
3366	0002	JISDIG, ISDIG	
3370	0027	027, 27	
3371	7725	07725H, 7725	
3372	7776	07776, 7776	
3373	2040	02040A, 2040	
3374	7764	07764C, 7764	
3375	1742	01742, 1742	
3376	1774	01774, 1774	
3377	3131	PLITRAL, LITRAL	

PAGE	COMMON,	TAD	PSYMTAB
3400	1075	DCA	GPTR
3401	3250	TAD	NSYMTAB
3402	1076	DCA	HPTR
3403	3251	JMP	IN
3404	5231	TAD I	GPTR
3405	1450	ISZ	GPTR
3406	2050	ISZ	GPTR
3407	2050	SZA CLA	
3408	7540	JMP	NOT
3409	5227	TAD I	GPTR
3410	1450	ISZ	GPTR
3411	2050	CIA	AC2
3412	7441	TAD	CLA
3413	1417	SZA	NOT+1
3414	7540	JMP	GPTR
3415	5232	TAD I	
3416	1450	CIA	AC3
3417	7441	TAD	CLA
3418	1416	SZA	NOT+1
3419	7540	JMP	CMA RTL
3420	5230	CLA CLL	ISDEF2
3421	7346	JMP	GPTR
3422	5312	ISZ	GPTR
3423	2050	ISZ	HPTR
3424	2050	JMP	LUP
3425	2051	JMS I	PGETBLK
3426	5235	DCA	SNUMFLG
3427	4515	DCA I	SNUMFLG
3428	3054	TAD	SNUMFLG
3429	3454	DCA I	INDEX1
3430	1054	DCA I	INDEX1
3431	3213	TAD	AC2
3432	3413	DCA I	INDEX1
3433	1017	TAD	AC3
3434	3413	DCA I	INDEX1
3435	1216	TAD	AC3
3436	3413	DCA I	INDEX1
3437	5314	JMP	ITSDEF
3438	7531	LETTER,	IAC
3439	7156	CLL	RTL
3440	7206	RTL	
3441	7086	RTL	
3442	3231	DCA	TMP
3443	2056	ISZ	EPTR
3444	4522	JMS I	PNONBLNK
3445	1273	TAD	07706C
3446	7100	CLL	

3457	1465	TAD	CLA	012
3461	7620	SNL		
3461	5260	JMP	SIMPLV	
3462	1450	TAD	I	EPTR
3463	1331	TAD		TMP
3464	3231	DCA		TMP
3465	2050	ISZ		EPTR
3466	1015	SIMPLV, TAD	PSYMTAB	
3467	3062	DCA	GPTR	
3472	1030	TAD	NSYMTAB	
3471	3361	DCA	HPTR	
3472	5324	JMP	VSCHIN	
3473	7706	07706C, 7706		
3474	7070	07003B, 7000		
3475	1460	VSCHLUP, TAD	I	GPTR
3476	1274	TAD	07003B	
3477	7642	SZA	CLA	
3502	5320	JMP	VSCHNOT	
3511	2050	ISZ	GPTR	
3522	1460	TAD	I	GPTR
3523	3064	DCA	SNUMFLG	
3524	1464	TAD	I	SNUMFLG
3525	7041	CIA		
3526	1031	TAD	TMP	
3527	7640	SZA	CLA	
3510	5321	JMP	VSCHNOT+1	
3511	7242	CLA	CMA	
3512	1052	ISDEF2, TAD	GPTR	
3513	3064	DCA	SNUMFLG	
3514	1064	ITSDEF, TAD	SNUMFLG	
3515	3457	DCA	I	FPTR
3516	2057	ISZ	FPTR	
3517	5510	JMP	I	PSLOOP
3520	2052	VSCHNOT, ISZ	GPTR	
3521	2050	ISZ	GPTR	
3522	2060	ISZ	GPTR	
3523	2050	ISZ	GPTR	
3524	2051	ISZ	HPTR	
3525	5275	JMP	VSCHLUP	
3526	4516	JMS	I	PGETALK
3527	3064	DCA	SNUMFLG	
3530	7240	CLA	CMA	
3531	1054	TAD	SNUMFLG	
3532	3013	DCA	INDEX1	
3533	1353	TAD	01020	
3534	3413	DCA	I	INDEX1
3535	1003	TAD	ARRLOC	
3536	3413	DCA	I	INDEX1
3537	3413	DCA	I	INDEX1
3540	3413	DCA	I	INDEX1
3541	4563	JMS	I	PCHKFIT
3542	1031	TAD	TMP	
3543	4521	JMS	I	PSTICKIT
3544	4521	JMS	I	PSTICKIT
3545	4521	JMS	I	PSTICKIT


```

3546 4521 JMS I PSTICKIT
3547 5314 JMP ITSDEF
3550 1000 01300, W
3551 2072 CLA CMA
3552 7240 TAD PDL
3553 1036 DCA PDL
3554 3036 TAD I PDL
3555 1436 JMP I POP
3556 5751 FOURIF, TEXT 10000;
3557 3737
3558 3737
3561 0000 UGH1, TEXT 10000 BIG. LINE IGNORED;
3562 3724
3563 1717
3564 4032
3565 1107
3566 5640
3567 1411
3570 1635
3571 4011
3572 0710
3573 1722
3574 0524
3575 3700

```

```

3620 1746 LIST, TAD I PXLINBUF
3621 3450 DCA WORD
3622 4566 ISIT /CHECK FOR A "*"
3623 3470 3476 /NOPE.
3624 5210 JMP +4 /VEP. SET UP PUTXRA BY GIVING A PHOO
3625 7240 CLA CMA
3626 4541 JMS I PCOMT
3627 4177 JMS GETWD /CALL TO THE WAIT ROUTINE.
3628 4566 ISIT /AND GET ANOTHER WORD NOW.
3629 4000 0000 /LINE NO
3630 5216 JMP LISTALL
3631 2050 ISZ WORD
3632 1450 TAD I WORD
3633 7450 SNA CODELOC
3634 1324 LISTALL, TAD LOCCTR
3635 3045 LISTSUM, DCA
3636 4177 LISTUP, JMS GETWD
3637 4566 ISIT / (EOF)
3638 1755

```



```
3623 5230 JMP LNOEND /NOT DONE YET
3624 4541 JMS I PCOWT /WAIT FOR I/O TO FINISH AND CLEAN UP

3625 4332 JMS PRINTXT
3626 3557 FOURLF
3627 5524 JMP I PEDIT /A LINENO
3631 4240 LNOEND, ISIT
3632 5242 JMP LIST2 /NO
3633 1350 TAD WORD
3634 4523 JMS I PPRINUM
3635 1351 TAD 0244
3636 4433 JMS I PPUICH
3637 5220 JMP LISTLUP
3642 4556 LIST2, ISIT /A VARIABLE
3641 7300 JMP LIST3
3642 5255 JMS WORD
3643 2350 ISZ WORD
3644 1450 TAD I WORD
3645 3350 DCA WORD
3646 1450 TAD I WORD
3647 3253 DCA PRINVAR
3650 4332 JMS PRINTXT
3651 3653 PRINVAR
3652 5220 JMP LISTLUP
3653 0000 PRINVAR,0
3654 0330 LIST3, JMS I PISITLIT /ISIT A LITERAL
3655 4575 JMP LIST4 /NO
3656 5261 JMS I POUTNUM /PRINT IT
3657 4517 JMP LISTLUP /TEXT
3661 4566 LIST4, ISIT
3662 5322 JMP LIST5
3663 5276 JMS GETWD
3664 4177 TAD WORD
3665 1350 DCA PRINVAR
3666 3253 JMS PRINTXT
3667 4322 PRINVAR
3671 1052 TAD WORD
3672 2270 AND 077
3673 7640 SZA CLA
3674 5264 JMP L4LUP
3675 5220 JMS LISTLUP
3676 1250 TAD WORD
3677 7301 IAC /ITS A SYSTEM SYMBOL
3700 4302 JMS PRINTXT
3701 5220 JMP LISTLUP
3722 0000 PRINTXT,0
3723 7440 SZA
3724 5310 JMS JBPENI+1
3725 5310 CDF 0
3726 6241 TAD I
3727 1732 JBPENI, ISZ
3728 2302 JMS PRINTXT
3729 3042 DCA PRTEMP
3730 3042 PRTEMP
3731 1442 PHLOOP, TAD I
```

/..... 8 K INSERT.
/..... 8 K INSERT.

/BASIC,L8E

```

3712 7012 RTR
3713 7012 PTR
3714 7012 PRSBR
3715 4324 PRTEMP
3716 1442 TAD I
3717 4324 PRSBR
3720 2442 PRTEMP
3721 5311 PRLOOP
3722 6211 PRXRET,CDF 10
3723 5702 JMP I PRINTXT
3724 0000 PRSBR, 0
3725 0070 AND 077
3726 7450 SNA
3727 5322 JMP
3732 1345 TAD
3731 7450 SNA
3732 5340 JMP
3733 1370 TAD
3734 0070 AND 077
3735 1051 TAD 0240
3736 4433 JMS I PPUTCH
3737 5724 JMP I PRSBR
3740 1337 CRLFPR, TAD 0215
3741 4433 JMS I PPUTCH
3742 1012 TAD 0212
3743 4433 JMS I PPUTCH
3744 5724 JMP I PRSBR
3745 7741 07741, 7741
3746 7513 PALINBU, LINBUF+1
3747 0000 PRINUM, 0
3750 7231 IAC
3751 3013 DCA
3752 4352 JMS

```

```

3753 1413 TAD I INDEX1
3754 3017 DCA AC2
3755 1413 TAD I INDEX1
3756 3016 DCA AC3
3757 4536 JMS I PANORM
3760 4517 JMS I POUTNUM
3761 5747 JMP I PRINUM

3762 2300 BEGFIX, 0
3763 3017 DCA AC2

3764 3020 DCA AC1
3765 3012 DCA OV
3766 3024 DCA ACS
3767 1372 TAD 0233
3770 3025 DCA ACE
3771 5762 JMP I BEGFIX

3772 0233, 233

```

/SETS UP FOR INTEGER TO AC MODE.
/CLEAR THEM ALL, EXCEPT FOR LOW WORD

```

3762 2300 BEGFIX, 0
3763 3017 DCA AC2

3764 3020 DCA AC1
3765 3012 DCA OV
3766 3024 DCA ACS
3767 1372 TAD 0233
3770 3025 DCA ACE
3771 5762 JMP I BEGFIX

3772 0233, 233

```



```

3773 4571 RESTORE,GET+HUSTBE /((CR) OR '0'
3774 2000
3775 1004 TAD CODELOC
3776 3046 DCA READLOC
3777 5533 JMP I PEXECUTE

```

PAGE

```

4000 4566 MOREIN, ISIT /((CR) OR '0'
4001 2000 JMP INPLUP
4002 5234 JMP 0212
4003 1010 TAD PPUTCH
4004 4433 JMS I OUTD2
4005 1130 TAD OUTDEV
4006 3131 DCA CMA
4007 7240 INPUT, CLA CMA
4008 1127 TAD INDEV
4009 7640 SZA CLA
4010 5224 JMP IPNOPE
4011 1131 TAD OUTDEV
4012 4504 JMS I PPUTCH
4013 7201 CLA IAC
4014 3131 DCA I
4015 4541 JMS I PCOMT
4016 1070 TAD 077
4017 4433 JMS I PPUTCH
4018 4545 JMS I PPOP
4019 3131 DCA OUTDEV
4020 1045 TAD LOCCTR
4021 3555 DCA I GSRPTR
4022 1070 TAD PTEXT
4023 4524 JMS I PGELIN
4024 1565 TAD I GSBPTR

```

/GET THE OLD OUTPUT DEVICE.
 /AND RESET IT.
 /CHECK THE INPUT DEVICE NOW.
 /ARE WE INPUT FROM THE TELETYPE.
 /NOPE.
 /GET THE OUTPUT DEVICE.
 /SAVE IT FOR A SECOND.
 /SET OUTPUT DEVICE TO TTY FOR "?"
 /WAIT FOR OUTPUT TO FINISH, THEN CON
 /RESET OUTPUT DEVICE NOW.


```

4031 3045 DCA LOCCTR
4032 1037 TAD PLINBUF
4033 3263 DCA INPPTR
4034 4513 DCA I PGETVAR
4035 1050 TAD WORD
4036 3264 DCA INWDTMP
4037 1245 TAD LOCCTR
4038 3263 DCA INLCTMP
4039 1263 TAD INPPTR
4040 3045 DCA LOCCTR
4041 4541 JMS I PEVAL
4042 1045 TAD LOCCTR
4043 3263 DCA INPPTR
4044 1263 TAD INLCTMP
4045 3045 DCA LOCCTR
4046 4512 JMS I PSTOVAR
4047 7332 CLA CLL CML RTR
4048 1564 TAD I INWDTMP
4049 7542 SZA CLA
4050 5200 JMP MOREIN
4051 1010 TAD 0212
4052 4433 JMS I PPUTCH
4053 1130 TAD OUTD2
4054 3131 DCA OUTDEV
4055 3126 DCA COLUMN
4056 5003 JMP I PEXECUTE
4057 0000 INPPTR, 0
4058 0000 INWDTMP, 0
4059 0000 INLCTMP, 0
4060 0000 XGISIT, 0
4061 4177 JMS GETAD
4062 1266 TAD XGISIT
4063 3273 DCA XISIT
4064 5274 JMP XISIT+1
4065 1452 TAD I WORD
4066 6201 CDF 0
4067 1673 TAD I XISIT
4068 6211 CDF 10
4069 2273 ISZ XISIT
4070 7050 SNA CLA
4071 2273 ISZ XISIT
4072 5073 JMP I XISIT
4073 0000 ISITLIT, 0
4074 1452 TAD I WORD
4075 7145 CLL CMA RTR
4076 7032 CML RTR
4077 3024 DCA ACS
4078 1024 TAD ACS
4079 1160 TAD 04
4080 7020 SML CLA
4081 5704 JMP I ISITLIT
4082 2314 ISZ ISITLIT
4083 3220 DCA AC1
4084 3317 DCA AC2

```

/RESET THE DEV, BABY

/..... 8 K INSERT.

/..... 8 K INSERT.

4120	DCA	AC3	
4121	JMS	ISLIT	
4122	DCA	AC3	
4123	JMS	ISLIT	
4124	DCA	AC2	
4125	JMS	ISLIT	
4126	DCA	AC1	
4127	LOADED,	FENTER	
4128	FLD	AC3	
4129	FEXIT		
4130	JMP I	ISLIT	
4131	ISLIT,	0	
4132	ISZ	ACS	
4133	SKP		
4134	JMP	LOADED	
4135	JMS	GETWD	
4136	TAD	WORD	
4137	JMP I	ISLIT	
4138	ERROR,	0	
4139	JMS I	PRESET	/RESET ALL I/O DEVICES.
4140	JMS I	PPRINTXT	
4141	CRLF		
4142	TAD	ERROR	
4143	DCA	.*2	
4144	JMS I	PPRINTXT	
4145	HLT		
4146	JMS I	PPRINTXT	
4147	ERROR		
4148	TAD I	LINENO	
4149	SPA CLA		
4150	JMP	.*5	
4151	JMS I	PPRINTXT	
4152	ATLINE		
4153	TAD	LINENO	
4154	JMS I	PPRINTXT	
4155	JMS I	PPRINTXT	
4156	CRLF		
4157	TAD	PPDLIST	
4158	DCA	PDL	
4159	JMP I	PEDIT	
4160	ERROR,	TEXT , ERROR!	
4161	4125		
4162	4126		
4163	4127		
4164	4128		
4165	4129		
4166	4130		
4167	4131		
4168	4132		
4169	4133		
4170	4134		
4171	4135		
4172	4136		
4173	4137		

0000	/FEXIT
0040	/FSNE
0050	/FSEQ
0100	/FSGE
0110	/FSLT
0140	/FSGT
0150	/FSLE

IF BIT 4 OFF THEN SAME AS PDP-8
IF BIT 4 ON THEN IF BIT 3 OFF THEN RELATIVE

52
—
—
a

SIN

IF BIT 3 ON THEN RELATIVE M

1XXX	/FJMP
2XXX	/FST
3XXX	/FLD
4XXX	/FAD
5XXX	/FSB
6XXX	/FMP
7XXX	/FDV

```

4200 0320 FPT,  E
4201 5202 JNP      +3
4202 4500 FLOOP,  PANORM
4203 2202 ISZ      FPT
4204 6201 CDE      0
          /***** 8 K INSERT.

```

/||||||| 8 K INSERT.

8 K INSERT.

4246	1734	TAD I	FPADDR
4247	7542	SZA	CLA
4248	7047	CMA	
4249	3156	DCA	FPFLAG
4250	1714	TAD I	FPADDR
4251	7112	RTR	
4252	7010	RAR	
4253	0377	AND	
4254	0671	DCA	OPF
4255	3130	TAD I	FPADDR
4256	1734	AND	07
4257	0472	DCA	OP1
4258	3123	ISZ	FPADDR
4259	2334	TAD I	FPADDR
4260	1714	DCA	OP2
4261	3422	ISZ	FPADDR
4262	2324	TAD I	FPADDR
4263	1714	DCA	OP3
4264	3021	FPNADDR, TAD	FPGOTO
4265	1273	TAD	FPJUMP
4266	1274	DCA	.+1
4267	3273	FPGOTO, HLT	
4268	7432	FPJUMP, JMP I	
4269	5674	FPJUMP	
4270	4317	FPSTO	
4271	4322	FPLAC	
4272	4351	FPADD	
4273	4450	FPSUB	
4274	4453	FPMUL	
4275	4537	FPDIV	
4276	4567	FPADDR, 0	
4277	0000	FPOWER, TAD I	FPT
4278	1600	CDF	10
4279	6211	SNA	FPT
4280	7150	JMP I	07500
4281	5024	TAD	FPSKIP
4282	1345	DCA	HIGHWD
4283	3314	JMS	
4284	4333	HLT	
4285	7432	ISZ	FPT
4286	2234	JMP	FPLOOP+1
4287	5223	TAD	FPADDR
4288	1324	DCA	FPT
4289	3230	JMP	FPLOOP+2
4290	5242	JMS	HIGHWD
4291	4333	DCA I	FPADDR
4292	3734	ISZ	FPADDR
4293	2324	TAD	AC2
4294	1117	DCA I	FPADDR
4295	3734	ISZ	FPADDR
4296	2314	TAD	AC3
4297	1116	DCA I	FPADDR
4298	3734	JMP	FPLOOP+1
4299	5233	HIGHWD, 0	
4300	2034	TAD	ACE
4301	1325		

/0000000000 8 K INSERT.

4335	7124	CLL RAL	
4336	7514	SMA	
4337	7106	CLL RTL	
4340	7530	SPA SZL	07600
4341	5345	JMP	ACS
4342	1324	TAD	AC1
4343	1020	TAD	AC1
4344	5733	JMP I	HIGHND
4345	7500	JMP	07600
4346	1071	TAD	0377
4347	3425	DCA	ACE
4350	5314	JMP	HIGHWD+1
4351	1426	TAD	OPS
4352	3124	DCA	ACS
4353	1430	TAD	OPE
4354	3326	DCA	ACE
4355	1023	TAD	OP1
4356	3320	DCA	AC1
4357	1022	TAD	OP2
4358	3417	DCA	AC2
4361	1021	TAD	OP3
4362	3416	DCA	AC3
4363	3412	DCA	OV
4364	5242	JMP	FPLOOP
4365	7041	UPARR2, CIA	
4366	3013	DCA	INDEX1
4367	4435	FENTER	
4370	3151	FLD	ONE
4371	0000	FEXIT	
4372	5375	JMP	+.4
4373	4435	FENTER	
4374	5073	FMP	OPERAND
4375	0000	FEXIT	
4376	2013	IS7	INDEX1
4377	5373	JMP	-.4
4380	5601	JMP I	+.1
4401	1223	OPDONE	

/ (CMA) IF 1 ORG INDEXING

4402	0000	ARI,	
4403	1020	TAD	AC1
4404	7110	CLL RAP	
4405	3420	DCA	AC1
4406	1017	TAD	AC2
4407	7010	RAR	
4410	3017	DCA	AC2
4411	1016	TAD	AC3
4412	7010	RAR	
4413	3016	DCA	AC3
4414	7010	RAR	
4415	3012	DCA	OV
4416	5602	JMP I	ARI

4417	WADD	ACN,	2	TAD	POP3
4420	1234			DCA	OADD
4421	3235			CLA	CLL CMA RTL
4422	7340			DCA	ARI
4423	3242			CML	RAL
4424	7024			TAD	I OADD
4425	1535			CIA	I
4426	7341			ISZ	OADD
4427	3635			ISZ	ARI
4430	2235			JMP	-6
4431	2232			JMP	I ACN
4432	5224			POP3,	OP3
4433	5617			OADD,	
4434	0021			CLL	
4435	3006			TAD	AC3
4436	7127			TAD	OP3
4437	1016			DCA	AC3
4440	1021			RAL	
4441	3016			TAD	AC2
4442	7034			TAD	OP2
4443	1017			DCA	AC2
4444	1022			RAL	
4445	3017			TAD	AC1
4446	7034			TAD	OP1
4447	1022			DCA	AC1
4450	1023			JMP	I OADD
4451	3022			CLA	CLL CML RAR
4452	5635	FPSUB,		TAD	OPS
4453	7330			DCA	OPS
4454	1020			ISZ	FPFLAG
4455	3226			JMP	EOFAD
4456	2156	FPADD,		TAD	ACE
4457	5326			CLL	CIA
4460	1025			TAD	OPE
4461	7141			SZL	
4462	1032			JMP	BCKWDS
4463	7430			DCA	OADD
4464	5342			TAD	OP1
4465	3235			CLL	RAR
4466	1023	ALGNLP,		DCA	OP1
4467	7110			TAD	OP2
4470	3023			RAR	
4471	1022			DCA	OP2
4472	7010			TAD	OP3
4473	3022			RAR	
4474	1021			DCA	OP3
4475	7012			ISZ	OADD
4476	3021			JMP	ALGNLP
4477	2235			JMP	SETSGN
4478	5256			CMA	
4479	5312	BCKWDS,		DCA	OADD
4482	7141			TAD	OPE
4483	3235			DCA	ACE
4484	1030				
4485	3025				

4526	7412	SKP		
4527	4232	JMS	ARI	
4512	2235	ISZ	OADD	
4511	5327	JMP	.-2	
4512	1024	SETSGN,	TAD ACS	
4513	1026	TAD	OPS	
4514	7712	SPA	CLA	
4515	4217	JMS	ACN	
4516	4235	JMS	OADD	
4517	1022	TAD	AC1	
4520	7700	SMA	CLA	
4521	5326	JMP	EOFAD	
4522	7346	CLA	CLL CMA RTL	
4523	4217	JMS	ACN	
4524	1026	TAD	OPS	
4525	3024	DCA	ACS	
4526	3012	DCA	OV	
4527	5775	JMP I	PPFLOOP	
4530	2156	ISZ	FPFLAG	
4531	5371	JMP	MULCLR	
4532	1024	TAD	ACS	
4533	1026	TAD	OPS	
4534	3024	DCA	ACS	
4535	1025	TAD	ACE	
4536	1030	TAD	OPE	
4537	1377	TAD	07577	
4540	3025	DCA	ACE	
4541	1024	TAD	AC1	
4542	3026	DCA	OPS	
4543	1017	TAD	AC2	
4544	3030	DCA	OPE	
4545	1016	TAD	AC3	
4546	3031	DCA	TMP	
4547	3020	DCA	AC1	
4548	1152	TAD	07745	
4551	3370	DCA	FPTMP	
4552	4212	JMS	ARI	
4553	1026	TAD	OPS	
4554	7010	RAR		
4555	3026	DCA	OPS	
4556	1030	TAD	OPE	
4557	7012	RAR		
4560	3030	DCA	OPE	
4561	1031	TAD	TMP	
4562	7010	RAR		
4563	3031	DCA	TMP	
4564	7030	SZL		
4565	4235	JMS	OADD	
4566	2376	ISZ	FPTMP	
4567	5352	JMP	MPYLUP	
4570	5775	JMP I	PPFLOOP	
4571	7346	MULCLR,	CLA CLL CMA RTL	
4572	3025	DCA	ACE	
4573	3022	DCA	AC1	
4574	5775	JMP I	PPFLOOP	

4575 4202 PFPL00P, FPL00P
 4576 2332 FPTMP, 0
 4577 7577 0/577, 7577

PAGE

4600 0300 ANORM, 0			
4601 1320 TAD	AC1		
4602 7452 SNA			
4603 5212 JMP	MAYZERO		
4604 1335 TAD	07770		
4605 7710 SPA	CLA		
4606 5220 JMP	NOTBIG		
4607 4537 JMS	I		
4610 2325 ISZ	ACE		
4611 5271 JMP	ANORM+1		
/IS HIGH WORD ZERO? /YEP. ENTIRE NUMBER MAY BE ZERO.			
4612 1317 MAYZERO, TAD	AC2		
4613 7644 SZA	CLA		
4614 5220 JMP	NOTBIG		
4615 1316 TAD	AC3		
4616 7652 SNA	CLA		
4617 5245 JMP	UNDERF		
/IS SECOND WORD ZERO? /NOPE. NORMAL NORMALIZE. /1 & 2 ARE ZERO. IS THIRD WORD? /YEP. CLEAR AC. ALL ZERO.			
4620 1312 NOTBIG, TAD	OV		
4621 7550 SNA	CLA		
4622 5233 JMP	NOBUMP		
4623 2316 ISZ	AC3		
4624 5233 JMP	NOBUMP		
4625 2317 ISZ	AC2		
4626 5233 JMP	NOBUMP		
4627 2320 ISZ	AC1		
4630 3312 DCA	OV		
4631 5241 JMP	ANORM+1		
4632 7240 CLA	CMA		
4633 1325 NOBUMP, TAD	ACE		
4634 7510 SPA			
4635 5245 JMP	UNDERF		
4636 3325 DCA	ACE		
4637 7346 CLA	CLL CMA RTL		
4640 1321 TAD	AC1		
4641 7740 SNA	SZA		
4642 5500 JMP	I		
4643 4254 JMS	ANORM		
4644 5232 JMP	AL1		
4645 7230 UNDERF, CLA	NOBUMP-1		
4646 3324 DCA	ACS		

4647	3025	DCA	ACE
4650	3020	DCA	AC1
4651	3017	CCA	AC2
4652	3016	DCA	AC3
4653	5632	JMP I	ANORM
4654	0020	0	
4655	1016	TAD	AC3
4656	7104	CLL	RAL
4657	3016	DCA	AC3
4658	1017	TAD	AC2
4661	7004	RAL	
4662	3017	DCA	AC2
4663	1020	TAD	AC1
4664	7004	RAL	
4665	3020	DCA	AC1
4666	5654	JMP I	ALI
4667	6201	CDF	0
4670	2156	ISZ	FPFLAG
4671	5336	JMP	FPZDIV
4672	1024	TAD	ACS
4673	1020	TAD	OPS
4674	3024	DCA	ACS
4675	1030	TAD	OPE
4676	7041	CIA	
4677	1020	TAD	ACE
4678	1027	TAD	0177
4679	3020	DCA	ACE
4682	3031	DCA	TMP
4683	1043	TAD	07743
4684	3201	DCA	ANORM
4685	7030	CLA	CLL CML RAR
4686	0023	AND	OP1
4687	1022	TAD	AC1
4688	7000	SMA	CLA
4689	4742	JMS I	PACN
4690	4557	JMS I	POADD
4691	1031	TAD	TMP
4692	7004	RAL	
4693	3031	DCA	TMP
4694	1030	TAD	OPE
4695	7004	RAL	
4696	3030	DCA	OPE
4697	1026	TAD	OPS
4698	7004	RAL	
4699	3026	DCA	GPS
4700	4550	JMS I	PAL1
4701	2200	ISZ	ANORM
4702	5305	JMP	DIVLP
4703	1026	TAD	OPS
4704	3020	DCA	AC1
4705	1030	TAD	OPE
4706	3017	DCA	AC2
4707	1031	TAD	TMP
4708	3016	DCA	AC3
4709	5741	JMP I	PPFLOOP

/..... 8 K INSERT.


```

4736 1371 FPZDIV, TAD 0377
4737 3225 DCA ACE
4740 5741 JMP I PPFLLOOP
4741 4242 PPFLLOOP, PPFLLOOP
4742 4417 PACN, ACN
4743 7743 07743, 7743
4744 0330 FIX, 0
4745 1324 TAD AC1
4746 7658 SMA CLA
4747 5367 JMP ZFIXEX
4750 1225 FIXLUP, TAD ACE
4751 1377 TAD 07545
4752 7743 SMA CLA
4753 5373 JMP FIXEXIT
4754 4547 JMS I PARI
4755 1024 TAD ACS
4756 0012 AND OV
4757 7543 SZA CLA
4761 2316 ISZ AC3
4761 5365 JMP +4
4762 2317 ISZ AC2
4763 5365 JMP +2
4764 2020 ISZ AC1
4765 2025 ISZ ACE
4766 5352 JMP FIXLUP
4767 3225 ZFIXEX, DCA ACE
4770 3020 DCA AC1
4771 3417 DCA AC2
4772 3316 DCA AC3
4773 3412 FIXEXIT, DCA OV
4774 1016 TAD AC3
4775 7331 SSFIX, IAC
4776 5742 JMP I FIX
4777 7545 07545, 7545

```

/(NOP) IF 1 ORG INDEXING

PAGE

```

5001 0000 OUTNUM, 0
5001 6231 SCDF 0
5002 1024 TAD ACS
5003 7743 SMA CLA
5004 5237 JMP +3
5005 1351 TAD 0255
5006 4433 JMS I PPUTCH
5007 1320 TAD AC1
5008 7640 SZA CLA
5011 5216 JMP NONZERO

```

/..... 8 K INSERT.


```
5012 1011 TAD 0260
5013 4433 JMS I PPUTCH
5014 6211 CDF 10
5015 5042 JMP I OUTNUM
5016 4746 NONZERO, JMS I FIXUP
5017 1359 TAD 0771
5020 3042 DCA PRTEMP
5021 1344 TAD PNMBUF
5022 3025 DCA ACE
5023 5230 JMP *+5
5024 1020 CVTLOOP, TAD AC1
5025 0027 AND 0177
5026 3020 DCA AC1
5027 4762 JMS I PMPY
5030 1020 TAD AC1
5031 7336 RTL
5032 7156 RTL
5033 7176 RTL
5034 0347 AND 017
5035 1011 TAD 0260
5036 3425 DCA ACE
5037 2028 ISZ ACE
5040 2142 ISZ PRTEMP
5041 5224 JMP CVTLOOP
5042 7326 CLA CML RTL
5043 1043 TAD DEEXP
5044 7450 SNA
5045 6325 JMP FMT1 /0NNNNNNN
5046 7510 SPA FMT2 /N.NNNNNNE-NN
5047 5253 JMP 07770
5051 1355 TAD CLA
5051 7710 SPA FMT3 /OTHER THAN N.NNNNNNE+NN
5052 5337 JMP CLA /N.NNNNNNE+NN
5053 7210 FMT2,
5054 1044 TAD PNMBUF
5055 3025 DCA ACE
5056 1357 TAD 0772
5057 3042 DCA PRTEMP
5060 1425 TAD I ACE
5061 4433 JMS I PPUTCH
5062 1356 TAD 0256A
5063 4433 JMS I PPUTCH
5064 2025 ISZ ACE
5065 1425 TAD I ACE
5066 4433 JMS I PPUTCH
5067 2042 ISZ PRTEMP
5070 5254 JMP *-4
5071 1352 TAD 0305
5072 4433 JMS I PPUTCH
5073 1043 TAD DEEXP
5074 7710 SPA CLA
5075 7326 CLA CML RTL
5076 1356 TAD 0253
5077 4433 JMS I PPUTCH
5100 3025 DCA ACE
```


3121	1243	TAD	DECEXP
3122	7510	SPA	
3123	7141	CIA	
3124	3043	DCA	DECEXP
3125	1143	TAD	DECEXP
3126	1354	TAD	07766
3127	7512	SPA	
3128	5314	JMP	.*4
3129	3043	DCA	DECEXP
3130	2225	ISZ	ACE
3131	5315	JMP	.-6
3132	7222	CLA	
3133	1325	TAD	ACE
3134	1311	TAD	0260
3135	4433	JMS I	PPUTCH
3136	1043	TAD	DECEXP
3137	1811	TAD	0260
3138	4433	JMS I	PPUTCH
3139	6211	FMTENF, CDF	12
3140	5090	JMP I	OUTNUM
3141	4514	JMS I	PPRINTXT
3142	7371	DGTZERO	
3143	6231	CDF	0
3144	1355	TAD	07771
3145	3042	DCA	PRTEMP
3146	1361	TAD	PNRPF6
3147	3025	TRYAGIN, DCA	ACE
3148	1425	TAD I	ACE
3149	1353	TAD	07520
3150	7540	SZA CLA	
3151	5344	JMP	ZERDONE
3152	2442	ISZ	PRTEMP
3153	7242	CLA CMA	
3154	1325	TAD	ACE
3155	5333	JMP	TRYAGIN
3156	5745	ZERDONE, JMP I	.*1
3157	6545	PZERDONE	
3158	5242	FIXITUP	
3159	2317	017, 17	
3160	0253	0253, 253	
3161	0255	0255, 255	
3162	3305	0305, 305	
3163	7520	07520, 7520	
3164	7756	07756, 7756	
3165	7771	07771, 7771	
3166	0256	0256A, 256	
3167	7772	07772, 7772	
3168	5321	PNRPF, NBY	
3169	5343	PNRPF6, NUMBUF+6	

/.....8 K INSERT.

/.....8 K INSERT.

/.....8 K INSERT.

/.....8 K INSERT.

TOO LONG, TEXT 'OLINE TOO LONG!

162	3714
163	1116
164	3549
165	2417

BASIC.LRE

166 1740
167 1417
170 1627
171 3700

PAGE

201	0020	FIXITUP,0	ACE
201	1025	TAD	07610
202	1345	DCA	ACE
203	3025	SKP	
204	7410	DECEXP	
205	1043	DCA	DECEXP
206	3043	TAD	AC1
207	1020	NORMIT, TAD	
210	7005	RTL	
211	7530	SZL	CLA
212	5220	JMP	NORMED
213	4500	JMS	I
214	7240	CLA	CMA
215	1025	TAD	ACE
216	3025	DCA	ACE
217	5237	JMP	NORMIT
220	1725	NORMED, TAD	ACE
221	7542	SMA	SZA
222	5236	JMP	NOTX10
223	7230	CLA	
224	4547	JMS	I
225	4547	JMS	I
226	4547	JMS	I
227	4547	JMS	I
230	4321	JMS	MPY
231	1025	TAD	ACE
232	1150	TAD	04
233	3025	DCA	ACE
234	7240	CLA	CMA
235	5225	JMP	OCC
236	1346	TAD	07773
237	7510	SPA	
240	5265	JMP	EXP0K
241	7220	CLA	
242	1354	EXP00D, TAD	07740
243	3321	DCA	MPY
244	7100	CLL	
245	1020	DVLOOP, TAD	AC1
246	1347	TAD	05400
247	7502	SMA	
250	3320	DCA	AC1

251	7264	CLA	CML	CMA	RAL
252	3A23	OCA		OP1	
253	4550	JMS	I	PAL1	
254	2A23	ISZ		OP1	
255	2A16	ISZ		AC3	
256	2321	ISZ		MPY	
257	5245	JMP		DVLOOP	
258	1A20	TAD		AC1	
259	2371	AND		0377	
260	3320	OCA		AC1	
261	72A1	CLA	IAC		
262	72A1	JMP		OCC	
263	52A5	DCA		PRTEMP	
264	3342	SKP			
265	7410	JMS	I	PAR1	
266	4547	ISZ		PRTEMP	
267	2A42	JMP		-2	
268	5257	TAD		AC1	
269	1320	TAD		05400	
270	1347	SMA	CLA	EXPGOOD	
271	7720	JMP			
272	5242	CLA	CLL		
273	733A	TAD		AC3	
274	1316	TAD		02062	
275	1344	DCA		AC3	
276	3A16	SZL		AC2	
277	7430	ISZ		AC1	
278	2A17	ISZ		AC1	
279	7410	TAD		05400	
280	2A20	SZA	CLA	FIXITUP	
281	1322	JMP	I	0200	
282	1347	TAD		AC1	
283	7540	DCA		AC2	
284	5530	DCA		AC3	
285	1155	ISZ		DECEXP	
286	3020	NOP			
287	3A17	JMP	I	FIXITUP	
288	3A16	O			
289	2A43	JMS	I	PAL1	
290	7A20	TAD		AC1	
291	5520	DCA		OP1	
292	4550	TAD		AC2	
293	1A20	DCA		OP2	
294	3A23	DCA		AC3	
295	1A17	DCA		OP3	
296	3A22	JMS	I	PAL1	
297	1A10	JMS	I	PAL1	
298	3A21	JMS	I	POADD	
299	4550	JMP	I	MPY	
300	4557	NUMBUF, 0:0:0:0:0:0			
301	5721				
302	0A40				
303	0A30				
304	0A30				
305	0A30				
306	0A30				
307	0A30				
308	0A30				
309	0A30				
310	0A30				
311	0A30				
312	0A30				
313	0A30				
314	0A30				
315	0A30				
316	0A30				
317	0A30				
318	0A30				
319	0A30				
320	0A30				
321	0A30				
322	0A30				
323	0A30				
324	0A30				
325	0A30				
326	0A30				
327	0A30				
328	0A30				
329	0A30				
330	0A30				
331	0A30				
332	0A30				
333	0A30				
334	0A30				
335	0A30				
336	0A30				
337	0A30				

340 0232
 341 0200
 342 0100
 343 0000
 344 2062 02'62, 2062
 345 7610 7610
 346 7773 7773
 347 5400 05400, 5400

350 0022 RNDJMP, FEYIT
 351 4546 JMS I PANORM
 352 5753 JMP I RND

353 0022 RND,
 354 4435 FENTER
 355 3227 FLO+FRNDX-
 356 0100 FEYIT
 357 1221 TAD OP3

358 7026 RTL
 359 7026 RTL
 360 7026 DCA
 361 3227 TAD
 362 1020 RAR
 363 7110 AND
 364 0354 DCA
 365 3317 DCA
 366 3016 JMS I
 367 4557 JMS I
 368 4557 JMS I
 369 1030 TAD
 370 3025 DCA
 371 1024 TAD
 372 0072 AND
 373 0072 DCA
 374 3027 FENTER
 375 4436 FST+FRNDX-
 376 2232 FJMP+BKWD+,-RNDJMP
 377 1633

378 07740 AC1
 379 07740 AC1
 380 07740 AC2
 381 07740 AC3
 382 07740 POADD
 383 07740 POADD
 384 07740 POADD
 385 07740 OPE
 386 07740 ACE
 387 07740 AC1
 388 07740 O7
 389 07740 AC1

390 2004 FRNDX, 2004:4173:1231
 391 4173
 392 1231

393 0000 FSORX, 0:0:0
 394 0000
 395 0000

BASIC.L8E

1412	0000	SR,			
1413	4435		FENTER		
1414	2473		FST	OPERAND	
1415	0410		FSNE		
1416	1232		FJMP+FWD+SQEXIT-		
1417	0000		FEXIT		
1420	1324		TAD	ACS	
1421	7710		SPA	CLA	
1422	5447		JMP I	PARGERR	
1423	1025		TAD	ACE	
1424	1252		TAD	007600	
1425	7117		CLL		
1426	7510		SPA		
1427	7020		CHL		
1430	7310		RAR		
1431	1156		TAD	0200	
1432	3325		DCA	ACE	
1433	1459		TAD	07770	
1434	3413		DCA	INDEX1	
1435	4435	SQLLOOP,	FENTER		
1436	2627		FST+BKWD+,-FSQRX		
1437	3073		FLD	OPERAND	
1440	7631		FDV+BKWD+,-FSQRX		
1441	4632		FAD+BKWD+,-FSQRX		
1442	0000		FEXIT		
1443	7240		CLA	CMA	
1444	1025		TAD	ACE	
1445	3025		DCA	ACE	
1446	2013		ISZ	INDEX1	
1447	5235		JMP	SQLLOOP	
1450	0000	SQEXIT,	FEXIT		
1451	5612		JMP I	SR	
1452	7600	007620,	7620		
1453	7100	FN,			
1454	1345		TAD	LOCCTR	
1455	4524		JMS I	PPUSH	
1456	1050		TAD	WORD	
1457	4534		JMS I	PPUSH	
1460	6201		CDF	0	
1461	1745		TAD I	PUSERFN	
1462	6211		CDF	10	
1463	7201		IAC		
1464	3045		DCA	LOCCTR	
1465	4567		GET+ISIT	'DEF'	
1466	1761		1761		
1467	5746		JMP I	PFNERR	/NO
1470	4177		JMS	GETWD	/SKIP IFN1
1471	4177		JMS	GETWD	/SKIP LETTER
1472	4177		JMS	GETWD	/SKIP 10
1473	4567		GET+ISIT	/A VARIABLE	
1474	7100		7200		
1475	5746		JMP I	PFNERR	/NO
1476	2950		ISZ	WORD	
1477	1450		TAD I	WORD	
1520	3013		DCA	INDEX1	

/***** 8 K INSERT

/***** 8 K INSERT.

BASIC.LSE

```

501 1413 TAD I INDEX1
502 4504 JMS I PPUSH
503 1413 TAD I INDEX1
504 4504 JMS I PPUSH
505 1413 TAD I INDEX1
506 4504 JMS I PPUSH
507 1413 TAD I INDEX1
508 4504 JMS I PPUSH
509 7344 CLA CLL CMA RAL
510 1413 TAD I INDEX1
511 4504 JMS I PPUSH
512 1413 TAD I INDEX1
513 4504 JMS I PPUSH
514 4435 DCA PENTER
515 2413 FSTI INDEX1
516 4177 FEXIT
517 4177 JMS GETWD /SKIP 'J'
518 4177 JMS GETWD /SKIP 'I'
519 4501 JMS I PEVAL
520 4515 JMS I PPOP
521 3150 DCA WORD
522 4505 JMS I PPOP
523 4505 DCA I WORD
524 3450 CLA CMA
525 7210 TAD WORD
526 1250 DCA WORD
527 3450 JMS I PPOP
528 3450 DCA I WORD
529 7240 CLA CMA
530 1250 TAD WORD
531 3750 DCA WORD
532 4505 JMS I PPOP
533 4505 DCA I WORD
534 3450 CLA CMA
535 7240 TAD WORD
536 3750 DCA WORD
537 4505 JMS I PPOP
538 4505 DCA I WORD
539 4505 JMS I PPOP
540 3450 DCA WORD
541 4505 JMS I PPOP
542 3450 DCA LOCCTR
543 5653 JMP I FN
544 1520 PUSERFN,USERFN

```

546 0352 PFNERR, FNERR

```

547 0470 TAB, 0
548 4500 JMS I PFI
549 6201 CDF 0
550 7201 CLA IAC
551 3771 DCA I PTABFLG
552 3771 TAD ACS
553 1324
554 1324

```

/FUNCTION "TAB" IN PRINT STATEMENT.
 /FIX THE FAC NOW.
 /SET DATA FIELD TO FIELD ZERO.
 /SET FLAG TO INDICATE WE'VE DONE THI
 /AND STORE AWAY.
 /GET SIGN OF FAC


```

1555 7550 SNA CLA /WAS IT A POSITIVE NUMBER?
1556 1016 TAD AC3 /YEP. PICK UP DESIRED POSITION.
1557 0071 AND 0377 /MAXIMUM OF 256 COLUMNS.
1560 3770 DCA I PTABDES /SAVE AWAY FOR ACTUAL SPACER TO USE.
1561 4772 JMS I TBEGFIX /PREPARE TO RETURN PRESENT COLUMN NU
1562 7231 CLA IAC /INCREMENT TO ACCOUNT FOR DIFFERENCE
1563 1126 TAD COLUMN
1564 3016 DCA AC3 /AND STORE AWAY.
1565 5211 CCF 10 /RESET DATA FIELD NOW.
1566 4546 JMS I PANORM /NORMALIZE AC NOW.
1567 5747 JMP I TAB /AND RETURN NOW.

1570 6367 PTABDES, TABDES /POINTER TO DESIRED LOCATION OF PRIN
1571 2345 PTABFLG, TABFLG HEAD.
1572 3762 TBEGFIX, BEGFIX /POINTER TO TAB IN PRINT FLAG.
/POINTER TO MINI-FIX-SET-UP ROUTINE.

```

```

1573 7241 RUBO, CLA IAC /SET RUBOJT SWITCH.
1574 3135 NORUBO, DCA RESNACH
1575 5776 JMP I .+1 /AND CLEAN IT UP.
1576 7175 DEVCOM /CLEAN-UP-POINTER.

```

PAGE

```

1600 0000 TAN, 0
1601 4435 FENTER
1602 2275 FST+FWD+FTANT1-.
1603 0000 FEXIT
1604 4216 JMS COS
1605 4435 FENTER
1606 2274 FST+FWD+FTANT2-.
1607 3277 FLD+FWD+FTANT1-.
1608 0000 FEXIT
1609 4224 JMS SIN
1610 4435 FENTER

```


BASIC.LBE

5613	7267	FDV+FWD+FTANT2--
5614	7268	FEXIT
5615	5620	JMP I TAN
5616	5621	0
5617	4435	FENTER
5620	4312	FAD+FWD+FSINC7--
5621	0020	FEXIT
5622	4224	JMS SIN
5623	5610	JMP I COS
5624	0000	0
5625	4435	FENTER
5626	7255	FDV+FWD+FSINC1--
5627	2256	FST+FWD+FSINZ--
5630	2320	FEXIT
5631	3324	DCA ACS
5632	4676	JMS I PINT
5633	7334	CLA CLL CML RAR
5634	2335	AND FSINZ
5635	3324	DCA ACS
5636	4135	FENTER
5637	5246	FSR+FWD+FSINZ--
5640	6275	FMP+FWD+FSINM4--
5641	2244	FSIN10, FST+FWD+FSINZ--
5642	0000	FEXIT
5643	3324	DCA ACS
5644	4335	FENTER
5645	5151	FSB ONE
5646	0140	FSGT
5647	1210	FJMP+FWD+FSINOK--
5650	3235	FLD+FWD+FSINZ--
5651	0000	FEXIT
5652	4775	JMS I PSGN
5653	2025	ISZ ACE
5654	4435	FENTER
5655	5230	FSR+FWD+FSINZ--
5656	1515	FJMP+BKWD+FSIN10
5657	3226	FLD+FWD+FSINZ--
5658	6225	FMP+FWD+FSINZ--
5659	2227	FST+FWD+FSINZ--
5662	6234	FMP+FWD+FSINC3--
5663	4236	FAD+FWD+FSINC4--
5664	6224	FMP+FWD+FSINZ--
5665	4237	FAD+FWD+FSINC5--
5666	6222	FMP+FWD+FSINZ--
5667	4240	FAD+FWD+FSINC6--
5670	6224	FMP+FWD+FSINZ--
5671	4241	FAD+FWD+FSINC7--
5672	6213	FMP+FWD+FSINZ--
5673	0000	FEXIT
5674	5624	JMP I SIN
5675	0726	PSGN, SGN
5676	6434	PINT, INT
5677	0000	FIANT1, 0;0;0
5700	0000	
5701	0000	

5702	0300	FIANT2, 0;0;0
5703	0300	
5704	0300	
5705	0300	FSINZ, 0;0;0
5706	0300	
5707	0300	
5708	0300	FSINZZ, 0;0;0
5709	0300	
5710	0300	
5711	0300	
5712	0300	
5713	2036	FSINC1, 2036;2207;7325
5714	2207	
5715	7325	
5716	1644	FSINC3, 1644;7553;6722
5717	7553	
5718	6722	
5719	5714	FSINC4, 5714;6223;1432
5720	6223	
5721	1432	
5722	1755	FSINC5, 1755;0632;1276
5723	0632	
5724	1276	
5725	6005	FSINC6, 6005;1256;7406
5726	1256	
5727	7406	
5728	2016	FSINC7, 2016;2207;7325
5729	2207	
5730	7325	
5731	6034	FSINM4, 6034;0000;0000
5732	0000	
5733	0000	
5734	0000	
5735	0000	
5736	0000	
5737	0000	
5738	4435	UPARRX, FENTER
5739	2034	FST+BKWD+.-FSINZ
5740	0100	FSGE
5741	1221	FJMP+FWD+EXPLONG-.
5742	0000	FEXIT
5743	0000	JMS I PINT
5744	4676	FENTER
5745	4435	FSB+BKWD+.-FSINZ
5746	5642	FSEQ
5747	0000	FJMP+FWD+EXPLONG-.
5748	1213	FLO+BKWD+.-FSINZ
5749	3545	FSB+FWD+FUPRC1-.
5750	5207	FSLE
5751	0150	FJMP+FWD+EXPLONG-.
5752	1207	FLO+BKWD+.-FSINZ
5753	3551	FEXIT
5754	0000	JMP I
5755	5761	.+1
5756	6457	UPARROW
5757	2077	FUPRC1, 2077;7700
5758	7700	
5759	3373	EXPLONG, FLD OPERAND
5760	0000	FEXIT
5761	4775	JMS I PLOG
5762	4435	FENTER
5763	5653	FMP+BKWD+.-FSINZ

5771 0000 FEXIT
 5772 4776 JMS I PEXP
 5773 5774 JMP I .+1
 5774 1203 OPDONE
 5775 6114 LOG
 5776 6002 PLOG,
 5777 6002 PEXP, EXP

PAGE

5000 0000 EXP, Ø
 5001 4435 FENTER
 5002 7270 FDV+FWD+PEXPC1-.
 5003 2261 FST+FWD+PEXPU-.
 5004 0000 FEXIT
 5005 4550 JMS I PPINT
 5006 7330 CLA CLL CML RAR
 5007 1024 TAD ACS
 5008 3024 DCA ACS
 5009 4435 FENTER
 5010 2247 FST+FWD+PEXPI-.
 5011 4251 FAD+FWD+PEXPU-.
 5012 2253 FST+FWD+PEXPF-.
 5013 6232 FMP+FWD+PEXPF-.
 5014 4257 FAD+FWD+PEXPC2-.
 5015 2245 FST+FWD+PEXPU-.
 5016 3241 FLD+FWD+PEXPI-.
 5017 0000 FEXIT
 5018 4500 JMS I PPIX
 5019 7000 FXXPFX, NOP
 5020 3241 DCA FEXPI
 5021 1024 TAD ACS
 5022 7164 CMA CLL CML RAL
 5023 1261 TAD FEXPI
 5024 7420 SNL
 5025 7041 CIA
 5026 7001 IAC
 5027 3261 DCA FEXPI
 5028 4435 FENTER
 5029 3243 FLD+FWD+PEXPC3-.
 5030 7226 FDV+FWD+PEXPU-.
 5031 4242 FAD+FWD+PEXPC4-.
 5032 5227 FSB+FWD+PEXPF-.
 5033 2223 FST+FWD+PEXPU-.
 5034 3226 FLD+FWD+PEXPF-.
 5035 6224 FMP+FWD+PEXPF-.
 5036 6242 FMP+FWD+PEXPC5-.
 5037 4217 FAD+FWD+PEXPU-.

/(IAC IF 1 ORG INDEXING)

5046	2216	FST+FWD+FEXPU-
6047	3220	FLD+FWD+FEXPF-
6050	7214	FDV+FWD+FEXPU-
6251	4244	FAD+FWD+FEXPC6-
6252	2215	FST+FWD+FEXPF-
6253	0000	FEXIT
6254	1025	TAD ACE
6255	1261	TAD FEXPI
6256	3225	DCA ACE
6157	5502	JMP I EXP
6060	6434	PPINT, INT
5061	0034	FEXPI, 0;0;0
5262	0000	
5263	0000	FEXPU, 0;0;0
5264	0000	
5265	0000	
5266	0000	FEXPF, 0;0;0
5267	0000	
5270	0000	
5071	0000	FEXPC1, 2005;4271;0300
5272	2005	
5273	4271	
5274	0300	FEXPC2, 2075;3552;7022
5275	2075	
5276	3552	
5277	7022	FEXPC3, 6124;6477;0715
5100	6124	
5101	6477	
5102	0715	FEXPC4, 2044;7643;0062
5103	2044	
5104	7643	
5105	0062	FEXPC5, 1744;3372;3400
5175	1744	
5107	3372	
5112	3400	FEXPC6, 2004;0000;0000
5111	2004	
5112	0000	
5113	0000	LOG,
5114	0000	
5115	1024	TAD ACS
5116	7712	SPA CLA
5117	5447	JMP I PARGERR
5120	1325	TAD ACE
5121	3365	DCA LOGACE
5122	1155	TAD 0200
5123	3425	DCA ACE
5124	4435	CENTER
5125	2541	FST+BKWD+-FEXPU
5126	4244	FAD+FWD+FLOGC1-
5127	2540	FST+BKWD+-FEXPF
5130	3644	FLD+BKWD+-FEXPU
5131	5241	FSB+FWD+FLOGC1-
5132	7543	FDV+BKWD+-FEXPF
5133	2644	FST+BKWD+-FEXPF
5134	5545	FMP+BKWD+-FEXPF

6135 6216 FMP+FWD+FLOGC2-
 6136 4224 FAD+FWD+FLOGC3-
 6137 6654 FMP+8KWD+.-FEXPF
 6140 6651 FMP+8KWD+.-FEXPF
 6141 4220 FAD+FWD+FLOGC4-
 6142 6653 FMP+8KWD+.-FEXPF
 6143 5632 FSR+8KWD+.-FEXPC6
 6144 2655 FST+8KWD+.-FEXPF
 6145 3217 FLD+FWD+LOGFWD-
 6146 5221 FSR+FWD+LOGOKW-
 6147 4652 FAD+8KWD+.-FEXPF
 6152 6656 FMP+8KWD+.-FEXPC1
 6151 0000 FEXIT

JMP I LOG
 FLOGC2, 2004;6253;2521

FLOGC3, 2007;5421;3604

FLOGC4, 2025;6125;1007

LOGFWD, 2174
 LOGACE, 0

LOGOKW, 2174;0200;0

FLOGC1, 2205;5202;3632

PAGE

6200 0000	ATN,	0	TAD	ACS
6221 1024		DCA	FATNSX	
6202 3272		DCA	ACS	
6203 3024		FENTER		
6204 4435		FST+FWD+FATNT-.		
6205 2271		FST+FWD+FATNAX-.		
6206 2255		FSB+FWD+FATNC1-.		
6207 5275		FSGT		
6210 0140		FJMP+FWD+ATN9IG-.		
6211 1254				

6212	5275	FSR+FWD+FAINC2-
6213	0140	FSGT
6214	1234	FJMP+FWD+ATNLOW-
6215	3151	FLD ONE
6216	7260	FDV+FWD+FAINT-
6217	2257	FST+FWD+FAINT-
6220	3152	FLD ZERO
6221	2316	ATNLOW, FLD
6222	3254	FST+FWD+FAINC-
6223	5257	FLD+FWD+FAINT-
6224	0100	FSR+FWD+FAINC3-
6225	1212	FSGE
6226	3250	FJMP+FWD+ATNOT-
6227	4266	FLD+FWD+FAINT-
6230	2246	FAD+FWD+FAINC4-
6231	3314	FST+FWD+FAINT-
6232	7244	FLD+FWD+FAINCJ-
6233	4252	FDV+FWD+FAINT-
6234	2242	FAD+FWD+FAINC4-
6235	3253	FST+FWD+FAINT-
6236	2301	FLD+FWD+FAINC5-
6237	3237	FST+FWD+FAINC-
6240	6236	FLD+FWD+FAINT-
6241	2240	FMP+FWD+FAINT-
6242	3251	FST+FWD+FAINT-
6243	6236	FLD+FWD+FAINC6-
6244	4252	FMP+FWD+FAINT-
6245	6234	FAD+FWD+FAINC7-
6246	4253	FMP+FWD+FAINT-
6247	6232	FAD+FWD+FAINC8-
6250	4254	FMP+FWD+FAINT-
6251	6230	FAD+FWD+FAINC9-
6252	4151	FMP+FWD+FAINT-
6253	6223	FAD+FWD+FAINT-
6254	4253	FMP+FWD+FAINC-
6255	2221	FST+FWD+FAINT-
6256	3215	FLD+FWD+FAINC-
6257	5151	FSR ONE
6258	2142	FSGT
6261	1234	FJMP+FWD+ATNBIG-
6262	3250	FLD+FWD+FAINC-
6263	5213	FSD+FWD+FAINT-
6264	2212	FST+FWD+FAINT-
6265	3211	ATNBIG, FLD+FWD+FAINT-
6266	0000	FEXIT
6267	1272	TAD FATNSX
6270	3-20	DCB ACS
6271	5000	JMP I ATN
6272	0000	FATNSX, 0
6273	0000	FATNAX, 010:0
6274	0000	
6275	0000	
6276	0000	
6277	0000	FATNT, 010:0
6280	0000	

6301	0230	FATNTT, 0;0;0
6302	0240	
6303	0240	
6304	1634	FATNC1, 1634;0000;0000
6305	0240	
6306	0240	
6307	2207	FATNC2, 2007;7776;0000
6310	7770	
6311	0000	
6312	1774	FATNC3, 1774;2230;2427
6313	2230	
6314	2427	
6315	2016	FATNC4, 2016;7331;7272
6316	7331	
6317	7272	
6320	2034	FATNC5, 2004;1405;2216
6321	1415	
6322	2216	
6323	1750	FATNC6, 1750;0462;4562
6324	0462	
6325	4562	
6326	5754	FATNC7, 5764;4221;3433
6327	4221	
6328	3433	
6331	1750	FATNC8, 1766;3141;6672
6332	3141	
6333	6672	
6334	5775	FATNC9, 5775;2525;2337
6335	2525	
6336	2337	
6337	0000	FATNC, 0;0;0
6340	0000	
6341	0000	
6342	2016	FATNCH, 2016;2207;7325
6343	2207	
6344	7325	
6345	6034	FATNCJ, 6034;0000;0000
6346	0000	
6347	0000	

6350	1126	TAB00,	TAD	COLUMN	/GET WHERE WE ARE NOW.
6351	7241		CIA		
6352	1367		TAD	TABDES	/COMPARE AGAINST WHERE WE WANT TO BE
6353	7740		SMA	SZA CLA	/DO WE HAVE TO BACK UP?
6354	5350		JMP	TABOK	/NOPE.

/ELASIC.L8E

PAL8

PAGE 1-74

6355 1007 TAD 0215 /YEP. GIVE C.R.
6356 4433 JMS I PPUTCH /SEND IT
6357 4433 JMS I PPUTCH /ALSO SEND A NULL CHARACTER TO ALL T
TY TO RETURN.
6360 1126 TABOK, TAD COLUMN /GET WHERE WE ARE.
6361 7349 CMA /NEGATE-1
6362 1357 TAD TABDES /WHERE DO WE WANT TO BE?
6363 7752 SNA SPA CLA /?
6364 5770 JMP I TPRINT /HERE. EXIT.
6365 1051 TAD 0240 /FARTHER UP.
6366 5357 JMP TABOK-1 /GIVE SPACE AND LOOP AGAIN.

6367 0240 TABDES, /
6370 2237 TPRINT, PRINTC /NORMAL EXIT LOCATION.

PAGE

6400 0000 CHKFIT, 0
6401 1150 TAD 04
6402 4544 JMS I SPLEFT
6403 5500 JMP I CHKFIT
6404 4551 JMS I PLINFIX
6405 4537 JMS I PRESET /RESET ALL I/O DEVICES.
6406 4514 JMS I PPRINTXT
6407 3552 UGH1
6408 3754 DCA /RESET THIS FLAG NOW
6409 5512 JMP I .+1
6410 2510 NEWLIN /THIS MAY BE RIGHT.

6413 0000 RMLEFT, 0
6414 7132 CLL
6415 1413 TAD ARRLOC
6416 7430 SZL
6417 5223 JMP NORLFT
6420 7341 CIA CODELOC
6421 1434 TAD
6422 7622 SML CLA
6423 2213 NORLFT, ISZ RMLEFT
6424 5613 JMP I RMLEFT

6425 0000 ABS, 0
6426 3424 DCA ACS
6427 5625 JMP I ABS

6430 0000 STICKIT, 0
6431 3413 DCA I ARRLOC
6432 2113 ISZ ARRLOC
6433 5630 JMP I STICKIT

6434 0000 INT, 0
6435 4516 JMS I PFI
6436 7210 CLA
6437 4546 JMS I PANORM
6438 5634 JMP I INT

6441 0000 SXERR, 0
6442 7210 CLA
6443 3241 DCA SXERR
6444 4477 JMS I PERROR
6445 2331 TEXT 'SYNTAX'
6446 1624
6447 0130
6448 0000
6449 4031
6450 2440

/INCAE THIS IS JMS'D TO.

/AND REMAKE INTO AN "AND"

ATLINE, TEXT ' AT LINE '

6453 1411
6454 1506
6455 4200

6456 7570 07570, 7570
6457 1024 UPARROW, TAD ACS
6458 7730 SMA CLA
6459 1256 TAD 07570
6460 1325 TAD ACE
6461 7700 SMA CLA
6462 5447 JMP I PARGERR
6463 4506 JMS I PFIX
6464 5657 JMP I .+1
6465 4365 UPARR2

6470 4570 MOREDIM, MUSTRE /' ,'
6471 3763 3763
6472 7240 DIM, CLA CMA
6473 3134 DCA DIMFLAG
6474 4531 JMS I PEVAL
6475 4550 ISIT / (CR) OR '0'
6476 2000 2000
6477 5270 JMP MOREDIM
6478 5503 JMP I PEXECUTE/YES

6501 4404 DELETED, TEXT ' DELETED'
6502 3514
6503 3524
6504 3534
6505 3724

6506 1250 AMATCH, TAD WORD
6507 3164 DCA SNUMFLG
6508 1354 TAD SNUMFLG
6509 3457 DCA I FPTR

6512 2057 ISZ FPTR
6513 1060 TAD GPTR
6514 3056 DCA EPTR
6515 4566 ISIT /'REM'
6516 1762 1762
6517 5316 JMP I PSLOOP
6520 5/21 JMP I .+1
6521 3043 REMPACK

6522 3723 BREAK, 3723;2417;2056
6523 2417
6524 2056
6525 3722 READY, TEXT 10READY.001
6526 0521
6527 0431
6530 5537
6531 3700

CRLF=-1

6532 0230 IS016, 2
6533 4522 JMS I PNONBLNK
6534 1344 TAD 07726A
6535 7100 CLL
6536 1055 TAD 012
6537 7422 SNL
6540 7270 CLA
6541 7430 SZU
6542 2312 ISZ
6543 5732 JMP I
6544 7726 07706A, 7726 ISDIG
ISDIG

6545 1142 PZERDON,TAD PRTEMP

LSF=6661
LCF=6662
LLS=6666

6650	3334	INTER,	DCA	INTAC	/SAVE ALL IMPORTANT STUFF ON INTERUP
6651	7310		RAR		
6652	3335		DCA	INTL	
6653	6234		RIB		
6654	0374		AND	070	
6655	1375		TAD	06202	
6656	3371		DCA	INTCIF	/SAVE INSTRUCTION FIELD
6657	6234		RIB		
6658	0072		AND	07	
6659	7136		CLL	RTL	/SHIFT IT OVER
6660	7344		RAL		
6661	1215		TAD	062014	/AND THE INSTRUCTION FIELD
6662	3370		DCA	INTCDF	
6663	6231	06201A,	COF		/JUST IN CASE.
6664					
6665					
6666					
6667					
6668					
6669					
6670					
6671					
6672					
6673					
6674					
6675					
6676					
6677					
6678					
6679					
6680					
6681					
6682					
6683					
6684					
6685					
6686					
6687					
6688					
6689					
6690					
6691					
6692					
6693					
6694					
6695					
6696					
6697					
6698					
6699					
6700					
6701					
6702					
6703					
6704					
6705					
6706					
6707					
6708					
6709					
6710					
6711					
6712					
6713					
6714					
6715					
6716					
6717					
6718					
6719					
6720					
6721					
6722					
6723					
6724					
6725					
6726					
6727					
6728					
6729					
6730					
6731					
6732					
6733					
6734					
6735					
6736					
6737					
6738					
6739					
6740					

pinkie interrupt

/CHECK FOR SPECIAL INTERRUPT DEVICE.

/IS IT THE TELEPRINTER.

/NO

/YEP. CLEAN IT UP. *4*

/PRINTER?

/YEP.

/PUNCH?

.+3

INODUN

/READER?

/NOPE.

/4000 TO AC

/READ IN THE CHARACTER.

IFNZRO MACHINE<
JMS I SPECINT

TSF

JMP

TCF

JMP

LSF

JMP

LCF

JMP

PSF

JMP

PCF

JMP

RSF

JMP

CLA CLL CML RAR

RRR

DCA I PHRCHAR

